

GENIE EASY-UP
OPERATING INSTRUCTIONS (MANUAL UNIT)

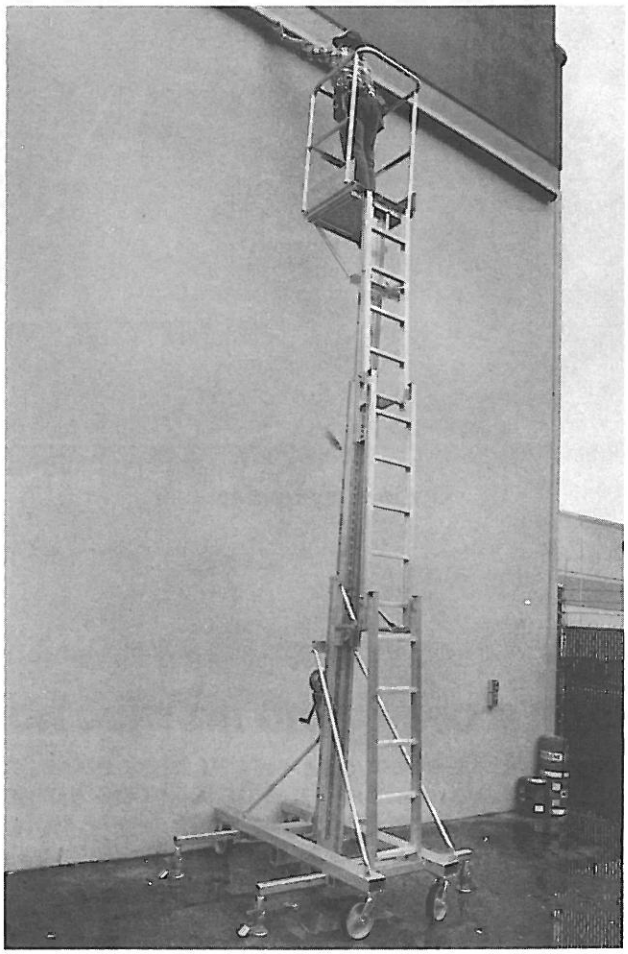

CAUTION

Understanding these Operating Instructions and Safety Rules is critical to the safe operation of the Genie Easy-Up. Please study this brochure carefully, and make sure that all personnel using the Easy-Up read and understand it completely, **before using** this equipment.

Genie

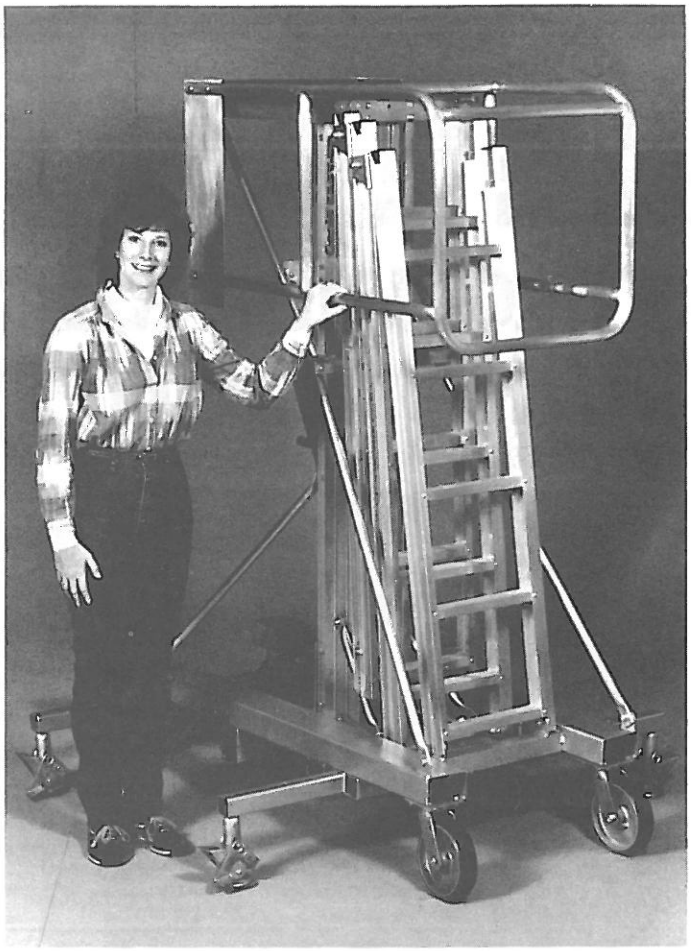


Genie Easy-Up (Manual)

SET UP & OPERATING INSTRUCTIONS

1. Read and understand these instructions before operating the Genie Easy-Up. Do not permit anyone to use the unit who does not understand the material in this document. A duplicate set of these instructions is contained in a water-tight plastic tube on the mast and should be kept there at all times for operator reference.
2. If there is anything you do not understand, or if you have questions regarding the operation of the Easy-Up, call 800/426-8089 or 206/881-1800 for instructions.
3. Never use an Easy-Up that is damaged or is not operating normally. Have the unit inspected by an qualified representative, or call the manufacturer at the above phone numbers.
4. See back of this document for safety rules.


SET UP

Before using the Easy-Up, install all four (4) outriggers and make sure that the base is level.

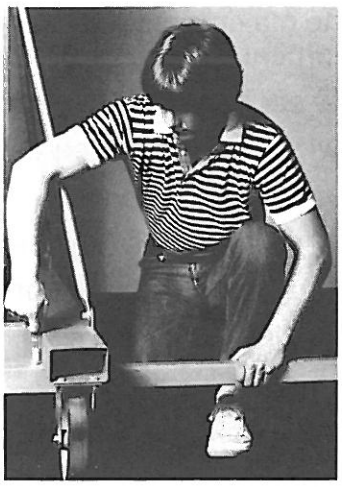

Insert an outrigger into each of the four (4) outrigger sockets in the Easy-Up base: lift the lock pin, slide the outrigger into the socket, release the lock pin and continue sliding the outrigger until the pin snaps into the hole in the outrigger tube.

1

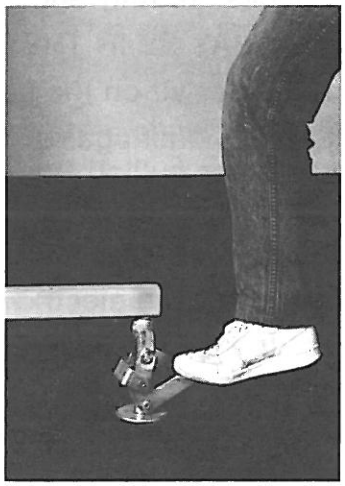

On units equipped with standard outriggers, activate all four (4) floor locks before using the Easy-Up. Check the leveling bubble to make sure that the base is level (bubble is centered).

2




On units equipped with optional pneumatic tires and outrigger leveling jacks, adjust the four (4) leveling jacks until the pads contact the ground. Observe the bubble level on the base and further adjust the jacks until the base is level.

NEVER USE AN EASY-UP THAT CANNOT BE LEVELED.


3

OPERATING

Swing the basket up to operating position (Photo A). Lock in place with the two (2) lock pins (Photo B).

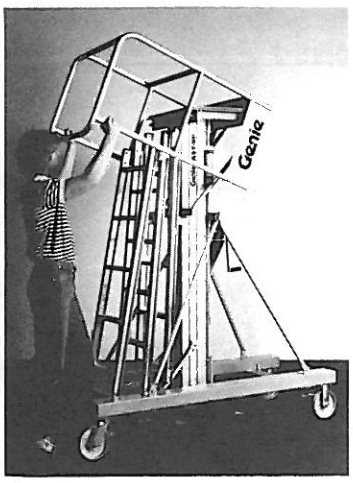

A

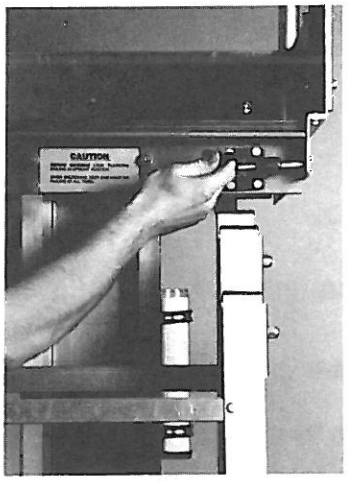

B

1

Elevate the basket to the desired heights using the winch.


NEVER ELEVATE WITH A PERSON IN THE BASKET. ALWAYS CHECK TO MAKE SURE THAT THE BASKET IS FIRMLY LOCKED IN PLACE BEFORE CLIMBING IN.



2

TRANSPORT

Remove outriggers to transport the unit through a standard 28 inch doorway.

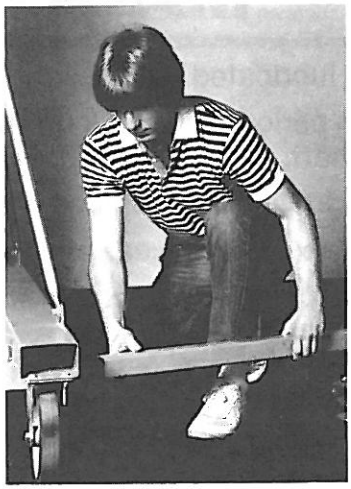

1

TRANSPORT (Cont.)



Transport the Easy-Up in an upright position with the basket in its lowered position.

2

MAST SEQUENCING

The mast sections should always operate smoothly. The sections should separate evenly while the unit is raising and combine evenly while the unit is lowering.

If this sequence of operation is not uniform and smooth, check for abnormal resistance in the system due to the following possible causes:

1. Cable has come off pulley
2. Faulty pulley bearing
3. Pulley is jammed or not turning properly
4. Defective roller
5. Dirt or foreign particle between mast sections or on rollers
6. Bent or dented mast section or ladder assembly

DO NOT continue to operate until proper sequence is obtained.

MAINTENANCE

1. Keep winch gears lubricated with a light grease. Do not lubricate brake disc.
2. In lowered position periodically back off the winch handle and put a heavy lubricant on winch pinion shaft.
3. Inspect cables for fraying and replace promptly when necessary.
4. Inspect pulleys for excessive wear and bearing damage.
5. Protect unit from exposure to rain and adverse weather conditions.

SAFETY RULES

1. Do not exceed the maximum load rating of 300 lbs (136 kg). This includes one person and all equipment carried in the basket.
2. Inspect the cable each time before using.
3. Do not operate with worn or frayed cable.
4. Avoid slacking of cable.
5. Replace cable at least every two years.
6. Use on a level surface, unless equipped with leveling jacks. Never adjust leveling jacks with a person in the basket.
7. Unit base must be level before using the Easy-Up (check leveling bubble to make sure that it is centered).
8. Do not operate Easy-Up on an elevated platform, scaffold, truck bed or extended surface or support.
9. Do not elevate the manual Easy-Up with a person in the basket.
10. Do not ascend the ladder unless outriggers are locked in their extended position.
11. Make sure basket locks are fully engaged before entering the basket.
12. ONLY ONE PERSON MAY BE IN THE BASKET.
13. Do not climb, stand on or sit on the basket railing.
14. Do not lean a separate ladder against the Easy-Up. Never apply a side load force to the unit by pushing or pulling from the basket or by hanging heavy wires or cables over the side.
15. Do not move the Easy-Up when the basket is elevated.
16. Do not operate near overhead electric lines and obstructions.
17. Do not stand under the loaded basket.

WARRANTY

GENIE PRODUCTS are warranted to be free from defects in material and workmanship under normal use for a period of twelve months from the date of purchase. In all cases, the seller must be given a reasonable opportunity to investigate and inspect any asserted defects; and the buyer shall, at the seller's option, return any alleged defective materials to the seller's plant or authorized service depot - at the buyer's expense. Seller's liability is limited to repair or replacement of material found to be defective, free of charge, F.O.B. plant or authorized service depot.

The manufacturer reserves the right to make changes in design or add any improvements on the basic unit or any accessories at any time without incurring any obligation to install same on Genie Products or accessories previously purchased.

Genie Industries

Home Office: 18340 NE 76th Street • P.O. Box 69, Redmond, WA U.S.A. 98073-0069 • (206) 881-1800 • Toll Free 800-426-8089 • TX 152351 • Fax (206) 885-4638
Canadian Office: 340 Brooksbank Avenue • P.O. Box 86754 • North Vancouver, B.C., Canada V7L4L3 • (604) 984-4242 • • Fax (604) 988-2662
European Office: Avelingenweg 6a • 4202 MN Gorinchem, Netherlands • 31 1830-34772 • TX 27250
United Kingdom Office: 17 Queen Street • Southwell, Nottinghamshire, England NG2 50AA • 44 0636-813943

PATENTED: U.S.: 4,390,080 · Canada: 1,167,781 · Europe: 0,070,312 · Australia: 8148082 · and Patents Pending

7006-1287

Copyright ©1987 by Genie Industries
Printed in U.S.A.