Quick Reference Guide

Genie S-40 • Genie S-45 • Genie S-60
Genie S-65 • Genie S-80 • Genie S-85

January 2017
Rev A


S-40 / S-45 from SN 20505, from S4016H-21933
S-60 / S-65 from SN 30300, from 16D-397,from S6016H-35001, from S6016M-101, from S6016N-31261
S-80 / S-85 from SN 12264, from S8015D-103, from S8016H-13258

⚠ This Quick Reference Guide is intended for operators who are properly trained to safely operate the machine.


Getting Started:

Step 1: ⚠ Read the Operators Manual and Perform the pre-operation inspections and tests.

Step 2
Turn to platform position.



Step 3
Pull out Red Emergency Stop buttons.




Step 4
Start Engine.




Controls and Indicators:

Drive Enable




Light on indicates that the boom has moved just past either non-steer wheel and the drive function has been interrupted. To drive, hold the drive enable switch to either side and slowly move the drive control handle off center. Use the color-coded direction arrows on the platform controls and the drive chassis to identify the direction the machine will travel.

Engine idle select

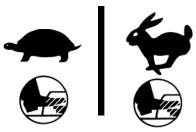

Turtle symbol: Foot switch activated low idle.
Rabbit symbol: Foot switch activated high idle.

Platform Overload



Light flashing indicates the platform is overloaded. The engine will stop and no functions will operate. Remove weight from the platform until the light goes off and then restart the engine.

Drive Select




Machine on incline symbol: Low range operation for inclines.
Machine on level surface symbol: High range operation for maximum drive speed.




M**achine Not Level Light Flashing**: If the tilt alarm sounds when the platform is raised, the Not Level indicator light will come on and the drive function in one or both directions will not operate.
Follow the correct boom lowering sequence below based on the platform position. Do not rotate the boom while lowering.

Uphill Position

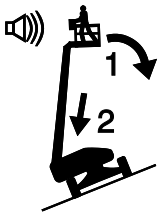

Downhill Position

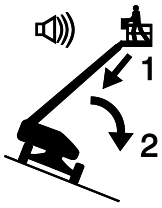

S-60, S-65, S-80, S-85 Models Only:
Machine Malfunction Indicator Light



Light on indicates all functions have stopped. Push in and then pull out the red Emergency Stop button.
Lower and retract the boom. Tag the machine and remove from service. Functions will not operate.