Genie®
A TEREX BRAND

Service Manual

Serial Number Range

Z-51/30J

from Z513005-101
to Z513014B-1200

Part No. 110284
Rev B
September 2015

Introduction

Important

Read, understand and obey the safety rules and operating instructions in the appropriate Operator's Manual on your machine before attempting any maintenance or repair procedure.

This manual provides detailed scheduled maintenance information for the machine owner and user. It also provides troubleshooting fault codes and repair procedures for qualified service professionals.

Basic mechanical, hydraulic and electrical skills are required to perform most procedures. However, several procedures require specialized skills, tools, lifting equipment and a suitable workshop. In these instances, we strongly recommend that maintenance and repair be performed at an authorized Genie dealer service center.

Compliance

Machine Classification
Group B/Type 3 as defined by ISO 16368

Machine Design Life
Unrestricted with proper opeation, inspection and scheduled maintenance.

Technical Publications

Genie has endeavored to deliver the highest degree of accuracy possible. However, continuous improvement of our products is a Genie policy. Therefore, product specifications are subject to change without notice.

Readers are encouraged to notify Genie of errors and send in suggestions for improvement. All communications will be carefully considered for future printings of this and all other manuals.

Contact Us:

http://www.genielift.com
e-mail: awp.techsup@terex.com

Find a Manual for this Model

Go to http://www.genielift.com

Use the links to locate Operstor's, Parts, Service or Maintenance Manuals.

Copyright © 2011 by Terex Corporation

110284 Rev B September 2015
First Edition, Second Printing

Genie is a registered trademark of Terex South Dakota, Inc. in the USA and many other countries.

"Z" is a trademark of Terex South Dakota, Inc.

Revision History

Revision	Date	Section	Procedure / Schematic Page / Description
B	9/2015		Added ending serial break to front cover.

REFERENCE EXAMPLES:

Section - Specifications
Section - Maintenance, B3
Section - Repair Procedure, 4-2
Section - Diagnostics, All charts
Section - Schematics, Legends and Schematics

Electronic Version

Click on any procedure or page number highlighted in blue to view the update.

REVISION HISTORY, CONTINUED

Revision	Date	Section	Procedure / Schematic Page / Description

REFERENCE EXAMPLES:

Section - Specifications
Section - Maintenance, B-3
Section - Repair Procedure, 4-2
Section - Diagnostics, All charts
Section - Schematics, Legends and Schematics

Electronic Version

Click on any procedure or page number highlighted in blue to view the update.

Serial Number Legend

Genie

Model: Z-51/30
Serial number: Z513005-12345
Model year: 2005 **Manufacture date:** 04/12/05
Electrical schematic number: E0384
Machine unladen weight: 15,882 lbs / 7,204 kg

Rated work load (including occupants): 500 lb / 227 kg
Maximum number of platfrm occupants: 2
Maximum allowable side force : 90 lb / 400 N
Maximum allowable inclination of the chassis: 4.5°
Maximum wind speed : 28 mph/ 12.5 m/s
Maximum platform height : 51 ft 3 in/ 15.6 m
Maximum platform reach : 30 ft 4 in/ 9.2 m
Gradeability: 45%
Nominal Power: 48 hp / 61 kW
Country of manufacture: USA
This machine complies with:
EN 280:2001


Genie Industries
18340 NE 76th Street
Redmond, WA 98052
USA

CE 05

PN - 77055

Z5130 05 - 12345

Model
Model year
Sequence number

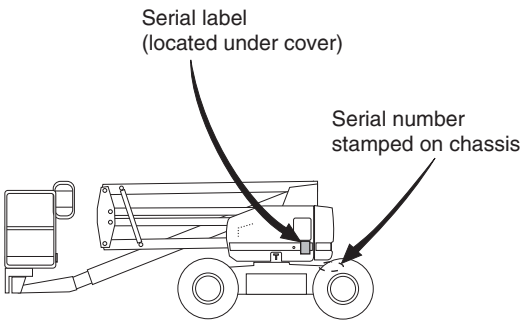

Safety Rules



Danger

Failure to obey the instructions and safety rules in this manual, and the *Genie Z-51/30J Operator's Manual* will result in death or serious injury.

Many of the hazards identified in the operator's manual are also safety hazards when maintenance and repair procedures are performed.

Do Not Perform Maintenance Unless:

- ☑ You are trained and qualified to perform maintenance on this machine.
- ☑ You read, understand and obey:
  - manufacturer's instructions and safety rules
  - employer's safety rules and worksite regulations
  - applicable governmental regulations
- ☑ You have the appropriate tools, lifting equipment and a suitable workshop.

SAFETY RULES

Personal Safety

Any person working on or around a machine must be aware of all known safety hazards. Personal safety and the continued safe operation of the machine should be your top priority.



Read each procedure thoroughly. This manual and the decals on the machine use signal words to identify the following:



Safety alert symbol—used to alert personnel to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

⚠DANGER Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

⚠WARNING Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

⚠CAUTION Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

NOTICE Indicates a potentially hazardous situation which, if not avoided, may result in property damage.



Be sure to wear protective eye wear and other protective clothing if the situation warrants it.



Be aware of potential crushing hazards such as moving parts, free swinging or unsecured components when lifting or placing loads. Always wear approved steel-toed shoes.

Workplace Safety



Be sure to keep sparks, flames and lighted tobacco away from flammable and combustible materials like battery gases and engine fuels. Always have an approved fire extinguisher within easy reach.



Be sure that all tools and working areas are properly maintained and ready for use. Keep work surfaces clean and free of debris that could get into machine components and cause damage.



Be sure any forklift, overhead crane or other lifting or supporting device is fully capable of supporting and stabilizing the weight to be lifted. Use only chains or straps that are in good condition and of ample capacity.



Be sure that fasteners intended for one time use (i.e., cotter pins and self-locking nuts) are not reused. These components may fail if they are used a second time.



Be sure to properly dispose of old oil or other fluids. Use an approved container. Please be environmentally safe.



Be sure that your workshop or work area is properly ventilated and well lit.

Table of Contents

Introduction

Important Information ..... *ii*
Find a Manual for this Model ..... *ii*
Serial Number Legend ..... *v*

Section 1 **Safety Rules**

General Safety Rules ..... *vi*

Section 2 **Specifications**

Machine Specifications ..... 2 - 1
Performance Specifications ..... 2 - 1
Hydraulic Specifications ..... 2 - 2
Manifold Component Specifications ..... 2 - 3
Deutz F3L-2011 / D2011 L03i Engine Specifications ..... 2 - 4
Machine Torque Specifications ..... 2 - 5
Hydraulic Hose and Fitting Torque Specifications ..... 2 - 6
SAE and Metric Fastener Torque Chart ..... 2 - 7

TABLE OF CONTENTS

Section 3 Scheduled Maintenance Procedures

Introduction ..... 3 - 1

Pre-Delivery Preparation ..... 3 - 3

Maintenance Inspection Report ..... 3 - 5

Checklist A Procedures

A-1 Perform Pre-operation Inspection ..... 3 - 7

A-2 Perform Function Tests ..... 3 - 7

A-3 Perform Engine Maintenance ..... 3 - 8

A-4 Check the High Pressure Hydraulic Filter Condition Indicator ..... 3 - 8

A-5 Test the Oscillate Axle ..... 3 - 9

A-6 Perform 30 Day Service ..... 3 - 9

A-7 Inspect the Fuel Filter/Water Separator ..... 3 - 10

A-8 Grease the Turntable Rotation Bearing and Rotate Gear ..... 3 - 11

Checklist B Procedures

B-1 Inspect the Battery ..... 3 - 12

B-2 Inspect the Electrical Wiring ..... 3 - 12

B-3 Test the Key Switch ..... 3 - 13

B-4 Check the Exhaust System ..... 3 - 14

B-5 Check the Oil Cooler and Cooling Fins ..... 3 - 14

B-6 Check the Tires and Wheels (including lug nut torque) ..... 3 - 15

B-7 Confirm the Proper Brake Configuration ..... 3 - 16

B-8 Check the Oil Level in the Drive Hubs ..... 3 - 16

B-9 Check and Adjust the Engine RPM ..... 3 - 17

B-10 Test the Ground Control Override ..... 3 - 18

B-11 Check the Directional Valve Linkage ..... 3 - 18

B-12 Test the Platform Self-leveling ..... 3 - 19

TABLE OF CONTENTS

Section 3 **Scheduled Maintenance Procedures**, continued

B-13 Test the Engine Idle Select ..... 3 - 19
B-14 Test the Drive Brakes ..... 3 - 20
B-15 Test the Drive Speed - Stowed Position ..... 3 - 20
B-16 Test the Drive Speed - Raised or Extended Position ..... 3 - 21
B-17 Test the Alarm Package (if equipped) ..... 3 - 22
B-18 Perform Hydraulic Oil Analysis ..... 3 - 23
B-19 Perform Engine Maintenance ..... 3 - 23

Checklist C Procedures

C-1 Perform Engine Maintenance ..... 3 - 24
C-2 Grease the Platform Overload Mechanism (if equipped) ..... 3 - 24
C-3 Test the Platform Overload Mechanism (if equipped) ..... 3 - 25

Checklist D Procedures

D-1 Check the Boom Wear Pads ..... 3 - 27
D-2 Check the Free-wheel Configuration ..... 3 - 27
D-3 Replace the Drive Hub Oil ..... 3 - 29
D-4 Replace the Hydraulic Filters ..... 3 - 29
D-5 Perform Engine Maintenance ..... 3 - 31
D-6 Calibrate the Platform Overload System (if equipped) ..... 3 - 31
D-7 Check the Turntable Rotation Bearing Bolts ..... 3 - 33
D-8 Inspect for Turntable Bearing Wear ..... 3 - 34

Checklist E Procedures

E-1 Test or Replace the Hydraulic Oil ..... 3 - 36
E-2 Perform Engine Maintenance ..... 3 - 38
E-3 Perform Engine Maintenance ..... 3 - 38

TABLE OF CONTENTS

Section 4 **Repair Procedures**

Introduction ..... 4 - 1

Platform Controls

1-1 ALC-500 Circuit Board ..... 4 - 2

1-2 Joysticks ..... 4 - 3

Platform Components

2-1 Platform Leveling Slave Cylinder ..... 4 - 7

2-2 Platform Rotator ..... 4 - 8

Jib Boom Components

3-1 Jib Boom ..... 4 - 10

3-2 Jib Boom Lift Cylinder ..... 4 - 11

Primary Boom Components

4-1 Cable Track ..... 4 - 13

4-2 Primary Boom ..... 4 - 15

4-3 Primary Boom Lift Cylinder ..... 4 - 18

4-4 Primary Boom Extension Cylinder ..... 4 - 19

4-5 Platform Leveling Master Cylinder ..... 4 - 20

Secondary Boom Components

5-1 Secondary Boom ..... 4 - 23

5-2 Secondary Boom Lift Cylinders ..... 4 - 28

Engines

6-1 RPM Adjustment ..... 4 - 29

6-2 Flex Plate ..... 4 - 29

Hydraulic Pumps

7-1 Lift/Steer Pump ..... 4 - 31

7-2 Drive Pump ..... 4 - 32

TABLE OF CONTENTS

Section 4 **Repair Procedures,** continued

Manifolds

8-1 Function Manifold Components ..... 4 - 34
8-2 Valve Adjustments - Function Manifold ..... 4 - 38
8-3 Jib Boom / Platform Rotate Manifold Components ..... 4 - 39
8-4 Turntable Rotation Manifold Components ..... 4 - 40
8-5 Directional Valve Manifold Components ..... 4 - 41
8-6 Traction Manifold Components ..... 4 - 44
8-7 Valve Adjustments, Traction Manifold ..... 4 - 46
8-8 Valve Coils ..... 4 - 46

Turntable Rotation Components

9-1 Turntable Rotation Assembly ..... 4 - 48

Axle Components

10-1 Oscillate Lock-out Cylinders ..... 4 - 49

Section 5 **Fault Codes**

Introduction ..... 5 - 1
Fault Codes - Control System ..... 5 - 2

Section 6 **Schematics**

Introduction ..... 6 - 1
Electrical Symbols Legend ..... 6 - 2
Hydraulic Symbols Legend ..... 6 - 3
Electrical Schematic ..... 6 - 5
Ground Control Box Terminal Strip Wiring Diagram ..... 6 - 7
Ground Control Box Switch Panel Wiring Diagram ..... 6 - 8
Platform Control Box Terminal Strip Wiring Diagram ..... 6 - 9
Platform Control Box Switch Panel Wiring Diagram ..... 6 - 10
Hydraulic Schematic ..... 6 - 11

Specifications

Machine Specifications

Tires and wheels	
Tire size	355/55 D625
Tire ply rating	14
Tire weight, new foam-filled (minimum) (Rough terrain)	390 lbs 177 kg
Overall tire diameter	36.9 in 93.7 cm
Wheel diameter	24.5 inches 62.2 cm
Wheel width	11.75 inches 29.8 cm
Wheel lugs	9 @ 5/8 -18
Lug nut torque (lubricated) (dry)	 94 ft-lbs 127.4 Nm 125 ft-lbs 169.5 Nm

Fluid capacities	
Fuel tank	17 gallons 64.4 liters
Hydraulic tank	24 gallons 91 liters
Hydraulic system (including tank)	30 gallons 113.6 liters
Drive hubs - Steer end	17 fl oz 0.5 liters
Drive hubs with brake, 57:1, Non-steer end	24 fl oz 0.7 liters

Performance Specifications

Drive speed, maximum	
Stowed position	5 mph 8 km/h 40 ft/5.5 sec 12.2 m/5.5 sec
Raised or extended position	0.6 mph 1 km/h 40 ft/45 sec 12.2 m/45 sec

Braking distance, maximum	
High range on paved surface	3 to 6 ft 0.9 to 1.8 m

Gradeability	See Operator's Manual

Boom function speeds, maximum from platform controls	
Jib boom up	48 to 52 seconds
Jib boom down	28 to 32 seconds
Primary boom up	36 to 40 seconds
Primary boom down	36 to 40 seconds
Secondary boom up	26 to 30 seconds
Secondary boom down	26 to 30 seconds
Primary boom extend	20 to 24 seconds
Primary boom retract	20 to 24 seconds
Turntable rotate, 355° primary boom retracted	82 to 88 seconds

For operational specifications, refer to the Operator's Manual.

SPECIFICATIONS

Hydraulic Specifications

Hydraulic Oil Specifications	
Hydraulic oil type	Chevron Rykon MV equivalent
ISO viscosity grade	Multi-viscosity
Viscosity index	200
Cleanliness level, minimum	15/13
Water content, maximum	200 ppm

Chevron Rykon MV oil is fully compatible and mixable with Shell Donax TG (Dexron III) oils.
Genie specifications require hydraulic oils which are designed to give maximum protection to hydraulic systems, have the ability to perform over a wide temperature range, and have a minimum viscosity index greater than 140. They should provide excellent antiwear, oxidation, corrosion inhibition, seal conditioning, and foam and aeration suppression properties.

Optional fluids	
Biodegradable	Petro Canada Environ MV46 Statoil Hydra Way Bio Pa 32 BP Biohyd SE-S
Fire resistant	UCON Hydrolube HP-5046 Quintolubric 822
Mineral based	Shell Tellus T32 Shell Tellus T46 Chevron Aviation A

Note: Use Chevron Aviation A hydraulic oil when in ambient temperatures consistently below 0°F / -18°C.

Note: Use Shell Tellus T46 hydraulic oil when oil temperatures consistently exceed 205°F / 96°C.

Note: Genie specifications require additional equipment and special installation instructions for the approved optional fluids. Consult Genie Product Support before use.

Drive pump	
Type:	bi-directional, variable displacement piston pump
Flow rate @ 2500 rpm	32 gpm 121 L/min
Drive pressure, maximum	3500 psi 241 bar

Charge pump	
Type:	gear
Displacement	0.84 cu in 13.76 cc
Flow rate @ 2500 rpm	9.1 gpm 34.4 L/min
Charge pressure @ 2500 rpm	315 psi 21.7 bar

Function pump	
Type:	gear
Displacement	0.67 cu in 11 cc
Flow rate @ 2500 rpm	7.25 gpm 27.4 L/min

Auxiliary pump	
Type:	gear, fixed displacement
Displacement per revolution	0.067 cu in 1.1 cc
Auxiliary pump relief pressure	3200 psi 220.6 bar

SPECIFICATIONS

Function manifold	
System relief valve pressure	3200 psi 220.6 bar
Secondary boom down relief valve pressure	2100 psi 145 bar
Platform level relief valve pressure	2500 psi 172 bar
Steer flow regulator	1.5 gpm 5.7 L/min
Boom extend flow regulator	2 gpm 7.6 L/min
Jib boom / platform rotate flow regulator	0.4 gpm 1.5 L/min
Drive manifold	
Hot oil relief pressure	250 psi 17.2 bar
Steer end drive motors	
Displacement per revolution	1.53 cu in 25 cc
Non-steer end drive motors	
Displacement per revolution, variable (2 speed motor)	0.01 to 1.83 cu in 1.61 to 30 cc
Hydraulic filters	
High pressure filter	Beta $_3 \geq 200$
High pressure filter bypass pressure	100 psi 6.89 bar
Medium pressure filter	Beta $_3 \geq 200$
Medium pressure filter bypass pressure	50 psi 3.4 bar
Hydraulic return filter	10 micron with 25 psi / 1.7 bar bypass

Manifold Component Specifications

Plug torque	
SAE No. 2	36 in-lbs / 4 Nm
SAE No. 4	10 ft-lbs / 13 Nm
SAE No. 6	14 ft-lbs / 19 Nm
SAE No. 8	38 ft-lbs / 51 Nm
SAE No. 10	41 ft-lbs / 55 Nm
SAE No. 12	56 ft-lbs / 76 Nm

Valve coil resistance specifications	
Proportional directional solenoid valve, 10V DC (schematic items BP, BU and BY)	6 to 8Ω
3 position 4 way directional valve, 10V DC (schematic items BF, BM and CG)	6 to 8Ω
2 position 3 way solenoid valve, 10V DC (schematic items CA, CC, G, AF and AG)	6 to 8Ω

SPECIFICATIONS

Deutz F3L 2011 Engine
Deutz D2011L03i

Displacement	142 cu in 2.33 liters
Number of cylinders	3
Bore and stroke	3.7 x 4.4 inches 94 x 112 mm
Horsepower	48 @ 2800 rpm 36 kW @ 2800 rpm
Firing order	1 - 2 - 3
Low idle	1500 rpm 313 Hz
High idle	2500 rpm 522 Hz
Compression ratio	19:1
Compression pressure	362 to 435 psi 25 to 30 bar
Governor	centrifugal mechanical
Valve clearance, cold	
Intake	0.012 in 0.3 mm
Exhaust	0.020 in 0.5 mm

Lubrication system	
Oil pressure	20 to 44 psi 1.4 to 3 bar
Oil capacity (including filter) **(Deutz F3L 2011 Engine)**	8.5 quarts 8 liters
Oil capacity (including filter) **(Deutz D2011L03i Engine)**	9.5 quarts 9 liters
Oil viscosity requirements	
-22° F to 86° F/ -30° C to 30° C	5W-30 (synthetic)
-4° F to 90° F / -20° C to 32° C	10W-40
Above 23° F / -5° C	20W-50

Units ship with 15W-40.
Extreme operating temperatures may require the use of alternative engine oils. For oil requirements, refer to the Engine Operator Handbook on your machine.

Oil temperature switch	
Temperature switch point	300°F 149°C
Oil pressure switch	
Oil pressure switch point **(Deutz F3L 2011 Engine)**	7 psi 0.5 bar
Oil pressure switch point **(Deutz D2011L03i Engine)**	22 psi 1.5 bar

Fuel injection system	
Injection pump make	Bosch
Injection pump pressure, maximum	15000 psi 1034 bar
Injector opening pressure	3046 psi 210 bar

Fuel requirement
For fuel requirements, refer to the engine Operator's Manual on your machine.

Starter motor	
Current draw, no load	90A
Brush length, new	0.72 in 18.5 mm
Brush length, minimum	0.27 in 7 mm

Battery	
Type	12V DC, Group 34/78
Quantity	1
Cold cranking ampere	900A
Reserve capacity @ 25A rate	200 minutes
Alternator output	60A @ 14V DC
Fan belt deflection	3/8 to 1/2 inch 9 to 12 mm

Machine Torque Specifications

Platform rotator	
3/4 -10 center bolt, GR 8	380 ft-lbs 515 Nm
3/8 -16 bolts, GR 8	44 ft-lbs 60 Nm

Turntable rotate assembly	
Rotate bearing mounting bolts, lubricated	180 ft-lbs 244 Nm
Drive motor/brake mounting bolts, dry	110 ft-lbs 149 Nm
Drive motor/brake mounting bolts, lubricated	80 ft-lbs 108 Nm

Drive motor and hubs	
Drive hub mounting bolts, lubricated	180 ft-lbs 244 Nm
Drive motor mounting bolts, lubricated	55 ft-lbs 75 Nm

SPECIFICATIONS

Hydraulic Hose and Fitting Torque Specifications

Your machine is equipped with Parker Seal-Lok® fittings and hose ends. Genie specifications require that fittings and hose ends be torqued to specification when they are removed and installed or when new hoses or fittings are installed.

SAE O-ring Boss Port
(tube fitting - installed into Aluminum)

SAE Dash size	Torque
-4	11 ft-lbs / 14.9 Nm
-6	23 ft-lbs / 31.2 Nm
-8	40 ft-lbs / 54.2 Nm
-10	69 ft-lbs / 93.6 Nm
-12	93 ft-lbs / 126.1 Nm
-16	139 ft-lbs / 188.5 Nm
-20	172 ft-lbs / 233.2 Nm
-24	208 ft-lbs / 282 Nm

Seal-Lok® fittings

1 Replace the O-ring. The O-ring must be replaced anytime the seal has been broken. The O-ring cannot be re-used if the fitting or hose end has been tightened beyond finger tight.

NOTICE The O-rings used in the Parker Seal Lok® fittings and hose ends are custom-size O-rings. They are not standard SAE size O-rings. They are available in the O-ring field service kit (Genie part number 49612).

2 Lubricate the O-ring before installation.

3 Be sure that the face seal O-ring is seated and retained properly.

4 Position the tube and nut squarely on the face seal end of the fitting and tighten the nut finger tight.

5 Tighten the nut or fitting to the appropriate torque per given size as shown in the table.

6 Operate all machine functions and inspect the hoses and fittings and related components to confirm that there are no leaks.

SAE O-ring Boss Port
(tube fitting - installed into Steel)

SAE Dash size	Torque
-4	16 ft-lbs / 21.7 Nm
-6	35 ft-lbs / 47.5 Nm
-8	60 ft-lbs / 81.3 Nm
-10	105 ft-lbs / 142.4 Nm
-12	140 ft-lbs / 190 Nm
-16	210 ft-lbs / 284.7 Nm
-20	260 ft-lbs / 352.5 Nm
-24	315 ft-lbs / 427.1 Nm

Seal-Lok® Fittings
(hose end)

SAE Dash size	Torque
-4	18 ft-lbs / 25 Nm
-6	30 ft-lbs / 40 Nm
-8	40 ft-lbs / 55 Nm
-10	60 ft-lbs / 80 Nm
-12	85 ft-lbs / 115 Nm
-16	110 ft-lbs / 150 Nm
-20	140 ft-lbs / 190 Nm
-24	180 ft-lbs / 245 Nm

SPECIFICATIONS

SAE FASTENER TORQUE CHART


• This chart is to be used as a guide only unless noted elsewhere in this manual •

SIZE	THREAD	Grade 5				Grade 8				A574 High Strength Black Oxide Bolts	
		LUBED		DRY		LUBED		DRY		LUBED	
		in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm
1/4	20	80	9	100	11.3	110	12.4	140	15.8	130	14.7
	28	90	10.1	120	13.5	120	13.5	160	18	140	15.8
		LUBED		DRY		LUBED		DRY		LUBED	
		ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm
5/16	18	13	17.6	17	23	18	24	25	33.9	21	28.4
	24	14	19	19	25.7	20	27.1	27	36.6	24	32.5
3/8	16	23	31.2	31	42	33	44.7	44	59.6	38	51.5
	24	26	35.2	35	47.4	37	50.1	49	66.4	43	58.3
7/16	14	37	50.1	49	66.4	50	67.8	70	94.7	61	82.7
	20	41	55.5	55	74.5	60	81.3	80	108.4	68	92.1
1/2	13	57	77.3	75	101.6	80	108.4	110	149	93	126
	20	64	86.7	85	115	90	122	120	162	105	142
9/16	12	80	108.4	110	149	120	162	150	203	130	176
	18	90	122	120	162	130	176	170	230	140	189
5/8	11	110	149	150	203	160	217	210	284	180	244
	18	130	176	170	230	180	244	240	325	200	271
3/4	10	200	271	270	366	280	379	380	515	320	433
	16	220	298	300	406	310	420	420	569	350	474
7/8	9	320	433	430	583	450	610	610	827	510	691
	14	350	474	470	637	500	678	670	908	560	759
1	8	480	650	640	867	680	922	910	1233	770	1044
	12	530	718	710	962	750	1016	990	1342	840	1139
1 1/8	7	590	800	790	1071	970	1315	1290	1749	1090	1477
	12	670	908	890	1206	1080	1464	1440	1952	1220	1654
1 1/4	7	840	1138	1120	1518	1360	1844	1820	2467	1530	2074
	12	930	1260	1240	1681	1510	2047	2010	2725	1700	2304
1 1/2	6	1460	1979	1950	2643	2370	3213	3160	4284	2670	3620
	12	1640	2223	2190	2969	2670	3620	3560	4826	3000	4067

METRIC FASTENER TORQUE CHART

• This chart is to be used as a guide only unless noted elsewhere in this manual •

Size (mm)	Class 4.6				Class 8.8				Class 10.9				Class 12.9			
	LUBED		DRY		LUBED		DRY		LUBED		DRY		LUBED		DRY	
	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm
5	16	1.8	21	2.4	41	4.63	54	6.18	58	6.63	78	8.84	68	7.75	91	10.3
6	19	3.05	36	4.07	69	7.87	93	10.5	100	11.3	132	15	116	13.2	155	17.6
7	45	5.12	60	6.83	116	13.2	155	17.6	167	18.9	223	25.2	1.95	22.1	260	29.4
	LUBED		DRY		LUBED		DRY		LUBED		DRY		LUBED		DRY	
	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm
8	5.4	7.41	7.2	9.88	14	19.1	18.8	25.5	20.1	27.3	26.9	36.5	23.6	32	31.4	42.6
10	10.8	14.7	14.4	19.6	27.9	37.8	37.2	50.5	39.9	54.1	53.2	72.2	46.7	63.3	62.3	84.4
12	18.9	25.6	25.1	34.1	48.6	66	64.9	88	69.7	94.5	92.2	125	81	110	108	147
14	30.1	40.8	40	54.3	77.4	105	103	140	110	150	147	200	129	175	172	234
16	46.9	63.6	62.5	84.8	125	170	166	226	173	235	230	313	202	274	269	365
18	64.5	87.5	86.2	117	171	233	229	311	238	323	317	430	278	377	371	503
20	91	124	121	165	243	330	325	441	337	458	450	610	394	535	525	713
22	124	169	166	225	331	450	442	600	458	622	612	830	536	727	715	970
24	157	214	210	285	420	570	562	762	583	791	778	1055	682	925	909	1233

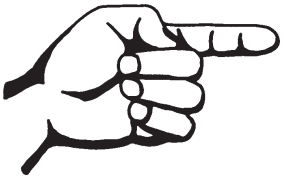

This page intentionally left blank.

Scheduled Maintenance Procedures



Observe and Obey:

- ☑ Maintenance inspections shall be completed by a person trained and qualified on the maintenance of this machine.
- ☑ Scheduled maintenance inspections shall be completed daily, quarterly, six months, annually and every 2 years as specified on the *Maintenance Inspection Report.*

⚠WARNING Failure to perform each procedure as presented and scheduled may cause death, serious injury or substantial damage.

- ☑ Immediately tag and remove from service a damaged or malfunctioning machine.
- ☑ Repair any machine damage or malfunction before operating machine.
- ☑ Keep records on all inspections for three years.
- ☑ Unless otherwise specified, perform each maintenance procedure with the machine in the following configuration:
  - Machine parked on a firm, level surface
  - Boom in stowed position
  - Turntable rotated with the boom between the non-steer wheels
  - Turntable secured with the turntable rotation lock
  - Key switch in the off position with the key removed
  - Wheels chocked
  - All external AC power disconnected from the machine

About This Section

This section contains detailed procedures for each scheduled maintenance inspection.

Each procedure includes a description, safety information and step-by-step instructions.

Symbols Legend



Safety alert symbol—used to alert personnel to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

⚠DANGER Indicates imminently hazardous situation which, if not avoided, will result in death or serious injury.

⚠WARNING Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

⚠CAUTION Indicates a potentially hazardous situation which, if not avoided, may cause minor or moderate injury.

NOTICE Indicates a potentially hazardous situation which, if not avoided, may result in property damage.

⊙ Indicates that a specific result is expected after performing a series of steps.

⊠ Indicates that an incorrect result has occurred after performing a series of steps.

SCHEDULED MAINTENANCE PROCEDURES

Maintenance Symbols Legend

Note: The following symbols have been used in this manual to help communicate the intent of the instructions. When one or more of the symbols appear at the beginning of a maintenance procedure, it conveys the meaning below.



Indicates that tools will be required to perform this procedure.



Indicates that new parts will be required to perform this procedure.



Indicates that a cold engine will be required to perform this procedure.



Indicates that a warm engine will be required to perform this procedure.



Indicates that dealer service is required to perform this procedure.

Pre-delivery Preparation Report

The pre-delivery preparation report contains checklists for each type of scheduled inspection.

Make copies for each inspection. Store completed forms as required.

Maintenance Schedule

The *Scheduled Maintenance Procedures Section* and the *Maintenance Inspection Report* have been divided into subsections. Use the following chart to determine which group(s) of procedures are required to perform a scheduled inspection.

Inspection	Table or Checklist
Daily or every 8 hours	A
Quarterly or every 250 hours	A + B
Six months or every 500 hours	A + B + C
Annual or every 1000 hours	A + B + C + D
Two years or every 2000 hours	A + B + C + D + E

Maintenance Inspection Report

The maintenance inspection report contains checklists for each type of scheduled inspection.

Make copies of the *Maintenance Inspection Report* to use for each inspection. Maitain completed forms for a minimum of 4 years or in compliance with your employer, jobsite and governmental regulations and requirements.

Pre-Delivery Preparation

Fundamentals

It is the responsibility of the dealer to perform the Pre-delivery Preparation.

The Pre-delivery Preparation is performed prior to each delivery. The inspection is designed to discover if anything is apparently wrong with a machine before it is put into service.

A damaged or modified machine must never be used. If damage or any variation from factory delivered condition is discovered, the machine must be tagged and removed from service.

Repairs to the machine may only be made by a qualified service technician, according to the manufacturer's specifications.

Scheduled maintenance inspections shall be performed by qualified service technicians, according to the manufacturer's specifications and the requirements listed in the responsibilities manual.

Instructions

Make copies of this form to use for each Pre-Delivery Preparation.

Use the operator's manual on your machine.

The Pre-delivery Preparation consists of completing the Pre-operation Inspection, the Maintenance items and the Function Tests.

Use this form to record the results. Place a check in the appropriate box after each part is completed. Follow the instructions in the operator's manual.

If any inspection receives an N, remove the machine from service, repair and re-inspect it. After repair, place a check in the R box.

Legend

Y = yes, completed
N = no, unable to complete
R = repaired

Comments

Pre-Delivery Preparation	Y	N	R
Pre-operation inspection completed			
Maintenance items completed			
Function tests completed			

Model

Serial number

Date

Machine owner

Inspected by (print)

Inspector signature

Inspector title


Inspector company

Genie®
A TEREX BRAND

Terex South Dakota, Inc USA
500 Oak Wood Road
PO Box 1150
Watertown, SD 57201-6150
(605) 882-4000

Genie UK
The Maltings, Wharf Road
Grantham, Lincolnshire
NG31- 6BH England
(44) 1476-584333

Copyright © 2011 Terex Corporation. Genie® is a registered trademark of Terex South Dakota, Inc. Rev D

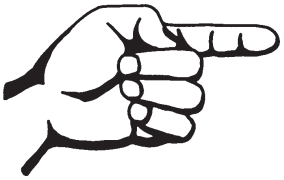

This page intentionally left blank.

Maintenance Inspection Report

Model

Serial number

Date

Hour meter

Machine owner

Inspected by (print)

Inspector signature

Inspector title

Inspector company

Instructions

- Make copies of both pages to use for each inspection.
- Select the appropriate checklist(s) for the type of inspection to be performed.

☐	**Daily or 8 hour Inspection: A**
☐	**Quarterly or 250 hour Inspection: A+B**
☐	**Six Month or 500 hour Inspection: A+B+C**
☐	**Annual or 1000 hours Inspection: A+B+C+D**
☐	**2 Year or 2000 hour Inspection: A+B+C+D+E**

- Place a check in the appropriate box after each inspection procedure is completed.
- If any inspection receives an “N”, tag and remove the machine from service, repair and re-inspect it. After repair, place a check in the “R” box.

Legend

Y = yes, acceptable

N = no, remove from service

R = repaired

Comments

Checklist A - Rev A	Y	N	R
A-1 Pre-operation inspection			
A-2 Functions tests			
A-3 Engine maintenance			
A-4 Filter condition indicator			
A-5 Oscillate axle			
Perform after 50 hours:			
A-6 30 day service			
Perform every 100 hours:			
A-7 Fuel filter/separator			
A-8 Rotation bearing			

Checklist B - Rev B	Y	N	R
B-1 Battery			
B-2 Electrical wiring			
B-3 Key switch			
B-4 Exhaust system			
B-5 Oil cooler and fins			
B-6 Tires and wheels			
B-7 Brake configuration			
B-8 Drive hub oil level			
B-9 Engine RPM			
B-10 Ground control override			
B-11 Directional valve			
B-12 Platform leveling			
B-13 Engine idle select			
B-14 Drive brakes			
B-15 Drive speed - stowed position			
B-16 Drive speed - raised position			
B-17 Alarm package			
B-18 Hydraulic oil analysis			
Perform every 400 hours:			
B-19 Engine maintenance			

MAINTENANCE INSPECTION REPORT

Model

Serial number

Date

Hour meter

Machine owner

Inspected by (print)

Inspector signature

Inspector title

Inspector company

Instructions

- Make copies of both pages to use for each inspection.
- Select the appropriate checklist(s) for the type of inspection to be performed.

☐	**Daily or 8 hour Inspection: A**
☐	**Quarterly or 250 hour Inspection: A+B**
☐	**Six Month or 500 hour Inspection: A+B+C**
☐	**Annual or 1000 hours Inspection: A+B+C+D**
☐	**2 Year or 2000 hour Inspection: A+B+C+D+E**

- Place a check in the appropriate box after each inspection procedure is completed.
- If any inspection receives an “N”, tag and remove the machine from service, repair and re-inspect it. After repair, place a check in the “R” box.

Legend

Y = yes, acceptable

N = no, remove from service

R = repaired

Comments

Checklist C - Rev B		**Y**	**N**	**R**
C-1	Engine maintenance			
C-2	Grease platform overload (if equipped)			
C-3	Test platform overload (if equipped)			

Checklist D - Rev B		**Y**	**N**	**R**
D-1	Boom wear pads			
D-2	Free-wheel configuration			
D-3	Drive hub oil			
D-4	Hydraulic filters			
D-5	Engine maintenance			
D-6	Calibrate platform overload system (if equipped)			
D-7	Turntable bearing bolts			
D-8	Turntable bearing wear			

Checklist E - Rev A		**Y**	**N**	**R**
E-1	Hydraulic oil			
Perform every 3000 hours:				
E-2	Engine maintenance			
Perform every 12,000 hours:				
E-3	Engine maintenance			

Checklist A Procedures

A-1
Perform Pre-operation Inspection

Completing a pre-operation inspection is essential to safe machine operation. The pre-operation inspection is a visual inspection performed by the operator prior to each work shift. The inspection is designed to discover if anything is apparently wrong with a machine before the operator performs the function tests. The pre-operation inspection also serves to determine if routine maintenance procedures are required.

Complete information to perform this procedure is available in the *Genie Z-51/30J Operator's Manual* on your machine.

A-2
Perform Function Tests

Completing the function tests is essential to safe machine operation. Function tests are designed to discover any malfunctions before the machine is put into service. A malfunctioning machine must never be used. If malfunctions are discovered, the machine must be tagged and removed from service.

Complete information to perform this procedure is available in the *Genie Z-51/30J Operator's Manual* on your machine.

CHECKLIST A PROCEDURES

A-3
Perform Engine Maintenance



Engine specifications require that this procedure be performed daily or every 10 hours, whichever comes first.

Proper engine maintenance, following the engine manufacturer's maintenance schedule, is essential to good engine performance and service life. Failure to perform the maintenance procedures can lead to poor engine performance and component damage.

Required maintenance procedures and additional engine information are available in the *Deutz FL 2011 Operation Manual* (Deutz part number 0297-9929).

Deutz FL 2011 Operation Manual	
Genie part number	84794

To access the engine:

1 Remove the safety pin from the engine pivot plate latch.

Note: The engine pivot plate latch is located under the engine turntable pivot plate at the counterweight end of the machine.

2 Open the engine pivot plate latch and swing the engine pivot plate out and away from the machine.

A-4
Check the High Pressure Hydraulic Filter Condition Indicator

Maintaining the high pressure hydraulic filter in good condition is essential to good system performance and safe machine operation. The filter condition indicator will show when the hydraulic flow is bypassing a clogged filter. If the filter is not frequently checked and replaced, impurities will remain in the hydraulic system and cause component damage.

1 Open the engine side turntable cover.

2 Start the engine from the ground controls.

3 Change the engine idle to high rpm (rabbit symbol).

4 Visually inspect the filter condition indicator.

⊙ Result: The filter condition indicator should be operating with the plunger in the green area.

⊠ Result: If the indicator displays the plunger in the red area, this indicates that the hydraulic filter is being bypassed and the filter should be replaced. See D-4, *Replace the Hydraulic Filters.*

A-5
Test the Oscillate Axle



Proper axle oscillation is essential to safe machine operation. If the axle oscillation system is not operating correctly, the stability of the machine is compromised and it may tip over.

1 Start the engine from the platform controls.

2 Drive the right steer tire up onto a 6 inch / 15 cm block or curb.

⊙ Result: The three remaining tires should stay in firm contact with the ground and the chassis should remain level at all times.

3 Drive the left steer tire up onto a 6 inch / 15 cm block or curb.

⊙ Result: The three remaining tires should stay in firm contact with the ground and the chassis should remain level at all times.

4 Drive both steer tires up onto a 6 inch / 15 cm block or curb.

⊙ Result: The non-steer tires should stay in firm contact with the ground.

Note: If the chassis does not remain level during test, refer to Repair Procedure 8-5, *How to Set Up the Directional Valve Linkage.*

A-6
Perform 30 Day Service



The 30 day maintenance procedure is a one time sequence of procedures to be performed after the first 30 days or 50 hours of usage, whichever comes first. After this interval, refer to the maintenance checklist for continued scheduled maintenance.

1 Perform the following maintenance procedures:

- A-8 Grease the Turntable Rotation Bearing and Rotate Gear
- B-6 Check the Lug Nut Torque (including tires and wheels)
- B-8 Check the Oil Level in the Drive Hubs
- C-1 Perform Engine Maintenance
- D-4 Replace the Hydraulic Filters
- D-7 Check the Turnable Rotation Bearing Bolts

CHECKLIST A PROCEDURES

A-7
Inspect the Fuel Filter/ Water Separator

Engine specifications require that this procedure be performed every 100 hours.

Proper maintenance of the fuel filter/water separator is essential for good engine performance. Failure to perform this procedure can lead to poor engine performance and component damage.

⚠ DANGER Explosion and fire hazard. Engine fuels are combustible. Perform this procedure in an open, well-ventilated area away from heaters, sparks, flames and lighted tobacco. Always have an approved fire extinguisher within easy reach.

Note: Perform this procedure with the engine off.

1 Put on protective clothing and eye wear.

2 Remove the safety pin from the engine pivot plate latch.


Note: The engine pivot plate latch is located under the engine turntable pivot plate at the counterweight end of the machine.

3 Open the engine pivot plate latch and swing the engine pivot plate out and away from the machine.

4 Locate the fuel filter/water separator next to the oil filter.

5 Loosen the drain plug located at the bottom of the filter. Allow the water to drain into a suitable container until fuel starts to come out. Immediately tighten the drain plug.

Note: Do not completely drain the filter.

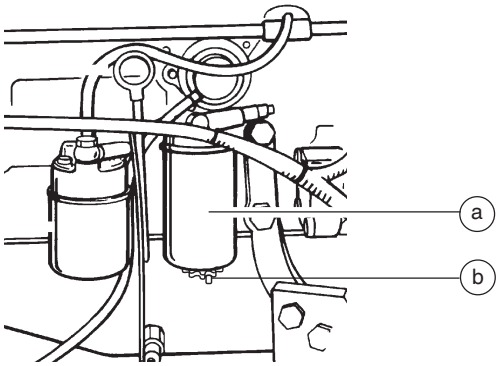

a fuel filter/water separator
b drain valve

6 Clean up any fuel that may have spilled.

7 Start the engine from the ground controls and check the fuel filter/water separator for leaks.

⚠ DANGER Explosion and fire hazard. If a fuel leak is discovered, keep any additional personnel from entering the area and do not operate the machine. Repair the leak immediately.

8 Swing the engine back to its original position and close the engine pivot plate latch.

9 Install the engine pivot plate safety pin.

A-8
Grease the Turntable Rotation Bearing and Rotate Gear



Genie specifications require that this procedure be performed every 100 hours of operation. Perform this procedure more often if dusty conditions exist.

Frequent application of lubrication to the turntable bearing and rotate gear is essential to good machine performance and service life. Continued use of an improperly greased bearing and gear will result in component damage.

1 Open the ground controls side turntable cover and locate the grease fitting near the ground control box.

2 Pump grease into the turntable rotation bearing. Rotate the turntable in increments of 4 to 5 inches / 10 to 13 cm at a time and repeat this step until the entire bearing has been greased.

3 Apply grease to each tooth of the drive gear, located under the turntable.

Grease Specification
Chevron Ultra-duty grease, EP NLGI 2 (lithium based) or equivalent

Checklist B Procedures

B-1
Inspect the Battery



Proper battery condition is essential to good engine performance and operational safety. Improper fluid levels or damaged cables and connections can result in engine component damage and hazardous conditions.

⚠WARNING Electrocution/burn hazard. Contact with hot or live circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

⚠WARNING Bodily injury hazard. Batteries contain acid. Avoid spilling or contacting battery acid. Neutralize battery acid spills with baking soda and water.

1 Put on protective clothing and eye wear.

2 Be sure that the battery cable connections are free of corrosion.

3 Be sure that the battery retainer and cable connections are tight.

Note: The battery is a maintenance free battery and does not require the replenishing of electrolyte.

Note: Adding terminal protectors and a corrosion preventative sealant will help eliminate corrosion on the battery terminals and cables.

B-2
Inspect the Electrical Wiring



Maintaining electrical wiring in good condition is essential to safe operation and good machine performance. Failure to find and replace burnt, chafed, corroded or pinched wires could result in unsafe operating conditions and may cause component damage.

⚠WARNING Electrocution/burn hazard. Contact with hot or live circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

1 Open the engine side turntable cover.

2 Remove the safety pin from the engine pivot plate latch.

Note: The engine pivot plate latch is located under the engine turntable pivot plate at the counterweight end of the machine.

3 Open the engine pivot plate latch and swing the engine pivot plate out and away from the machine.

4 Inspect the following areas for burnt, chafed, corroded and loose wires:

- Engine wiring harness
- Hydraulic manifold wiring

5 Open the ground controls side turntable cover.

6 Inspect the following areas for burnt, chafed, corroded and loose wires:

- Ground control box wire harnesses
- Inside of the ground control box
- Hydraulic manifold wiring

7 Inspect for a liberal coating of dielectric grease at the following location:

- All wire harnesses connectors to the ground control box

8 Start the engine from the ground controls and raise the secondary boom above the turntable covers.

9 Remove the center turntable cover retaining fasteners. Remove the center turntable cover from the machine.

10 Inspect the turntable area for burnt, chafed and pinched cables.

11 Lower the boom to the stowed position and turn the engine off.

12 Inspect the following areas for burnt, chafed, corroded, pinched and loose wires:

- Cable track on the primary boom
- Cables on the primary, and jib booms
- Jib boom/Platform rotate manifold
- Inside of the platform control box

13 Inspect for a liberal coating of dielectric grease at the following location:

- All wire harnesses connectors to the platform control box

14 Swing the engine back to its original position and close the engine pivot plate latch.

15 Install the engine pivot plate safety pin.

16 Install the center turntable cover and tighten the retaining fasteners.

B-3
Test the Key Switch

Proper key switch action and response is essential to safe machine operation. The machine can be operated from the ground or platform controls and the activation of one or the other is accomplished with the key switch. Failure of the key switch to activate the appropriate control panel could cause a hazardous operating situation.

1 Pull out the red Emergency Stop button to the on position at both the ground and platform controls.

2 Turn the key switch to ground control, start the engine and then turn the key switch to **platform control**.

3 Check all machine function from the **ground controls**.

⊙ Result: All machine functions should **not** operate.

4 Turn the key switch to ground control.

5 Check all machine function from the **platform controls**.

⊙ Result: All machine functions should **not** operate.

6 Turn the key switch to the off position.

⊙ Result: The engine should stop and no functions should operate.

CHECKLIST B PROCEDURES

B-4
Check the Exhaust System

Maintaining the exhaust system is essential to good engine performance and service life. Running the engine with a damaged or leaking exhaust system can cause component damage and unsafe operating conditions.

⚠WARNING Bodily injury hazard. Do not inspect while the engine is running. Remove the key to secure from operation.

⚠CAUTION Burn hazard. Beware of hot engine components. Contact with hot engine components may result in severe burns.

1 Be sure that all nuts and bolts are tight.

2 Inspect all welds for cracks.

3 Inspect for exhaust leaks; i.e., carbon buildup around seams and joints.

B-5
Check the Oil Cooler and Cooling Fins



Maintaining the oil cooler in good condition is essential for good engine performance. Operating a machine with a damaged oil cooler may result in engine damage. Also, restricting air flow through the oil cooler will affect the performance of the cooling system.

⚠WARNING Bodily injury hazard. Do not inspect while the engine is running. Remove the key to secure from operation.

⚠CAUTION Burn hazard. Beware of hot engine components. Contact with hot engine components may result in severe burns.

Oil cooler

1 Remove the safety pin from the engine pivot plate latch.


Note: The engine pivot plate latch is located under the engine turntable pivot plate at the counterweight end of the machine.

2 Open the engine pivot plate latch and swing the engine pivot plate out and away from the machine.

3 Remove the fasteners from the engine side cover, then remove the cover.

4 Inspect the oil cooler for leaks and physical

damage.

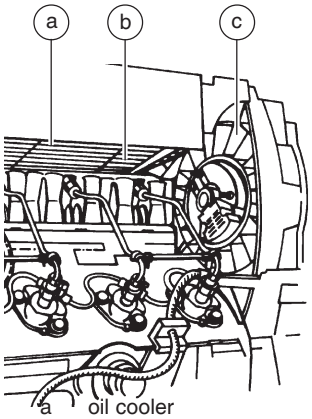

a oil cooler
b cylinder head cooling fins
c fan blower fins

5 Clean the oil cooler of debris and foreign material.

Cooling and fan blower fins

6 Inspect the fan blower fins for physical damage.

7 Clean the fan blower fins of debris and foreign material.

8 Inspect the head cooling passages and fins for physical damage or foreign material, using a flashlight.

9 Clean the cylinder head cooling passages of debris and foreign material.

10 Install the engine side cover.

11 Swing the engine back to its original position and close the engine pivot plate latch.

12 Install the engine pivot plate safety pin.

B-6
Check the Tires and Wheels (including lug nut torque)

Maintaining the tires and wheels, including proper wheel fastener torque, is essential to safe operation and good performance. Tire and/or wheel failure could result in a machine tip-over. Component damage may also result if problems are not discovered and repaired in a timely fashion.

Note: The tires are foam-filled and do not need air added to them.

1 Check all tire treads and sidewalls for cuts, cracks, punctures and unusual wear.

2 Check each wheel for damage, bends and cracked welds.


3 Check each lug nut for proper torque. Refer to Section 2, *Specifications*.

CHECKLIST B PROCEDURES


B-7
Confirm the Proper Brake Configuration

Proper brake configuration is essential to safe operation and good machine performance. Hydrostatic brakes and hydraulically-released, spring-applied individual wheel brakes can appear to operate normally when they are actually not fully operational.

1 Check each drive hub disconnect cap to be sure it is in the engaged position.

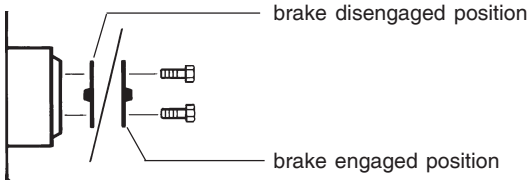

2 Be sure the free-wheel valve on the drive pump is closed (clockwise).

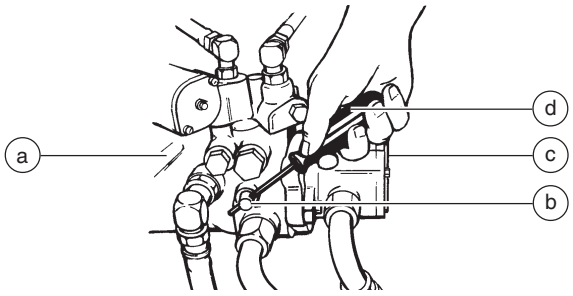

a drive pump
b free-wheel valve
c lift pump
d screwdriver


Note: The free-wheel valve is located on the side of the drive pump.

Note: The free-wheel valve should always remain closed.

B-8
Check the Oil Level in the Drive Hubs

Failure to maintain proper drive hub oil levels may cause the machine to perform poorly and continued use may cause component damage.

1 Drive the machine to rotate the hub until the plugs are located one on top and the other at 90 degrees.

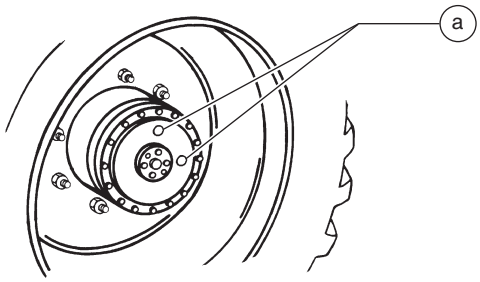

a drive hub plugs

2 Remove the plug located at 90 degrees and check the oil level.

⊙ Result: The oil level should be even with the bottom of the side plug hole.

3 If necessary, remove the top plug and add oil until the oil level is even with the bottom of the side plug hole.

4 Install the plug(s) into the drive hub.

5 Repeat this procedure for each drive hub.

6 Check the torque of the drive hub mounting bolts. Refer to Section 2, *Specifications*.

B-9
Check and Adjust the Engine RPM

Maintaining the engine rpm at the proper setting for both low and high idle is essential to good engine performance and service life. The machine will not operate properly if the rpm is incorrect and continued use may cause component damage.

Note: This procedure will require two people.

1 Remove the safety pin from the engine pivot plate latch.

Note: The engine pivot plate latch is located under the engine turntable pivot plate at the counterweight end of the machine.


2 Open the engine pivot plate latch and swing the engine pivot plate out and away from the machine.

3 Connect a tachometer to the engine, and then start the engine from the ground controls.

⊙ Result: Low idle should be 1500 rpm.

Skip to step 5 if the low idle rpm is correct.

4 Loosen the low idle lock nut, then turn the low idle adjustment screw clockwise to increase the rpm or counterclockwise to decrease the rpm. Tighten the low idle lock nut and recheck the rpm.

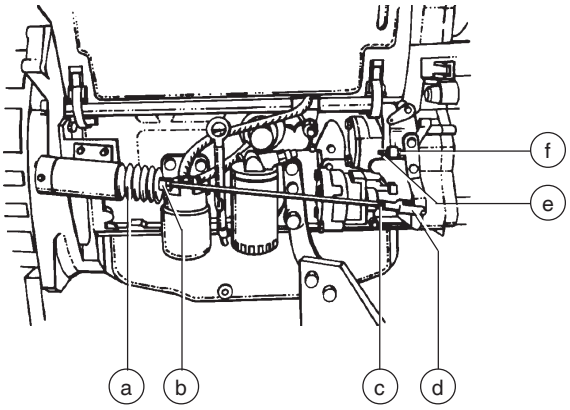

a solenoid boot
b high idle adjustment nut
c yoke lock nut
d yoke
e low idle adjustment screw
f low idle lock nut

5 Move the function enable toggle switch to the high idle (rabbit symbol) position at the ground controls.

⊙ Result: High idle should be 2500 rpm.

If high idle rpm is correct, disregard adjustment step 6.

6 Loosen the yoke lock nut, then turn the high idle adjustment nut and solenoid boot counterclockwise to increase the rpm or clockwise to decrease the rpm. Tighten the yoke lock nut and recheck the rpm.

Note: Be sure the solenoid fully retracts when activating high idle.

7 Swing the engine back to its original position and close the engine pivot plate latch.

8 Install the engine pivot plate safety pin.

CHECKLIST B PROCEDURES

B-10
Test the Ground Control Override

A properly functioning ground control override is essential to safe machine operation. The ground control override function is intended to allow ground personnel to operate the machine from the ground controls whether or not the red Emergency Stop button on the platform controls is in the on or off position. This function is particularly useful if the operator at the platform controls cannot return the boom to the stowed position.

1 Push in the platform red Emergency Stop button to the off position.

2 Start the engine from the ground controls.

3 At the ground controls, operate each boom function through a partial cycle.

⊙ Result: All boom functions should operate.

B-11
Check the Directional Valve Linkage



Note: Perform this test only on models equipped with an oscillating axle.

Proper axle oscillation is essential to safe machine operation. If the directional valve linkage is not operating correctly, the stability of the machine is compromised and it may tip over.

1 Remove the drive chassis cover and the axle covers from the non-steer end of the drive chassis.

2 Locate the directional valve inside of the non-steer axle and inspect the linkage for the following:

- Lock nut is tight against yoke
- Yoke clevis pins are installed
- Cotter pins are installed through clevis pins
- Linkage is properly attached to directional valve

B-12
Test the Platform Self-leveling



Automatic platform self-leveling throughout the full cycle of boom raising and lowering is essential for safe machine operation. The platform is maintained at level by the platform leveling slave cylinder which operates in a closed loop hydraulic circuit with the master cylinder located at the base of the boom.
A platform self-leveling failure creates an unsafe working condition for platform and ground personnel.

1 Start the engine from the ground controls and lower the boom into the stowed position.

2 Hold the function enable toggle switch to either side and adjust the platform to a level position using the platform level toggle switch.

3 Raise and lower the primary boom through a full cycle.

⊙ Result: The platform should remain level at all times to within ±5 degrees.

B-13
Test the Engine Idle Select

A properly operating engine idle select switch is essential to good engine performance and safe machine operation. There are two settings.

Foot switch activated low idle (turtle symbol) allows the operator to control individual boom functions. Drive functions will operate at low idle, but at reduced performance.

Foot switch activated high idle (rabbit symbol) should be used for normal machine operation. This selection activates high idle only when the foot switch is pressed down.

1 Pull out the red Emergency Stop button to the on position at both the ground and platform controls.

2 Start the engine from the ground controls then move the function enable toggle switch to the high idle (rabbit symbol) position and hold in the on position.

⊙ Result: The engine should change to high idle.

3 Release the function enable toggle switch.

⊙ Result: The engine should return to low idle.

4 Turn the key switch to platform controls.

5 Move the engine idle control switch to foot switch activated high idle (rabbit symbol).

⊙ Result: The engine should not change to high idle.

6 Press down the foot switch.

⊙ Result: The engine should change to high idle.

6 Move the engine idle control switch to foot switch activated low idle (turtle symbol).

⊙ Result: The engine should change to low idle.

CHECKLIST B PROCEDURES

B-14
Test the Drive Brakes

Proper brake action is essential to safe machine operation. The drive brake function should operate smoothly, free of hesitation, jerking and unusual noise. Hydrostatic brakes and hydraulically-released individual wheel brakes can appear to operate normally when they are actually not fully operational.

⚠WARNING Collision hazard. Be sure that the machine is not in free-wheel or partial free-wheel configuration. Refer to B-7, *Confirm the Proper Brake Configuration*.

Note: Select a test area that is firm, level and free of obstructions.

1 Mark a test line on the ground for reference.

2 Start the engine from the platform controls.

3 Move the engine idle control switch to foot switch activated high idle (rabbit and foot switch), then lower the boom into the stowed position.

4 Choose a point on the machine; i.e., contact patch of a tire, as a visual reference for use when crossing the test line.

5 Bring the machine to top drive speed before reaching the test line. Release the drive joystick when your reference point on the machine crosses the test line.

6 Measure the distance between the test line and your machine reference point. Refer to Section 2, *Specifications.*

Note: The brakes must be able to hold the machine on any slope it is able to climb.

B-15
Test the Drive Speed - Stowed Position

Proper drive function movement is essential to safe machine operation. The drive function should respond quickly and smoothly to operator control. Drive performance should also be free of hesitation, jerking and unusual noise over the entire proportionally controlled speed range.

Note: Select a test area that is firm, level and free of obstructions.

1 Create start and finish lines by marking two lines on the ground 40 feet / 12.2 m apart.

2 Start the engine from the platform controls.

3 Move the engine idle control switch to foot switch activated high idle (rabbit and foot switch), then lower the boom into the stowed position.

4 Choose a point on the machine; i.e., contact patch of a tire, as a visual reference for use when crossing the start and finish lines.

5 Bring the machine to top drive speed before reaching the start line. Begin timing when your reference point on the machine crosses the start line.

6 Continue at full speed and note the time when the machine reference point crosses the finish line. Refer to Section 2, *Specifications.*

B-16
Test the Drive Speed - Raised or Extended Position

Proper drive function movement is essential to safe machine operation. The drive function should respond quickly and smoothly to operator control. Drive performance should also be free of hesitation, jerking and unusual noise over the entire proportionally controlled speed range.

Note: Select a test area that is firm, level and free of obstructions.

1 Create start and finish lines by marking two lines on the ground 40 feet / 12.2 m apart.

2 Start the engine from the platform controls.

3 Move the engine idle select switch to foot switch activated high idle (rabbit and foot switch). Press down the foot switch and raise the primary boom above horizontal.

4 Choose a point on the machine; i.e., contact patch of a tire, as a visual reference for use when crossing the start and finish lines.

5 Bring the machine to top drive speed before reaching the start line. Begin timing when your reference point on the machine crosses the start line.

6 Continue at full speed and note the time when the machine reference point crosses the finish line.

7 Press down the foot switch and lower the boom to the stowed position.

8 Extend the boom 1 foot / 30 cm.

9 Choose a point on the machine; i.e., contact patch of a tire, as a visual reference for use when crossing the start and finish lines.

10 Bring the machine to top drive speed before reaching the start line. Begin timing when your reference point on the machine crosses the start line.

11 Continue at top speed and note the time when the machine reference point crosses the finish line. Refer to Section 2, *Specifications.*

CHECKLIST B PROCEDURES

B-17
Test the Alarm Package (if equipped)

The alarm package includes:

- Travel alarm
- Descent alarm
- Flashing beacon

Alarms and a beacon are installed to alert operators and ground personnel of machine proximity and motion. The alarm package is installed on the turntable covers.

Note: The alarms and beacon will operate with the engine
running or not running.

1 Turn the key switch to ground control and pull out the red Emergency Stop button to the on position at both the ground and platform controls.

⊙ Result: The flashing beacon should be on and flashing.

2 Move the function enable switch to either side and activate the primary boom toggle switch in the down position, hold for a moment and then release it.

⊙ Result: The descent alarm should sound when the switch is held down.

3 Move the function enable switch to either side and activate the secondary boom toggle switch in the down position, hold for a moment and then release it.

⊙ Result: The descent alarm should sound when the switch is held down.

4 Move the function enable toggle switch to either side and activate the jib boom toggle switch in the down position, hold for a moment and then release it.

⊙ Result: The descent alarm should sound when the switch is held down.

5 Turn the key switch to platform control.

⊙ Result: The flashing beacon should be on and flashing.

6 Press down the foot switch. Move the primary boom control handle to the down position, hold for a moment and then release it.

⊙ Result: The descent alarm should sound when the control handle is held down.

7 Press down the foot switch. Move the secondary boom control handle to the down position, hold for a moment and then release it.

⊙ Result: The descent alarm should sound when the control handle is held down.

8 Press down the foot switch. Activate the jib boom toggle switch in the down position, hold for a moment and then release it.

⊙ Result: The descent alarm should sound when the switch is held down.

9 Press down the foot switch. Move the drive control handle off center, hold for a moment and then release it. Move the drive control handle off center in the opposite direction, hold for a moment and then release it.

⊙ Result: The travel alarm should sound when the drive control handle is moved off center in either direction.

CHECKLIST B PROCEDURES

B-18
Perform Hydraulic Oil Analysis



Replacement or testing of the hydraulic oil is essential for good machine performance and service life. Dirty oil and a clogged suction strainer may cause the machine to perform poorly and continued use may cause component damage. Extremely dirty conditions may require oil changes to be performed more often.

Note: Before replacing the hydraulic oil, the oil may be tested by an oil distributor for specific levels of contamination to verify that changing the oil is necessary. **If the hydraulic oil is not replaced at the two year inspection, test the oil quarterly. Replace the oil when it fails the test.**
See E-1, *Test or Replace the Hydraulic Oil.*

B-19
Perform Engine Maintenance



Engine specifications require that this procedure be performed every 400 hours.

Proper engine maintenance, following the engine manufacturer's maintenance schedule, is essential to good engine performance and service life. Failure to perform the maintenance procedures can lead to poor engine performance and component damage.

Required maintenance procedures and additional engine information are available in the *Deutz FL 2011 Operation Manual* (Deutz part number 0297-9929).

Deutz FL 2011 Operation Manual	
Genie part number	84794

To access the engine:

1 Remove the safety pin from the engine pivot plate latch.

Note: The engine pivot plate latch is located under the engine turntable pivot plate at the counterweight end of the machine.

2 Open the engine pivot plate latch and swing the engine pivot plate out and away from the machine.

Checklist C Procedures

C-1
Perform Engine Maintenance



Engine specifications require that this procedure be performed every 500 hours.

Proper engine maintenance, following the engine manufacturer's maintenance schedule, is essential to good engine performance and service life. Failure to perform the maintenance procedures can lead to poor engine performance and component damage.

Required maintenance procedures and additional engine information are available in the *Deutz FL 2011 Operation Manual* (Deutz part number 0297-9929).

Deutz FL 2011 Operation Manual	
Genie part number	84794

To access the engine:

1 Remove the safety pin from the engine pivot plate latch.

Note: The engine pivot plate latch is located under the engine turntable pivot plate at the counterweight end of the machine.

2 Open the engine pivot plate latch and swing the engine pivot plate out and away from the machine.

C-2
Grease the Platform Overload Mechanism (if equipped)



Genie specifications require that this procedure be performed every 500 hours or 6 months, whichever comes first. Perform this procedure more often if dusty conditions exist.

Application of lubrication to the platform overload mechanism is essential to safe machine operation. Continued use of an improperly greased platform overload mechanism could result in the system not sensing an overloaded platform condition and will result in component damage.

1 Locate the grease fittings on each pivot pin of the platform overload assembly.

2 Thoroughly pump grease into each grease fitting.

Grease Specification
Chevron Ultra-duty grease, EP NLGI 2 (lithium based) or equivalent

C-3
Test the Platform Overload System (if equipped)

Genie specifications require that this procedure be performed every 500 hours or six months.

Testing the platform overload system regularly is essential to safe machine operation. Continued use of an improperly operating platform overload system could result in the system not sensing an overloaded platform condition. Machine stablity could be compromised resulting in the machine tipping over.


Note: Perform this procedure with the machine on a firm, level surface.

1 Turn the key switch to platform control. Start the engine from the platform controls.

2 Level the platform.

3 Determine the maximum platform capacity. Refer to the machine serial plate.

4 Using a suitable lifting device, place an appropriate test weight equal to that of the maximum platform capacity in one of the locations shown.

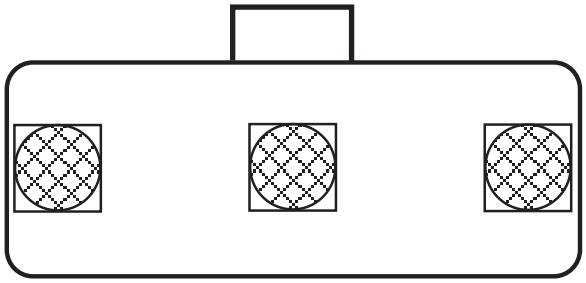

⊙ Result: The platform overload indicator light should be off at both the ground and platform controls.

5 Carefully move the test weight to each remaining location.

⊙ Result: The platform overload indicator light should be off at both the ground and platform controls.

6 Add an additional 10 lbs / 4.5 kg of weight to overload the platform.

⊙ Result: The alarm should be sounding. The platform overload indicator light should be flashing at both the ground and platform controls.

⊠ Result: If the alarm does not sound and the platform overload indicator light does not come on with the test weights in any of the platform locations, the platform overload system needs to be calibrated. See D-6, *Calibrate the Platform Overload System (if equipped)*.

Note: There may be an approximate 2 second delay before the overload indicator light turns on and the alarm sounds.

CHECKLIST C PROCEDURES

7 Carefully move the test weights to each remaining location in the platform.

⊙ Result: The alarm should be sounding. The platform overload indicator light should be flashing at both the ground and platform controls.

⊠ Result: If the alarm does not sound and the platform overload indicator light does not come on with the test weights in any of the platform locations, the platform overload system needs to be calibrated. See D-6, *Calibrate the Platform Overload System (if equipped)*.

Note: There may be an approximate 2 second delay before the overload indicator light turns on and the alarm sounds.

8 Test all machine functions from the platform controls.

⊙ Result: All platform control functions should not operate.

9 Turn the key switch to ground control.

10 Test all machine functions from the ground controls.

⊙ Result: All ground control functions should not operate.

Note: Machine functions should still operate with auxiliary power at the ground controls.

11 Lift the test weights off the platform floor using a suitable lifting device.

⊙ Result: The platform overload indicator light and alarm should turn off at both the ground and platform controls.

Note: There may be an approximate 2 second delay before the overload indicator light and alarm turn off.

12 Test all machine functions from the ground controls.

⊙ Result: All ground control functions should operate normally.

13 Turn the key switch to platform control.

14 Test all machine functions from the platform controls.

⊙ Result: All platform control functions should operate.

Note: If the platform overload system is not operating properly, see D-6, *Calibrate the Platform Overload System (if equipped).*

Checklist D Procedures

D-1
Check the Boom Wear Pads

Maintaining the boom wear pads in good condition is essential to safe machine operation. Wear pads are placed on boom tube surfaces to provide a low friction, replaceable wear pad between moving parts. Improperly shimmed wear pads or continued use of extremely worn wear pads may result in component damage and unsafe operating conditions.

1 Measure each wear pad. Replace the wear pad once it reaches the minimum allowable thickness. If the wear pad is still within specification, shim as necessary to obtain minimum clearance with zero binding.

2 Extend and retract the primary boom through the entire range of motion to check for tight spots that may cause binding or scraping of the boom.

Note: Always maintain squareness between the outer and inner boom tubes.

Primary boom wear pad specifications	New	Minimum
Top, bottom and side wear pads (platform end of boom)	3/4 inch 19 mm	5/8 inch 15.9 mm
Side and bottom wear pads (pivot end of boom)	5/8 inch 15.9 mm	1/2 inch 12.7 mm
Top wear pads (pivot end of boom)	3/4 inch 19 mm	5/8 inch 15.9 mm

D-2
Check the Free-wheel Configuration

Proper use of the free-wheel configuration is essential to safe machine operation. The free-wheel configuration is used primarily for towing. A machine configured to free-wheel without operator knowledge may cause death or serious injury and property damage.

⚠WARNING Collision hazard. Select a work site that is firm and level.

NOTICE Compnent amage hazard. If the machine must be towed, do not exceed 2 mph / 3.2 km/h.


Non-steer wheels:

1 Chock the steer wheels to prevent the machine from rolling.

2 Center a lifting jack of ample capacity (20,000 lbs / 10,000 kg) under the drive chassis between the non-steer tires.

3 Lift the wheels off the ground and then place jack stands under the drive chassis for support.

4 Disengage the drive hubs by turning over the drive hub disconnect caps on each non-steer wheel hub.

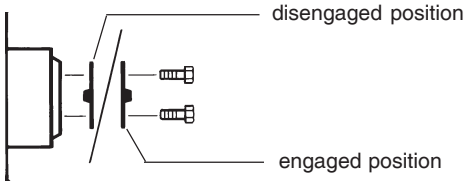

CHECKLIST D PROCEDURES

5 Manually rotate each non-steer wheel.

⊙ Result: Each non-steer wheel should rotate with minimum effort.

6 Re-engage the drive hubs by turning over the hub disconnect caps. Rotate each wheel to check for engagement. Lift the machine and remove the jack stands.

⚠WARNING Collision hazard. Failure to re-engage the drive hubs could result in death or serious injury and property damage.


Steer wheels:

7 Chock the non-steer wheels to prevent the machine from rolling.

8 Center a lifting jack of ample capacity (20,000 lbs / 10,000 kg) under the drive chassis between the steer tires.

9 Lift the wheels off the ground and then place jack stands under the drive chassis for support.

10 Disengage the drive hubs by turning over the drive hub disconnect caps on each steer wheel hub.

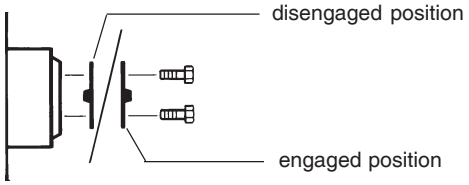


11 Manually rotate each steer wheel.

⊙ Result: Each steer wheel should rotate with minimum effort.

12 Re-engage the drive hubs by turning over the hub disconnect caps. Rotate each wheel to check for engagement. Raise the machine and remove the jack stands.

⚠WARNING Collision hazard. Failure to re-engage the drive hubs could result in death or serious injury and property damage.

13 Be sure the free-wheel valve on the drive pump is closed (clockwise).

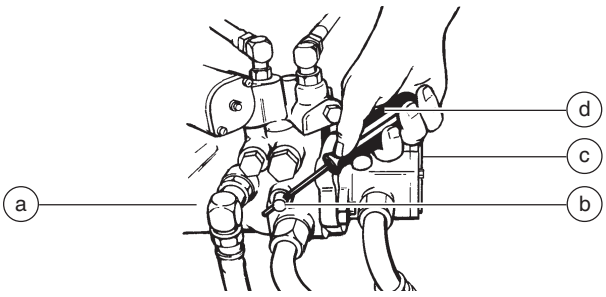

a drive pump
b free-wheel valve
c lift pump
d screwdriver

Note: The free-wheel valve is located on the side of the drive pump.

Note: The free-wheel valve should always remain closed.

CHECKLIST D PROCEDURES


D-3
Replace the Drive Hub Oil

Replacing the drive hub oil is essential for good machine performance and service life. Failure to replace the drive hub oil at yearly intervals may cause the machine to perform poorly and continued use may cause component damage.

1 Select the drive hub to be serviced. Then drive the machine until one of the two plugs is at the lowest point.

2 Remove both plugs and drain the oil.

3 Drive the machine until one plug is at the top and the other is at 90 degrees.

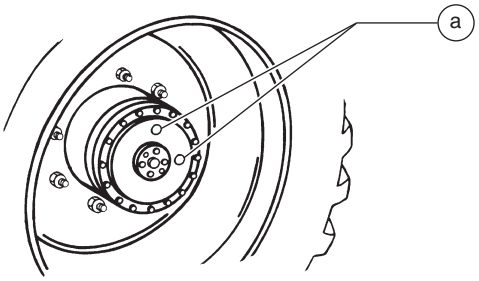

a drive hub plugs

4 Fill the hub with oil from the top hole until the oil level is even with the bottom of the side hole. Install the plugs.

5 Repeat steps 1 through 4 for all the other drive hubs.

D-4
Replace the Hydraulic Filters

Genie requires that this procedure be performed yearly or every 1000 hours, whichever comes first. Perform this procedure more often if dusty conditions exist.

Replacement of the hydraulic filters is essential for good machine performance and service life. A dirty or clogged filter may cause the machine to perform poorly and continued use may cause component damage. Extremely dirty conditions may require that the filters be replaced more often.

⚠CAUTION Bodily injury hazard. Beware of hot oil. Contact with hot oil may cause severe burns.

Note: Perform this procedure with the engine off.

Hydraulic return filter

1 Open the ground controls side turntable cover and locate the hydraulic return filter housing on top of the hydraulic tank.

2 Remove the cap from the filter housing.

3 Lift the handle on the filter element and rotate the element counterclockwise to release the element from the housing.

4 Remove the filter element from the filter housing.

5 Install the new filter element into the filter housing.

CHECKLIST D PROCEDURES

6 Push the filter element down to be sure the o-ring on the element is fully seated into the housing.

7 Rotate the filter element clockwise to lock it in place.

8 Install the filter housing cap.

9 Use a permanent ink marker to write the date and number of hours from the hour meter on the oil filter housing.

Medium and high pressure filters

Note: The medium pressure filter is for the charge pump and the high pressure filter is for all machine functions except the drive circuit and oscillating axle circuit.

10 Open the engine side turntable cover and locate the medium and high pressure filters.

Note: The medium pressure filter is mounted near the pump. The high pressure filter, with filter condition indicator, is mounted to the bulkhead.

11 Place a suitable container under each filter.

12 Remove the filter housings by using a wrench on the nut provided on the bottom of the housings.

13 Remove the filter elements from the housings.

14 Inspect the housing seals and replace them if necessary.

15 Install the new filter elements into the housings and tighten them securely.

Note: The medium and high pressure filters use the same elements.

16 Clean up any oil that may have spilled during the installation procedure.

17 Use a permanent ink marker to write the date and number of hours from the hour meter on the oil filter housings.

18 Start the engine from the ground controls.

19 Inspect the filter housings and related components to be sure that there are no leaks.

CHECKLIST D PROCEDURES

D-5
Perform Engine Maintenance



Engine specifications require that this procedure be performed every 1000 hours.

Proper engine maintenance, following the engine manufacturer's maintenance schedule, is essential to good engine performance and service life. Failure to perform the maintenance procedures can lead to poor engine performance and component damage.

Required maintenance procedures and additional engine information are available in the *Deutz FL 2011 Operation Manual* (Deutz part number 0297-9929).

Deutz FL 2011 Operation Manual	
Genie part number	84794

To access the engine:

1 Remove the safety pin from the engine pivot plate latch.

The engine pivot plate latch is located under the engine turntable pivot plate at the counterweight end of the machine.

2 Open the engine pivot plate latch and swing the engine pivot plate out and away from the machine.

D-6
Calibrate the Platform Overload System (if equipped)



Genie specifications require that this procedure be performed every 1000 hours of operation or yearly.

Yearly calibration of the platform overload system is essential to safe machine operation. Continued use of an improperly calibrated platform overload system could result in the system failing to sense an overloaded platform. The stability of the machine is compromised and it could tip over.

Perform this procedure with the machine on a firm, level surface.

1 Level the platform.

2 Determine the maximum platform capacity. Refer to the machine serial plate.

3 Using a suitable lifting device, place an appropriate test weight equal to that of the maximum platform capacity at the center of the platform floor.

CHECKLIST D PROCEDURES

Determine the limit switch trigger point:

4 Gently move the platform up and down by hand, so it bounces approximately 2.5 to 5 cm. Allow the platform to settle.

⊙ Result: **The overload indicator light and the alarm is on.** Slowly tighten the load spring adjustment nut by turning it clockwise just until the overload indicator light and alarm turns off.

Note: The platform will need to be moved up and down and allowed to settle in between adjustments.

Note: There may be an approximate 2 second delay before the overload indicator light turns on and the alarm sounds.

⊙ Result: **The overload indicator light and alarm is off.** Slowly loosen the load spring adjustment nut by turning it counterclockwise just until the overload indicator light and alarm turn on.

Note: There may be an approximate 2 second delay before the overload indicator light turns on and the alarm sounds.

Note: The platform will need to be moved up and down and allowed to settle in between adjustments.

Confirm the setting:

5 Turn the key switch to platform control. Start the engine from the platform controls.

6 Lift the test weight off the platform floor using a suitable lifting device.

7 Place the test weight back onto the center of the platform floor using a suitable lifting device.

⊙ Result: The alarm should be off. The platform overload indicator light should be off at both the ground and platform controls.

Note: There may be an approximate 2 second delay before the overload indicator light and alarm turn off.

8 Add an additional 10 lb / 4.5 kg test weight to the original test weight to overload the platform.

⊙ Result: The alarm should be sounding. The platform overload indicator light should be flashing at both the ground and platform controls.

Note: There may be an approximate 2 second delay before the overload indicator light turns on and the alarm sounds.

9 Test all machine functions from the platform controls.

⊙ Result: All platform control functions should not operate.

10 Turn the key switch to ground control.

11 Test all machine functions from the ground controls.

⊙ Result: All ground control functions should not operate.

Note: If the platform overload system is not operating properly, repeat steps 1 through 4.

D-7
Check the Turntable Rotation Bearing Bolts

Maintaining proper torque on the turntable bearing bolts is essential to safe machine operation. Improper bolt torque could result in an unsafe operating condition and component damage.

1 Raise the primary boom and place a safety chock on the lift cylinder rods. Carefully lower the boom onto the lift cylinder safety chock.

⚠WARNING Crushing hazard. Keep hands away from the cylinder and all moving parts when lowering the boom.

Note: The lift cylinder safety chock is available through the Genie Service Parts Department.

2 Turn the engine off.


3 Remove the safety pin from the engine pivot plate latch.

Note: The engine pivot plate latch is located under the engine turntable pivot plate at the counterweight end of the machine.

4 Open the engine pivot plate latch and swing the engine pivot plate out and away from the machine.

5 Remove the center turntable cover retaining fasteners. Remove the center turntable cover from the machine.

6 Be sure that each turntable mounting bolt is torqued in sequence to specification. Refer to Section 2, *Specifications.*

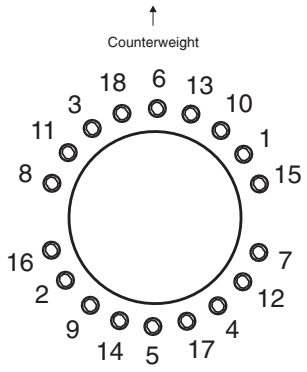

Bolt torque sequence

7 Start the engine from the ground controls.

8 Raise the primary boom and remove the safety chock.


9 Lower the boom to the stowed position.

10 Remove drive chassis covers from both the steer end and the non-steer end of the machine.

11 Remove the lower chassis cover mounting fasteners from inside of the drive chassis (if equipped).

12 Remove the lower chassis cover to access the lower turntable bearing bolts under the drive chassis.

13 Check to ensure that each lower bearing mounting bolt under the drive chassis is torqued in sequence to specification. Refer to Section 2, *Specifications.*

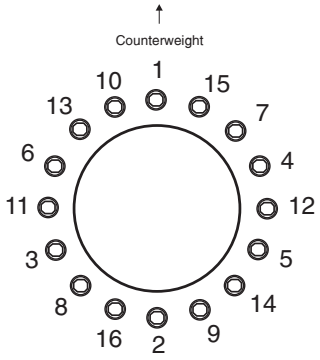

Bolt torque sequence

CHECKLIST D PROCEDURES

D-8
Inspect for Turntable Bearing Wear

Periodic inspection of turntable bearing wear is essential to safe machine operation, good machine performance and service life. Continued use of a worn turntable bearing could create an unsafe operating condition, resulting in death or serious injury and component damage.

Note: Perform this procedure with the machine on a firm, level surface and the boom in the stowed position.


1 Grease the turntable bearing. See A-8, *Grease the Turntable Bearing and Rotate Gear.*

2 Torque the turntable bearing bolts to specification. See D-7, *Check the Turntable Rotation Bearing Bolts.*

3 Start the machine from the ground controls and raise the primary and secondary booms to full height. Do not extend the primary boom.

4 Place a dial indicator between the drive chassis and the turntable at a point that is directly under, or inline with, the boom and no more than 1 inch / 2.5 cm from the bearing.

Note: To obtain an accurate measurement, place the dial indicator no more than 1 inch / 2.5 cm from the turntable rotation bearing.

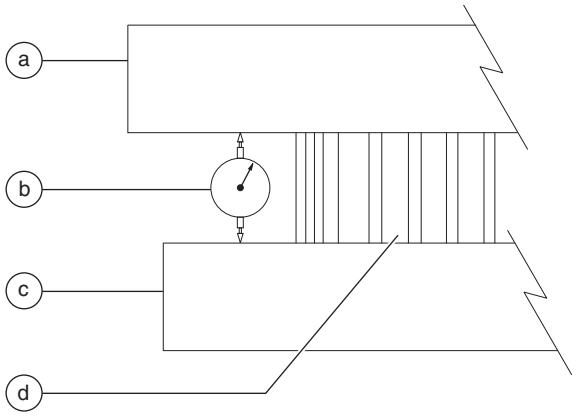

a turntable
b dial indicator
c drive chassis
d turntable rotation bearing

5 At the dial indicator, adjust it to "zero" the indicator.

6 Lower the secondary boom to the stowed position and lower the primary boom to a horizontal position. Fully extend the primary boom.

7 Note the reading on the dial indicator.

⊙ Result: The measurement is less than 0.055 inch / 1.4 mm. The bearing is good.

⊠ Result: The measurement is more than 0.055 inch / 1.4 mm. The bearing is worn and needs to be replaced.

8 Fully retract the primary boom. Raise the primary and secondary booms to full height. Visually inspect the the dial indicator to be sure the needle returns to the "zero" position.

9 Remove the dial indicator and rotate the turntable 90°.

10 Repeat steps 4 through 9 until the rotation bearing has been checked in at least four equally spaced areas 90° apart.

11 Lower the primary and secondary booms to the stowed position and turn the machine off.

12 Remove the dial indicator from the machine.

Checklist E Procedures


E-1
Test or Replace the Hydraulic Oil

Replacement or testing of the hydraulic oil is essential for good machine performance and service life. Dirty oil and a clogged suction strainer or hydraulic filters may cause the machine to perform poorly and continued use may cause component damage. Extremely dirty conditions may require oil changes to be performed more often.

Note: Before replacing the hydraulic oil, the oil may be tested by an oil distributor for specific levels of contamination to verify that changing the oil is necessary. **If the hydraulic oil is not replaced at the two year inspection, test the oil quarterly. Replace the oil when it fails the test.**

Note: Perform this procedure with the boom in the stowed position.

1 Locate the two hydraulic tank valves at the hydraulic tank through the access hole underneath the turntable. Close the valves.

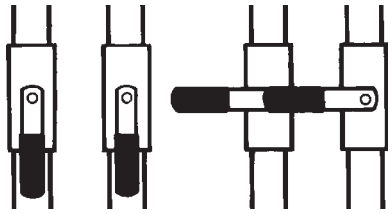

open closed

NOTICE Component damage hazard. The engine must not be started with the hydraulic tank shut-off valves in the closed position or component damage will occur. If the tank valves are closed, remove the key from the key switch and tag the machine to inform personnel of the condition.

3 Remove the drain plug from the hydraulic tank and completely drain the tank into a container of suitable capacity. Refer to Section 2, *Specifications*.

4 Tag, disconnect and plug the two suction hoses and supply hose for the auxiliary pump from the hydraulic tank. Cap the fittings on the tank.

Note: The hoses can be accessed through the access hole under the turntable.

5 Disconnect and plug the return filter hydraulic hose at the return filter. Cap the fitting on the filter housing.

6 Remove the ground controls side turntable cover.

CHECKLIST E PROCEDURES

7 Support the hydraulic tank with an appropriate lifting device.

8 Remove the hydraulic tank mounting fasteners.

9 Remove the hydraulic tank from the machine.

⚠WARNING Crushing hazard. The hydraulic tank could become unbalanced and fall if not properly supported when removed from the machine.

10 Remove the hydraulic return filter housing mounting fasteners. Remove the hydraulic return filter housing from the hydraulic tank.

11 Remove the suction strainers from the tank and clean them using a mild solvent.

12 Rinse out the inside of the tank using a mild solvent.

13 Install the suction strainers into the hydraulic tank

14 Install the drain plug using a thread sealant on the threads.

15 Install the hydraulic return filter housing onto the hydraulic tank.

16 Install the hydraulic tank onto the machine.

17 Install the two suction hoses to the suction strainers.

18 Install the supply hose for the auxiliary power unit and the return filter hose.

19 Open the two hydraulic tank valves at the hydraulic tank.

20 Fill the tank with the proper hydraulic oil for your machine until the level is within the top 2 inches / 5 cm of the sight gauge. Do not overfill. Refer to Section 2, *Specifications.*

21 Clean up any oil that may have spilled.

22 Prime the pump. Refer to Repair Procedure 7-2, *How to Prime the Pump.*

CHECKLIST E PROCEDURES

E-2
Perform Engine Maintenance

Engine specifications require that this procedure be performed every 3000 hours.

Proper engine maintenance, following the engine manufacturer's maintenance schedule, is essential to good engine performance and service life. Failure to perform the maintenance procedures can lead to poor engine performance and component damage.

Required maintenance procedures and additional engine information are available in the *Deutz FL 2011 Operation Manual* (Deutz part number 0297-9929).

Deutz FL 2011 Operation Manual	
Genie part number	84794

To access the engine:

1 Remove the safety pin from the engine pivot plate latch.

Note: The engine pivot plate latch is located under the engine turntable pivot plate at the counterweight end of the machine.

2 Open the engine pivot plate latch and swing the engine pivot plate out and away from the machine.

E-3
Perform Engine Maintenance

Engine specifications require that this procedure be performed every 12,000 hours.

Proper engine maintenance, following the engine manufacturer's maintenance schedule, is essential to good engine performance and service life. Failure to perform the maintenance procedures can lead to poor engine performance and component damage.

Required maintenance procedures and additional engine information are available in the *Deutz FL 2011 Operation Manual* (Deutz part number 0297-9929).

Deutz FL 2011 Operation Manual	
Genie part number	84794

To access the engine:

1 Remove the safety pin from the engine pivot plate latch.

Note: .The engine pivot plate latch is located under the engine turntable pivot plate at the counterweight end of the machine.

2 Open the engine pivot plate latch and swing the engine pivot plate out and away from the machine.

Repair Procedures



Observe and Obey:

- ☑ Repair procedures shall be completed by a person trained and qualified on the repair of this machine.
- ☑ Immediately tag and remove from service a damaged or malfunctioning machine.
- ☑ Repair any machine damage or malfunction before operating the machine.

Before Repairs Start:

- ☑ Read, understand and obey the safety rules and operating instructions in the appropriate Operator's Manual on your machine.
- ☑ Be sure that all necessary tools and parts are available and ready for use.
- ☑ Read each procedure completely and adhere to the instructions. Attempting shortcuts may produce hazardous conditions.
- ☑ Unless otherwise specified, perform each repair procedure with the machine in the following configuration:
  - Machine parked on a firm, level surface
  - Boom in stowed position
  - Turntable rotated with the boom between the non-steer wheels
  - Turntable secured with the turntable rotation lock
  - Key switch in the off position with the key removed
  - Wheels chocked
  - All external AC power disconnected from the machine

About This Section

Most of the procedures in this section should only be performed by a trained service professional in a suitably equipped workshop. Select the appropriate repair procedure after troubleshooting the problem.

Perform disassembly procedures to the point where repairs can be completed. To re-assemble, perform the disassembly steps in reverse order.

Symbols Legend



Safety alert symbol—used to alert personnel to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

⚠DANGER Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

⚠WARNING Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

⚠CAUTION Indicates a potentially hazardous situation which, if not avoided, may cause minor or moderate injury.

NOTICE Indicates a potentially hazardous situation which, if not avoided, may result in property damage.


⊙ Indicates that a specific result is expected after performing a series of steps.

⊠ Indicates that an incorrect result has occurred after performing a series of steps.

Platform Controls

The platform control box contains one printed circuit board. The ALC-500 circuit board inside the platform control box controls all proportional machine functions from the platform. The joystick controllers at the platform controls utilize Hall Effect technology and require no adjustment. The operating parameters of the joysticks are stored in memory at the ECM circuit board at the platform controls. If a joystick error occurs or if a joystick is replaced, it will need to be calibrated before that particular machine function will operate. See 1-2, *How to Calibrate a Joystick.*

Each joystick controller should operate smoothly and provide proportional speed control over its entire range of motion.

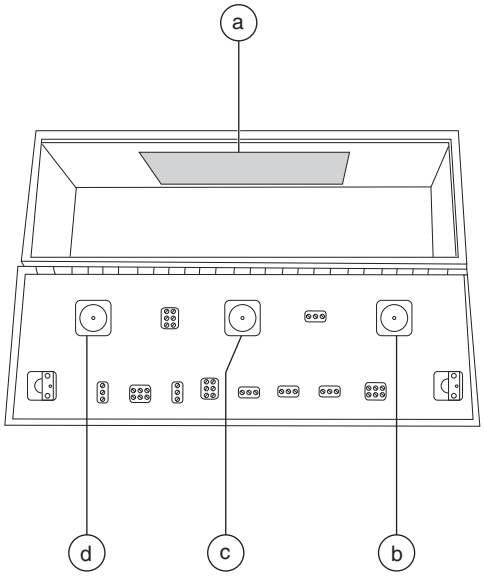

a ALC-500 circuit board
b drive/steer joystick controller
c secondary boom up/down joystick controller
d primary boom up/down and turntable rotate left/right joystick controller

1-1 ALC-500 Circuit Board

⚠WARNING Electrocution/burn hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

Note: When the ALC-500 circuit board is replaced, the joystick controllers will need to be calibrated. See 1-2, *How to Calibrate a Joystick.*

How to Remove the ALC-500 Circuit Board

1 Push in the red Emergency Stop button to the off position at both the ground and platform controls.

2 Remove the platform control box lid retaining fasteners. Open the control box lid.

3 Locate the ALC-500 circuit board mounted to the inside of the platform control box.

⚠WARNING Electrocution/burn hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

4 Attach a grounded wrist strap to the ground screw inside the platform control box.

NOTICE Component damage hazard. Electrostatic discharge (ESD) can damage printed circuit board components. Maintain firm contact with a metal part of the machine that is grounded at all times when handling printed circuit boards OR use a grounded wrist strap.

5 Carefully disconnect the wire connectors from the circuit board.

6 Remove the ALC-500 circuit board mounting fasteners.

7 Carefully remove the ALC-500 circuit board from the platform control box.

1-2 Joysticks

How to Calibrate a Joystick

The joysticks on this machine utilize digital Hall Effect technology for proportional control. If a joystick is disconnected or replaced, it must be calibrated before that particular machine function will operate.

Note: The joystick must be calibrated before the threshold, max-out or ramp rate can be set.

Note: Perform this procedure with the engine off.

1 Pull out the red Emergency Stop button to the on position at both the ground and platform controls.

2 Turn the key switch to platform control. Do not start the engine.

3 Select a joystick to calibrate.

4 Move the joystick full stroke in either direction and hold for 5 seconds.

5 Return the joystick to the neutral position, pause for a moment, then move the joystick full stroke in the opposite direction. Hold for 5 seconds and return the joystick to the neutral position.

⊙ Result: The alarm should sound indicating successful joystick calibration.

6 Repeat this procedure for each joystick controlled machine function including the thumb rocker steer switch.

Note: No machine fuction should operate while performing the joystick calibration procedure.

PLATFORM CONTROLS

How to Adjust the Joystick Max-out Setting

The max-out setting of a joystick controls the maximum speed of a joystick-controlled machine function. Whenever a hydraulic cylinder, drive motor or hydraulic pump is replaced, the max-out setting should be adjusted to maintain optimum performance. The max-out settings on the joystick can be changed to compensate for hydraulic pump wear to maintain peak performance from the machine.

Note: Perform this procedure with the boom in the stowed position.

1 Pull out the red Emergency Stop button to the on position at both the ground and platform controls.

2 Turn the key switch to platform control. Do not start the engine.

3 Push in the platform controls red Emergency Stop button to the off position.

4 Do not press down the foot switch.

5 Move and hold the drive enable toggle switch in the right position and pull out the red Emergency Stop button to the on position.

6 When the alarm sounds, release the drive enable toggle switch.

7 Momentarily activate the drive enable toggle switch in the right direction 4 times.

⊙ Result: There should be a pause and the alarm should sound 4 times indicating that the machine is in max-out calibration mode.

8 Start the engine from the platform controls and press down the foot switch.

9 Start a timer and activate the machine function that needs to be adjusted. Record the time it takes for that function to complete a full cycle (ie; boom up).

10 Compare the machine function time with specifications and determine whether the function time needs to increase or decrease.

Note: Refer to Section 2, *Specifications* for function speeds.

11 While the joystick is activated, adjust the max-out setting to achieve the proper function cycle time. Momentarily move the drive enable toggle switch in the right direction to increase the function speed or momentarily move the drive enable toggle switch in the left direction to decrease the function speed.

Note: Each time the drive enable toggle switch is momentarily moved, the function speed will change in 2% increments.

12 Repeat steps 9 through 11 for each joystick controlled machine function.

13 Return the joystick to the neutral position and wait for approximately 10 seconds.

⊙ Result: The alarm should sound indicating that the settings have been saved in memory.

Note: Do not operate any machine function during the 10 second waiting time.

How to Adjust the Joystick Ramp Rate Setting

The ramp rate setting of a joystick controls the time at which it takes for the joystick to reach maximum output, when moved out of the neutral position. The ramp rate settings of a joystick can be changed to compensate for hydraulic pump wear to maintain peak performance from the machine.

Note: Perform this procedure with the boom in the stowed position.

1 Pull out the red Emergency Stop button to the on position at both the ground and platform controls.

2 Turn the key switch to platform control. Do not start the engine.

3 Push in the platform controls red Emergency Stop button to the off position.

4 Do not press down the foot switch.

5 Move and hold the drive enable toggle switch in the right position and pull out the red Emergency Stop button to the on position.

6 When the alarm sounds, release the drive enable toggle switch.

7 Momentarily activate the drive enable toggle switch in the right direction 6 times.

⊙ Result: There should be a pause and the alarm should sound 6 times indicating that the machine is in ramp rate calibration mode.

8 Start the engine from the platform controls and press down the foot switch.

9 Start a timer and simultaneously move the joystick in either direction full stroke. Note how long it takes the function to reach maximum speed. This is the ramp rate.

10 Compare the function ramp rate time with the table below and determine whether the ramp rate time needs to increase or decrease.

11 While the joystick is activated, set the ramp rate. Momentarily move the drive enable toggle switch in the right direction to increase the time or momentarily move the drive enable toggle switch in the left direction to decrease the time.

Note: Each time the drive enable toggle switch is momentarily moved, the time will change in 10% increments.

12 Repeat steps 9 through 11 for each joystick controlled machine function.

13 Return the joystick to the neutral position and wait for approximately 10 seconds.

⊙ Result: The alarm should sound indicating that the settings have been saved in memory.

Note: Do not operate any machine function during the 10 second waiting time.

Ramp rate (factory settings)	
Primary boom up/down	
accelerate	4 seconds
decelerate	0.5 second
Secondary boom up/down	
accelerate	2 seconds
decelerate	0.5 second
Turntable rotate	
accelerate	2 seconds
decelerate	0.5 second
Drive	
accelerate	3 seconds
decelerate to neutral	0.5 second
decelerate, change of direction	0.5 second
decelerate, coasting	0.75 second
decelerate, braking	1 second
decelerate, shift from low to high speed	1 second
decelerate, shift from high to low speed	2 seconds

PLATFORM CONTROLS

How to Adjust the Joystick Threshold Setting

The threshold setting of a joystick is the minimum output at which a function proportional valve can open and allow the function to operate.

Note: Perform this procedure with the boom in the stowed position.

1 Pull out the red Emergency Stop button to the on position at both the ground and platform controls.

2 Turn the key switch to platform control. Do not start the engine.

3 Push in the platform controls red Emergency Stop button to the off position.

4 Do not press down the foot switch.

5 Move and hold the drive enable toggle switch in the right position and pull out the red Emergency Stop button to the on position.

6 When the alarm sounds, release the drive enable toggle switch.

7 Momentarily activate the drive enable toggle switch in the right direction 8 times.

⊙ Result: There should be a pause and the alarm should sound 8 times indicating that the machine is in threshold calibration mode.

8 Start the engine from the platform controls and press down the foot switch.

9 Select a boom function joystick to set the threshold.

10 Slowly move the joystick off center in either direction just until the function begins to move.

11 Slowly move the joystick back to the neutral position. Just before the function stops moving, move the drive enable toggle switch to either side to set the threshold.

⊙ Result: The alarm should sound indicating a successful calibration.

12 Repeat steps 9 through 11 for each boom joystick controlled machine function (boom up/down, boom extend/retract and turntable rotate).

13 Return the joystick to the neutral position and wait for approximately 10 seconds.

⊙ Result: The alarm should sound indicating that the settings have been saved in memory.

Note: Do not operate any machine function during the 10 second waiting time.

Platform Components

2-1 Platform Leveling Slave Cylinder

The slave cylinder and the rotator pivot are the two primary supports for the platform. The slave cylinder keeps the platform level through the entire range of boom motion. It operates in a closed-circuit hydraulic loop with the master cylinder. The slave cylinder is equipped with counterbalance valves to prevent movement in the event of a hydraulic line failure.

How to Remove the Platform Leveling Slave Cylinder

Note: Before cylinder removal is considered, bleed the slave cylinder to be sure there is no air in the closed loop.

Note: When removing a hose assembly or fitting, the O-ring on the fitting and/or hose end must be replaced and then torqued to specification during installation.
Refer to Section 2, *Hydraulic Hose and Fitting Torque Specifications.*

1 Extend the primary boom until the slave cylinder barrel-end pivot pin is accessible.

2 Raise the primary boom slightly and place blocks under the platform for support.

3 Lower the primary boom until the platform is resting on the blocks just enough to support the platform.

Note: Do not rest the entire weight of the boom on the blocks.

4 Tag, disconnect and plug the hydraulic hoses from the slave cylinder at the unions and connect them together using a connector. Connect the hoses from the cylinder together using a connector.

⚠WARNING Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

5 Remove the pin retaining fastener from the slave cylinder rod-end pivot pin. Do not remove the pin.

6 Remove the external snap rings from the slave cylinder barrel-end pivot pin. Do not remove the pin.

7 Place a block under the slave cylinder for support. Protect the cylinder rod from damage.

8 Use a soft metal drift to drive the rod-end pivot pin out.

⚠WARNING Crushing hazard. The platform could fall when the slave cylinder rod-end pivot pin is removed if not properly supported.

NOTICE Component damage hazard. The slave cylinder rod may become damaged if it is allowed to fall if not properly supported by the lifting device.

9 Use a soft metal drift and drive the barrel-end pin out.

10 Carefully pull the cylinder out of the primary boom.

PLATFORM COMPONENTS

How to Bleed the Slave Cylinder

Note: Do not start the engine. Use auxiliary power for this procedure.

1 Raise the primary boom to a horizontal position.

2 Move the platform level toggle switch up and down through two platform leveling cycles to remove any air that might be in the system.

2-2 Platform Rotator

How to Bleed the Platform Rotator

Note: This procedure will require two people. Do not start the engine. Use auxiliary power for this procedure.

1 Move the function enable toggle switch to either side and activate the platform rotate toggle switch to the right then the left through two platform rotation cycles, then hold the switch to the right position until the platform is fully rotated to the right.

2 Place a suitable container underneath the platform rotator.

3 Open the top bleed screw on the rotator, but do not remove it.

⚠WARNING Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

4 Move the function enable toggle switch to either side and hold the platform rotate toggle switch to the left position until the platform is fully rotated to the left. Continue holding the toggle switch until air stops coming out of the bleed screw. Close the bleed screw.

⚠WARNING Crushing hazard. Keep clear of the platform during rotation.

5 Open the bottom bleed screw on the rotator, but do not remove it.

⚠WARNING Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

6 Move the function enable toggle switch to either side and hold the platform rotate toggle switch to the right position until the platform is fully rotated to the right. Continue holding the toggle switch until air stops coming out of the bleed screw. Close the bleed screw.

⚠WARNING Crushing hazard. Keep clear of the platform during rotation.

7 Clean up any hydraulic oil that may have spilled.

8 Rotate the platform fully in both directions and inspect the bleed screws for leaks.

Jib Boom Components

3-1
Jib Boom

How to Remove the Jib Boom

Note: Perform this procedure with the boom in the stowed position.

Note: When removing a hose assembly or fitting, the O-ring on the fitting and/or hose end must be replaced and then torqued to specification during installation.
Refer to Section 2, *Hydraulic Hose and Fitting Torque Specifications.*

1 Remove the platform.

2 Disconnect the electrical connector from the jib boom/platform rotate select valve manifold mounted to the platform support.

3 Tag, disconnect and plug all of the hydraulic hoses from the jib boom/platform rotate select valve manifold. Cap the fittings on the manifold and pull the hoses out through the platform rotator.

⚠WARNING Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

4 Remove the platform mounting weldment.

5 Attach a lifting strap from an overhead crane to the platform rotator for support.

6 Remove the pin retaining fastener from the jib boom lift cylinder rod-end pivot pin. Do not remove the pin.

7 Remove the pin retaining fasteners from both platform rotator pivot pins. Do not remove the pins.

8 Use a soft metal drift to remove the leveling arm pivot pin and let the leveling arms hang down.

9 Use a soft metal drift to remove the platform rotator pivot pin and remove the platform rotator from the machine.

10 Slide both of the jib boom leveling arms off of the jib boom cylinder rod-end pivot pin.

11 Remove the hose and cable cover from the side of the jib boom. Remove the hose and cable separators.

12 Attach a lifting strap from an overhead crane to the jib boom.

13 Support the barrel end of the jib boom lift cylinder with a suitable lifting device.

14 Tag, disconnect and plug the jib boom lift cylinder hydraulic hoses. Cap the fittings on the cylinder.

⚠WARNING Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

15 Remove the pin retaining fastener from the jib boom lift cylinder barrel-end pivot pin.

16 Use a soft metal drift to remove the pin and let the cylinder hang down.

⚠WARNING Crushing hazard. The jib boom could fall when when the barrel-end pivot pin is removed if not properly supported by the overhead crane.

17 Remove the pin retaining fastener from the jib boom pivot pin. Use a soft metal drift to remove the pin, then remove the jib boom from the bellcrank.

⚠WARNING Crushing hazard. The jib boom could become unbalanced and fall when removed from the machine if not properly attached to the overhead crane.

18 Attach a lifting strap from an overhead crane to the lug on the rod end of the jib boom lift cylinder.

19 Use a soft metal drift to remove the jib boom lift cylinder rod-end pivot pin, then remove the jib boom lift cylinder from the bellcrank.

⚠WARNING Crushing hazard. The jib boom lift cylinder could become unbalanced and fall when removed from the machine if not properly attached to the overhead crane.

3-2
Jib Boom Lift Cylinder

How to Remove the Jib Boom Lift Cylinder

Note: Perform this procedure with the boom in the stowed position.

Note: When removing a hose assembly or fitting, the O-ring on the fitting and/or hose end must be replaced and then torqued to specification during installation. Refer to Section 2, *Hydraulic Hose and Fitting Torque Specifications.*

1 Raise the jib boom slightly and place blocks under the platform mounting weldment. Then lower the jib boom until the platform is resting on the blocks just enough to support the platform.

Note: Do not rest the entire weight of the boom on the blocks.

2 Tag, disconnect and plug the jib boom lift cylinder hydraulic hoses. Cap the fittings on the cylinder.

⚠WARNING Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

3 Remove the pin retaining fasteners from the jib boom lift cylinder rod-end pivot pin. Do not remove the pin.

JIB BOOM COMPONENTS

4 Use a soft metal drift to tap the jib boom lift cylinder rod-end pivot pin half way out. Then lower one of the leveling arms to the ground. Tap the pin the other direction and lower the opposite leveling arm. Do not remove the pin.

5 Support the jib boom lift cylinder with a suitable lifting device.

6 Remove the pin retaining fastener from the jib boom lift cylinder barrel-end pivot pin. Use a soft metal drift to remove the barrel-end pin and let the cylinder hang down.

⚠WARNING Crushing hazard. The jib boom could fall when the barrel-end pivot pin is removed if not properly supported by the overhead crane.

7 Attach a lifting strap from an overhead crane to the lug on the rod end of the jib boom lift cylinder.

8 Use a soft metal drift to remove the jib boom lift cylinder rod-end pin. Remove the jib boom lift cylinder from the machine.

⚠WARNING Crushing hazard. The jib boom lift cylinder could become unbalanced and fall when removed from the machine if not properly attached to the overhead crane.

Primary Boom Components

4-1 Cable Track

The primary boom cable track guides the cables and hoses running up the boom. It can be repaired link by link without removing the cables and hoses that run through it. Removing the entire primary boom cable track is only necessary when performing major repairs that involve removing the primary boom.

How to Remove the Cable Track

Note: When removing a hose assembly or fitting, the O-ring on the fitting and/or hose end must be replaced and then torqued to specification during installation. Refer to Section 2, *Hydraulic Hose and Fitting Torque Specifications*.

1 Locate the cables from the primary boom cable track to the platform control box. Number each cable and its entry location at the platform control box.

2 Disconnect the cables from the platform control box.

3 Remove the hose and cable cover from the side of the jib boom. Remove the hose and cable separators.

4 Remove the hose clamp on the primary boom bellcrank.

5 Pull all of the electrical cables out of the plastic cable track. Do not pull out the hydraulic hoses.

6 Tag, disconnect and plug the hydraulic hoses from the "V1" and "V2" ports on the counterbalance valve manifold located on the platform rotator. Cap the fittings on the manifold.

⚠WARNING Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

7 Tag and disconnect the hydraulic hoses from the platform leveling slave cylinder at the union and connect them together using a connector. Connect the hoses from the cylinder together using a connector.

⚠WARNING Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

8 Tag, disconnect and plug the hydraulic hoses from the jib boom/platform rotate manifold. Cap the fittings on the manifold.

⚠WARNING Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

PRIMARY BOOM COMPONENTS

9 Tag, disconnect and plug the platform rotator hydraulic hoses at the union located above the primary boom lift cylinder. Cap the fittings on the unions.

⚠WARNING Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

10 Tag, disconnect and plug the hydraulic hoses from the platform leveling master cylinder. Cap the fittings on the cylinder.

⚠WARNING Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

11 Raise the boom to a horizontal position.

12 Place blocks between the upper and lower cable tracks and secure the upper and lower tracks together.

⚠WARNING Crushing hazard. If the upper and lower cable tracks are not properly secured together, the cable track could become unbalanced and fall when removed from the machine.

13 Attach a lifting strap from an overhead 5 ton / 5,000 kg capacity crane to the platform end of the primary boom for support. Do not lift it.

14 Remove all hose and cable clamps from the underside of the primary boom.

15 Support the rod end of the primary boom lift cylinder with a suitable lifting device.

16 Remove the pin retaining fasteners from the primary boom lift cylinder rod-end pivot pin. Do not remove the pin.

17 Raise the primary boom slightly with the overhead crane to relieve the pressure on the primary boom lift cylinder rod-end pivot pin.

18 Use a soft metal drift to remove the primary boom lift cylinder rod-end pivot pin.

⚠WARNING Crushing hazard. The primary boom lift cylinder could become unbalanced and fall if not properly supported by the lifting device.

19 Lower the rod end of the primary boom lift cylinder approximately 12 inches / 30 cm.

20 Pull all of the hoses and cables out and away from the mounting ears for the rod end of the primary boom lift cylinder.

21 Raise the rod end of the primary boom lift cylinder back into position and install the rod-end pivot pin. Install the pin retaining fasteners.

22 Attach a strap from an overhead crane to the cable track.

23 Remove the mounting fasteners from the upper cable track at the platform end of the extension boom.

24 Remove the cable track mounting fasteners that attach the lower cable track to the primary boom.

25 Remove the cable track from the machine and place it on a structure capable of supporting it.


⚠WARNING Crushing hazard. The cable track could become unbalanced and fall if not properly attached to the overhead crane.

NOTICE Component damage hazard. Cables and hoses can be damaged if they are kinked or pinched.

How to Repair the Primary Boom Cable Track

NOTICE Component damage hazard. The primary boom cable track can be damaged if it is twisted.

Note: A 7 link repair section of cable track is available through
the Genie Industries Service Parts Department.

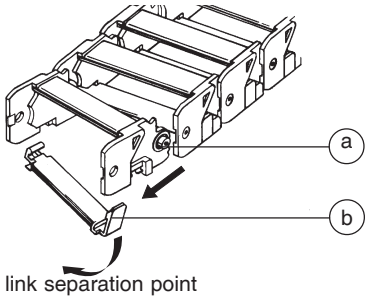

a link separation point
b lower clip

1 Use a slotted screwdriver to pry down on the lower clip.

2 To remove a single link, open the lower clip and then use a screw driver to pry the link to the side.

3 Repeat steps 1 and 2 for each link.

4-2
Primary Boom

How to Remove the Primary Boom

⚠WARNING Bodily injury hazard. This procedure requires specific repair skills, lifting equipment and a suitable workshop. Attempting this procedure without these skills and tools could result in death or serious injury and significant component damage. Dealer service is strongly recommended.

Note: Perform this procedure with the boom in the stowed position.

Note: When removing a hose assembly or fitting, the O-ring on the fitting and/or hose end must be replaced and then torqued to specification during installation. Refer to Section 2, *Hydraulic Hose and Fitting Torque Specifications.*

1 Remove the platform.

2 Remove the jib boom. See 3-1, *How to Remove the Jib Boom.*

3 Remove the cable track. See 4-1, *How to Remove the Cable Track.*

4 Raise the primary boom to a horizontal position.

5 Remove the hose and cable cover from the upper pivot.

PRIMARY BOOM COMPONENTS

6 Remove the pin retaining fastener from the master cylinder barrel-end pivot pin. Use a soft metal drift to remove the pin. Then lower the cylinder and let it hang down.

NOTICE Component damage hazard. When lowering the master cylinder down, be sure not to damage the master cylinder hoses or fittings.

7 Locate the primary boom drive speed limit switch inside of the upper pivot.

8 Remove the primary boom drive speed limit switch mounting fasteners. Do not disconnect the wiring.

9 Locate the primary extension boom drive speed limit switch inside of the extension boom.

10 Remove the primary extension boom drive speed limit switch mounting fasteners. Do not disconnect the wiring.

11 Pull the limit switch and the wiring out of the extension tube and move it out of the way.

12 Tag, disconnect and plug the primary boom extension cylinder hydraulic hoses. Cap the fittings on the cylinder.

⚠WARNING Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

13 Remove the hose clamp at the pivot end of the boom.

14 Attach a 5 ton / 5,000 kg overhead crane to the center point of the primary boom.

15 Attach a similar lifting device to the primary boom lift cylinder.

16 Place support blocks under the primary boom lift cylinder.

17 Remove the pin retaining fasteners from the primary boom lift cylinder rod-end pivot pin. Use a soft metal drift to remove the pin.

⚠WARNING Crushing hazard. The boom lift cylinder and primary boom will fall if not properly supported.

18 Lower the rod end of the primary boom lift cylinder onto support blocks. Protect the cylinder rod from damage.

19 Remove the pin retaining fasteners from the primary boom pivot pin.

20 Remove the primary boom pivot pin with a soft metal drift, then carefully remove the primary boom from the machine and place it on a structure capable of supporting it.

⚠WARNING Crushing hazard. The primary boom could become unbalanced and fall when removed from the machine if not properly attached to the overhead crane.

How to Disassemble the Primary Boom

Note: Complete disassembly of the boom is only necessary if the outer or inner boom tube must be replaced. The extension cylinder can be removed without completely disassembling the boom. See 4-4, *How to Remove the Primary Boom Extension Cylinder*.

1 Remove the primary boom. See *How to Remove the Primary Boom*.

2 Place blocks under the barrel end of the primary boom extension cylinder for support.

3 Remove the pin retaining fastener from the extension cylinder barrel-end pivot pin at the pivot end of the primary boom. Use a soft metal drift to remove the pin.

4 Remove and label the location of the wear pads from the platform end of the primary boom.

Note: Pay careful attention to the location and amount of shims used with each wear pad.

5 Support and slide the extension tube and extension cylinder assembly out of the boom tube.

⚠WARNING Crushing hazard. The primary boom extension tube could become unbalanced and fall when removed from the primary boom tube if not properly supported.

Note: During removal, the overhead crane strap will need to be carefully adjusted for proper balancing.

6 Remove the external snap rings from the extension cylinder rod-end pivot pin at the platform end of the extension tube. Use a soft metal drift to remove the pin.

7 Support and slide the extension cylinder out of the base end of the extension tube. Place the extension cylinder on blocks for support.

⚠WARNING Crushing hazard. The extension cylinder could become unbalanced and fall when removed from primary boom extension tube if not properly supported.

Note: During removal, the overhead crane strap will need to be carefully adjusted for proper balancing.

PRIMARY BOOM COMPONENTS

4-3 Primary Boom Lift Cylinder

The primary boom lift cylinder raises and lowers the primary boom. The primary boom lift cylinder is equipped with a counterbalance valve to prevent movement in the event of a hydraulic line failure.

How to Remove the Primary Boom Lift Cylinder

⚠WARNING Bodily injury hazard. This procedure requires specific repair skills, lifting equipment and a suitable workshop. Attempting this procedure without these skills and tools could result in death or serious injury and significant component damage. Dealer service is strongly recommended.

Note: When removing a hose assembly or fitting, the O-ring on the fitting and/or hose end must be replaced and then torqued to specification during installation. Refer to Section 2, *Hydraulic Hose and Fitting Torque Specifications.*

1 Raise the primary boom to a horizontal position.

2 Raise the secondary boom until the primary boom lift cylinder barrel-end pivot pin is above the turntable covers.

3 Attach a 5 ton / 5000 kg overhead crane to the primary boom for support.

4 Raise the primary boom with the overhead crane slightly to take the pressure off the primary boom lift cylinder pivot pins.

5 Support the rod end and the barrel end of the primary boom lift cylinder with a second overhead crane or similar lifting device.

6 Tag, disconnect and plug the primary boom lift cylinder hydraulic hoses. Cap the fittings on the cylinder.

⚠WARNING Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

7 Remove the pin retaining fasteners from the primary boom lift cylinder rod-end pivot pin. Use a soft metal drift to remove the pin.

⚠WARNING Crushing hazard. The primary boom will fall if not properly supported when the primary boom rod-end pivot pin is removed.

8 Place a support block across both turntable covers under the primary boom lift cylinder.

9 Lower the rod end of the lift cylinder onto the block. Protect the cylinder rod from damage.

⚠WARNING Crushing hazard. The primary boom lift cylinder could fall if not properly supported.

10 Remove the primary boom lift cylinder barrel-end pivot pin retaining fasteners. Do not remove the pin.

11 Use a slide hammer to remove the barrel-end pivot pin. Carefully remove the primary boom lift cylinder from the machine.

⚠WARNING Crushing hazard. The lift cylinder could become unbalanced and fall if not properly supported and secured to the lifting device.

4-4 Primary Boom Extension Cylinder

The primary boom extension cylinder extends and retracts the primary boom extension tube.The primary boom extension cylinder is equipped with counterbalance valves to prevent movement in the event of a hydraulic line failure.

How to Remove the Primary Boom Extension Cylinder

⚠WARNING Bodily injury hazard. This procedure requires specific repair skills, lifting equipment and a suitable workshop. Attempting this procedure without these skills and tools could result in death or serious injury and significant component damage. Dealer service is strongly recommended.

Note: When removing a hose assembly or fitting, the O-ring on the fitting and/or hose end must be replaced and then torqued to specification during installation. Refer to Section 2, *Hydraulic Hose and Fitting Torque Specifications.*

1 Raise the primary boom to a horizontal position.

2 Extend the primary boom until the primary boom extension cylinder rod-end pivot pin is accessible in the primary boom extension tube.

3 Remove the hose and cable guard from the upper pivot.

4 Tag, disconnect and plug the primary boom extension cylinder hydraulic hoses. Cap the fittings on the cylinder.

⚠WARNING Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

5 At the platform end of the boom, remove the external snap rings from the extension cylinder rod-end pivot pin. Use a soft metal drift to remove the pin.

6 Remove the barrel-end pivot pin retaining fasteners.

7 Place a rod through the barrel-end pivot pin and twist to remove the pin.

8 Support and slide the extension cylinder out of the upper pivot.

⚠WARNING Crushing hazard. The extension cylinder could fall when removed from the extension boom if not properly supported.

NOTICE Component damage hazard. Be careful not to damage the counterbalance valves on the primary boom extension cylinder when removing the cylinder from the primary boom.

NOTICE Component damage hazard. Hoses and cables can be damaged if the primary boom extension cylinder is dragged across them.

Note: Note the length of the cylinder after removal. The cylinder must be at the same length for installation.

PRIMARY BOOM COMPONENTS

4-5 Platform Leveling Master Cylinder

The master cylinder acts as a pump for the slave cylinder. It's part of the closed circuit hydraulic loop that keeps the platform level through the entire range of boom motion. The master cylinder is located at the base of the primary boom.

How to Remove the Platform Leveling Master Cylinder

Note: When removing a hose assembly or fitting, the O-ring on the fitting and/or hose end must be replaced and then torqued to specification during installation. Refer to Section 2, *Hydraulic Hose and Fitting Torque Specifications.*

1 Raise the secondary boom until both the rod-end and barrel-end pivot pins on the master cylinder are accessible.

2 Tag, disconnect and plug the master cylinder hydraulic hoses. Cap the fittings on the cylinder.

⚠WARNING Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

3 Attach overhead crane or similar lifting device to the master cylinder.

4 Remove the pin retaining fasteners from the master cylinder barrel-end pivot pin.


5 Place a rod through the barrel-end pivot pin and twist to remove the pin.

6 Remove the pin retaining fastener from the rod-end pivot pin.

7 Place a rod through the rod-end pivot pin and twist to remove the pin.


8 Remove the master cylinder from the machine.

⚠WARNING Crushing hazard. The master cylinder could become unbalanced and fall if not properly attached to the overhead crane.

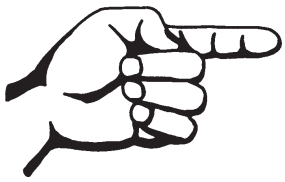

This page intentionally left blank.

Secondary Boom Components

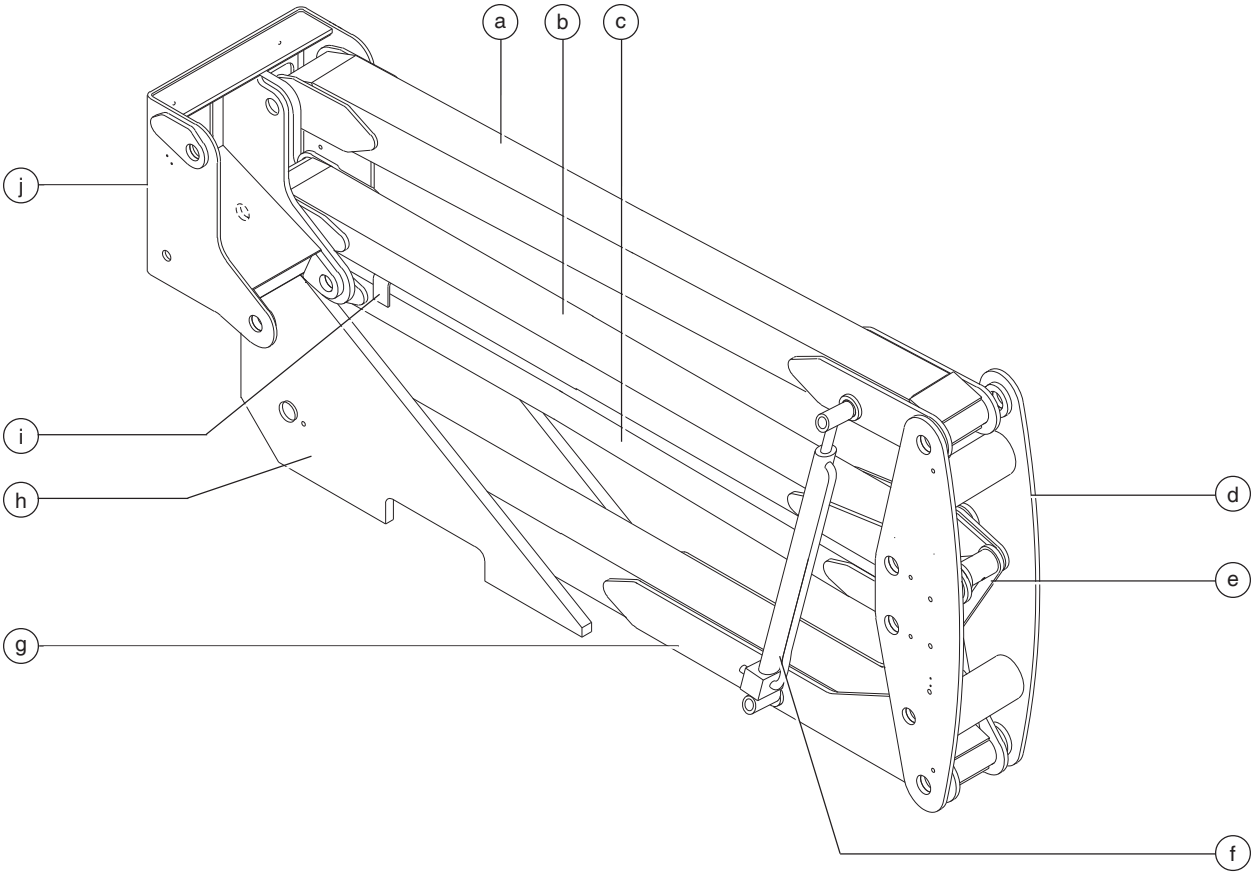

Secondary Boom components

a upper secondary boom (number 1 arm)
b upper tension link (number 2 arm)
c lower tension link (number 3 arm)
d mid-pivot
e compression link
f secondary boom lift cylinder (2)
g lower secondary boom (number 4 arm)
h turntable pivot
i boom rest
j upper pivot

5-1
Secondary Boom

How to Disassemble the Secondary Boom

⚠WARNING Bodily injury hazard. The procedures in this section require specific repair skills, lifting equipment and a suitable workshop. Attempting this procedure without these skills and tools could result in death or serious injury and significant component damage. Dealer service is required.

Follow the disassembly steps to the point required to complete the repair. Then re-assemble the secondary boom by following the disassembly steps in reverse order.

Note: When removing a hose assembly or fitting, the O-ring on the fitting and/or hose end must be replaced and then torqued to specification during installation. Refer to Section 2, *Hydraulic Hose and Fitting Torque Specifications.*

1 Remove the platform.

2 Remove the jib boom. See 3-1, *How to Remove the Jib Boom.*

3 Remove the primary boom. See 3-2, *How to Remove the Primary Boom*.

4 Remove the master cylinder. See 4-5, *How to Remove the Master Cylinder*.

5 Attach a lifting strap from an overhead crane to to the lug on the rod end of the primary boom lift cylinder. Then raise the primary boom lift cylinder with the crane, to a vertical position.

6 Tag, disconnect and plug the hydraulic hoses at the primary boom lift cylinder. Cap the fittings on the cylinder.

⚠WARNING Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

7 Remove the pin retaining fastener from the primary boom lift cylinder barrel-end pivot pin.

8 Use a slide hammer to remove the pin. Remove the primary boom lift cylinder from the machine.

⚠WARNING Crushing hazard. The primary boom lift cylinder could become unbalanced and fall if not properly supported by the overhead crane.

9 Tag, disconnect and plug the hydraulic hoses on both of the secondary boom lift cylinders. Cap the fittings on the cylinders.

⚠WARNING Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

SECONDARY BOOM COMPONENTS

10 Remove the pin retaining fasteners from both sides of the secondary boom lift cylinder rod-end pivot pin and barrel-end pivot pin. Do not remove the pins.

11 Attach a strap from an overhead crane to the lug on the rod end of one of the secondary boom lift cylinders for support. Do not apply any lifting pressure.

12 Use a soft metal drift to drive the barrel-end pivot pin half way out. Lower the barrel end of the secondary boom lift cylinder and let it hang down.

13 Use a soft metal drift to drive the rod-end pivot pin half way out.

14 Remove the secondary boom lift cylinder from the machine.

15 Repeat steps 11 through 14 for the other secondary boom lift cylinder.

⚠WARNING Crushing hazard. The secondary boom lift cylinder could become unbalanced and fall when removed from the machine if not properly attached to the overhead crane.

NOTICE Component damage hazard. When removing a secondary boom lift cylinder from the machine, be careful not to damage the counterbalance valve at the barrel end of the cylinder.

16 Attach a lifting strap from an overhead crane to the upper pivot for support. Do not lift it.

17 Attach a lifting strap from a second overhead crane to the number 1 arm at the mid-point between the upper pivot and mid-pivot.

18 Remove the pin retaining fasteners from the number 1 arm pivot pins at the mid-pivot and the upper pivot. Do not remove the pins.

19 Use a soft metal drift to drive both pins out.

20 Remove the number 1 arm from the machine.

⚠WARNING Crushing hazard. The number 1 arm could become unbalanced and fall when removed from the machine if not properly attached to the overhead crane.

⚠CAUTION Crushing hazard. The upper pivot could fall when the number 1 arm is removed from the machine if not properly supported by the overhead crane.

21 Using the overhead crane attached to the upper pivot, raise the secondary boom assembly approximately 30 inches / 76 cm.

22 Insert a 4 x 4 x 11 inch / 10 x 10 x 28 cm block between the number 2 arm and the boom rest. Then lower the secondary boom assembly onto the block.

⚠WARNING Crushing hazard. The secondary boom assembly could fall if not properly supported by the 4 x 4 x 11 inch / 10 x 10 x 28 cm block.

23 Pull all of the cables and hoses out through the upper pivot.

NOTICE Component damage hazard. Cables and hoses can be damaged if they are kinked or pinched.

24 Remove the hose and cable covers from the top of the number 2 arm.

25 Pull all of the hoses and cables out of the upper pivot and out through the mid-pivot. Lay the hoses and cables on the ground.

NOTICE Component damage hazard. Cables and hoses can be damaged if they are kinked or pinched.

26 Remove the pin retaining fastener from the number 2 arm pivot pin at the upper pivot. Use a soft metal drift to remove the pin.

27 Remove the upper pivot from the machine.

⚠WARNING Crushing hazard. The upper pivot could become unbalanced and fall when removed from the machine if not properly attached to the overhead crane.

28 Attach the lifting strap from an overhead crane to the number 2 arm at the upper pivot end.

29 Raise the number 2 arm slightly and remove the 4 x 4 x 11 inch / 10 x 10 x 28 cm block.

30 Lower the number 2 arm onto the boom rest pad.

31 Insert a 4 x 4 x 8 1/2 inch / 10 x 10 x 22 cm block between the number 3 arm and the number 4 arm at the mid-pivot end.

32 Attach a lifting strap from the overhead crane to the mid-pivot for support. Do not lift it.

33 Remove the pin retaining fasteners from the number 2, 3 and 4 arm pivot pins at the mid-pivot. Do not remove the pins.

34 Use a soft metal drift to drive each pin out. Then remove the mid-pivot from the secondary boom assembly.

⚠WARNING Crushing hazard. The mid-pivot could become unbalanced and fall when removed from the secondary boom assembly if not properly supported by the overhead crane.

35 Attach the lifting strap from an overhead crane to the center point of the number 2 arm for support. Do not lift it.

36 Remove the pin retaining fasteners from both compression link pivot pins. Do not remove the pins.

37 Use a soft metal drift to remove the lower compression link pivot pin at the number 3 arm.

38 Support the compression link with an appropriate lifting device.

SECONDARY BOOM COMPONENTS

39 Use a soft metal drift to remove the upper compression link pivot pin from the number 2 arm. Remove the compression link from the machine.

⚠WARNING Crushing hazard. The number 2 arm could fall when the compression link is disconnected from the number 2 arm if not properly supported by the overhead crane.

⚠CAUTION Crushing hazard. The compression link may fall if not properly supported when removed from the secondary boom assembly.

40 Remove the number 2 arm from the machine.

⚠WARNING Crushing hazard. The number 2 arm could become unbalanced and fall when removed from the secondary boom assembly if not properly supported by the overhead crane.

41 Remove the upper and lower hose and cable covers from the number 3 arm.

42 Pull all of the cables and hoses from the number 3 arm and lay them over the turntable counterweight.

NOTICE Component damage hazard. Cables and hoses can be damaged if they are kinked or pinched.

43 Open the ground controls side turntable cover.

44 Remove the fuel tank filler cap.

45 Using an approved hand-operated pump, drain the fuel tank into a container of suitable capacity. Refer to Section 2, *Specifications*.

⚠DANGER Explosion and fire hazard. Engine fuels are combustible. Perform this procedure in an open, well-ventilated area away from heaters, sparks, flames and lighted tobacco. Always have an approved fire extinguisher within easy reach.

⚠DANGER Explosion and fire hazard. When transferring fuel, connect a grounding wire between the machine and pump or contrainer.

Note: Be sure to only use a hand-operated pump suitable for use with gasoline and diesel fuel.

46 Tag, disconnect and plug the fuel hoses from the fuel tank. Clean up any fuel that may have spilled.

47 Remove the fuel tank mounting fasteners. Carefully remove the fuel tank from the machine.

NOTICE Component damage hazard. The fuel tank is plastic and may become damaged if allowed to fall.

Note: Clean the fuel tank and inspect for cracks and other damage before installing it onto the machine.

48 Remove the retaining fastener from the ground control box and function manifold pivot plate.

49 Lower the ground control box and function manifold pivot plate to access the number 3 arm pivot pin.

50 Attach the lifting strap from the overhead crane to the centerpoint of the number 3 arm for support. Do not lift it.

51 Remove the mounting fasteners from the cover located in the boom storage area to access the number 3 and number 4 arm pivot pin retaining fasteners at the turntable riser.

52 Remove the pin retaining fasteners from the number 3 arm at the turntable riser. Do not remove the pin.

53 Use a slide hammer to remove the number 3 arm pivot pin from the turntable pivot through the access hole behind the ground control box.

54 Remove the number 3 arm from the machine.

⚠WARNING Crushing hazard. The number 3 arm could become unbalanced and fall when removed from the machine if not properly supported by the overhead crane.

55 Remove the upper and lower hose and cable covers from the number 3 arm.

56 Remove the secondary boom drive speed limit switch mounting fasteners from the number 4 arm at the mid-pivot end. Do not disconnect the wiring.

57 Remove the pin retaining fasteners from the number 4 arm at the turntable riser. Do not remove the pin.

58 Attach a lifting strap from the overhead crane to the center point of the number 4 arm. Do not lift it.

59 Use a slide hammer to remove the number 4 arm from the turntable riser through the ground controls side bulkhead.

60 Remove the number 4 arm from the machine.

⚠WARNING Crushing hazard. The number 4 arm could become unbalanced and fall when removed from the machine if not properly supported by the overhead crane.

SECONDARY BOOM COMPONENTS

5-2
Secondary Boom Lift Cylinders

There are two secondary boom lift cylinders incorporated in the structure of the secondary boom assembly. These cylinders operate in parallel and require hydraulic pressure to extend and retract. Each secondary boom lift cylinder is equipped with a counterbalance valve to prevent movement in the event of a hydraulic line failure.

How to Remove a Secondary Boom Lift Cylinder

⚠WARNING Bodily injury hazard. This procedure requires specific repair skills, lifting equipment and a suitable workshop. Attempting this procedure without these skills and tools could result in death or serious injury and significant component damage. Dealer service is strongly recommended.

Note: When removing a hose assembly or fitting, the O-ring on the fitting and/or hose end must be replaced and then torqued to specification during installation. Refer to Section 2, *Hydraulic Hose and Fitting Torque Specifications*.

1 Lower the secondary boom to the stowed position.

2 Raise the primary boom so that it is above the secondary boom lift cylinder rod-end pivot pin.

3 Tag, disconnect and plug the hydraulic hoses on the secondary boom lift cylinder.

⚠WARNING Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

4 Remove the pin retaining fasteners from the secondary boom lift cylinder rod-end pivot pin and barrel-end pivot pin. Do not remove the pins.

5 Attach a strap from an overhead crane to the lug on the rod end of the secondary boom lift cylinder for support. Do not apply any lifting pressure.

6 Use a soft metal drift to drive the barrel-end pivot pin half way out. Lower the barrel end of the secondary boom lift cylinder and let it hang down.

7 Use a soft metal drift to drive the rod-end pivot pin half way out.

8 Remove the secondary boom lift cylinder from the machine.

⚠WARNING Crushing hazard. The secondary boom lift cylinder could become unbalanced and fall when removed from the machine if not properly attached to the overhead crane.

NOTICE Component damage hazard. When removing a secondary boom lift cylinder from the machine, be careful not to damage the counterbalance valve at the barrel end of the cylinder.

Engines

6-1 RPM Adjustment

Refer to Maintenance Procedure B-9, *Check and Adjust the Engine RPM.*

6-2 Flex Plate

The flex plate acts as a coupler between the engine and the pump. It is bolted to the engine flywheel and has a splined center to drive the pump.

How to Remove the Flex Plate

1 Disconnect the positive battery cable from the battery.

⚠WARNING Electrocution/burn hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

2 Disconnect the electrical connectors at the electrical proportional controller, located on the drive pump.

3 Support the drive pump with an appropriate lifting device. Then remove all of the bell housing to engine mounting bolts. Leave the pump connected to the bell housing.

4 Carefully pull the pump and bell housing away from the engine and secure it from moving.

NOTICE Component damage hazard. Hoses can be damaged if they are kinked or pinched.


5 Remove the flex plate mounting fasteners, then remove the flex plate from the engine flywheel.

How to Install the Flex Plate

1 Install the flex plate onto the engine flywheel with the raised spline towards the pump.


2 Torque the flex plate mounting bolts in sequence to 28 ft-lbs / 38 Nm.

3 Torque the flex plate mounting bolts in sequence to 40 ft-lbs / 54 Nm.

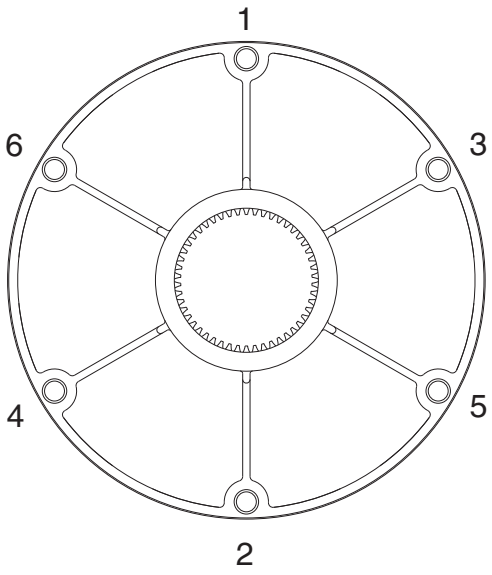

ENGINES

4 Install the pump coupler onto the pump shaft with the set screw toward the pump. Leave the appropriate gap between coupler and pump end plate for your engine.

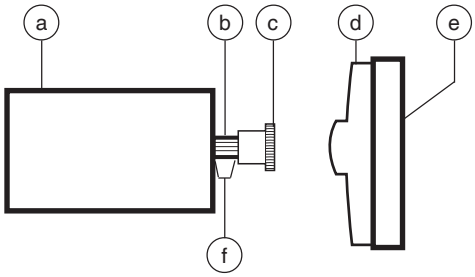

a pump
b pump shaft
c pump coupler
d flex plate with raised spline
e engine flywheel
f 7/16 inch / 11 mm gap


5 Apply Loctite® removable thread sealant to the pump coupler set screw. Torque the set screw to 61 ft-lbs / 83 Nm.

6 Install the pump and bell housing assembly. Torque the bell housing mounting bolts labeled "C" in sequence to 28 ft-lbs / 38 Nm.

NOTICE Component damage hazard. When installing the pump, do not force the pump coupler into the flexplate or damage to the pump shaft seal may occur.

NOTICE Component damage hazard. Do not force the drive pump during installation or the flex plate teeth may become damaged.

7 Torque the bell housing mounting bolts labeled "C" in sequence to 40 ft-lbs / 54 Nm.

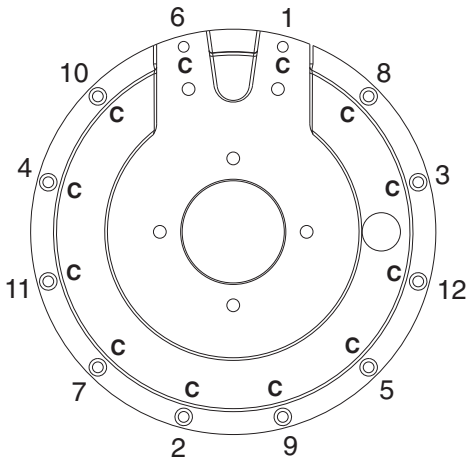


Hydraulic Pumps

7-1 Lift/Steer Pump

How to Remove the Lift/Steer Pump

Note: When removing a hose assembly or fitting, the O-ring on the fitting and/or hose end must be replaced and then torqued to specification during installation. Refer to Section 2, *Hydraulic Hose and Fitting Torque Specifications.*

1 Locate the two hydraulic tank valves at the hydraulic tank through the access hole underneath the turntable. Close the valves.

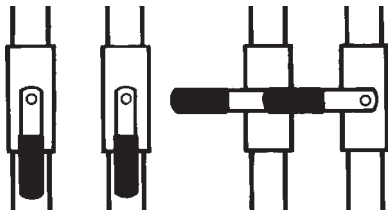

NOTICE Component damage hazard. The engine must not be started with the hydraulic tank shut-off valves in the closed position or component damage will occur. If the tank valves are closed, remove the key from the key switch and tag the machine to inform personnel of the condition.

2 Tag, disconnect and plug the lift/steer pump hydraulic hoses. Cap the fittings on the pump.

⚠WARNING Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

3 Remove the pump mounting bolts. Carefully remove the pump.

NOTICE Component damage hazard. Be sure to open the two hydraulic tank valves and prime the pump after installing the pump.

HYDRAULIC PUMPS

7-2 Drive Pump

The drive pump is a bi-directional variable displacement piston pump. The pump output is controlled by the electrical proportional controller, located on the pump. The only adjustment that can be made to the pump is the neutral or null adjustment. Any internal service to the pump should only be performed at an authorized service center. Call Genie Industries Service Department to locate your local authorized service center.


How to Remove the Drive Pump

NOTICE Component damage hazard. The work area and surfaces where this procedure will be performed must be clean and free of debris that could get into the hydraulic system and cause severe component damage. Dealer service is recommended.

Note: When removing a hose assembly or fitting, the O-ring on the fitting and/or hose end must be replaced and then torqued to specification during installation. Refer to Section 2, *Hydraulic Hose and Fitting Torque Specifications.*

1 Disconnect the electrical connectors at the electrical proportional controller located on the drive pump.

2 Locate the two hydraulic tank valves at the hydraulic tank through the access hole underneath the turntable. Close the valves.

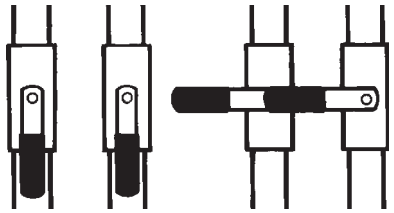

NOTICE Component damage hazard. The engine must not be started with the hydraulic tank shut-off valves in the closed position or component damage will occur. If the tank valves are closed, remove the key from the key switch and tag the machine to inform personnel of the condition.

3 Tag and disconnect and plug the hydraulic hoses from the drive and lift/steer pumps. Cap the fittings on the pumps.

⚠WARNING Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

4 Support the pump with a lifting device and remove the two drive pump mounting fasteners.

5 Carefully pull the drive pump out until the pump coupler separates from the flex plate.

6 Remove the drive pump from the machine.

NOTICE Component damage hazard. The hydraulic pump may become unbalanced and fall if not properly supported.

NOTICE Component damage hazard. When installing the pump, do not force the pump coupler into the flexplate or damage to the pump shaft seal may occur.

NOTICE Component damage hazard. Be sure to open the two hydraulic tank valves and prime the pump after installing the pump.

How to Prime the Pump


1 Connect a 0 to 600 psi / 0 to 41 bar pressure gauge to the test port on the drive pump.

2 Remove the safety pin (if equipped) from the engine pivot plate latch.

Note: The engine pivot plate latch is located under the engine turntable pivot plate at the counterweight end of the machine.

3 Open the engine pivot plate latch and swing the engine pivot plate out and away from the machine.

4 Hold the manual fuel shutoff valve clockwise to the closed position.

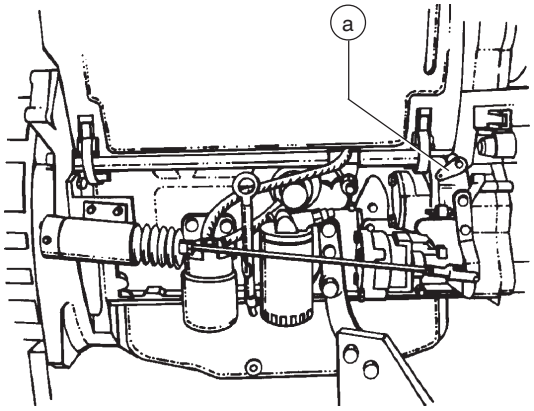

a manual fuel shutoff valve

5 Have another person crank the engine with the starter motor for 15 seconds, wait 15 seconds, then crank the engine an additional 15 seconds or until the pressure reaches 320 psi / 22 bar.

6 Release the manual fuel shutoff valve.

7 Start the engine from the ground controls and check for hydraulic leaks.

Manifolds


8-1
Function Manifold Components

The function manifold is located next to the hydraulic tank underneath the ground controls side cover.

Index No.	Description	Schematic Item	Function	Torque
1	Solenoid valve, 3 position 4 way	BM	Platform level up/down	25 ft-lbs / 34 Nm
2	Solenoid valve, 3 position 4 way	CG	Platform rotate left/right and jib boom up/down	25 ft-lbs / 34 Nm
3	Flow regulator valve, 2 gpm / 7.6 L/min	BZ	Boom extend/retract circuit	20 ft-lbs / 27 Nm
4	Solenoid valve, 2 position 3 way	CA	Primary boom extend	20 ft-lbs / 27 Nm
5	Proportional directional solenoid valve, 3 position 4 way	BY	Primary boom up/down	16-20 ft-lbs / 22-27 Nm
6	Differential sensing valve 160 psi / 11 bar	BG	Meters flow to functions	25 ft-lbs / 34 Nm
7	Proportional directional solenoid valve, 3 position 4 way	BP	Turntable rotate left/right	16-20 ft-lbs / 22-27 Nm
8	Proportional directional solenoid valve, 3 position 4 way	BU	Secondary boom up/down	16-20 ft-lbs / 22-27 Nm
9	Solenoid valve, 3 position 4 way	BF	Steer left/right	25 ft-lbs / 34 Nm
10	Relief valve, 2100 psi / 145 bar	BV	Secondary boom down	20 ft-lbs / 27 Nm
11	Orifice, 0.046 inch / 1.17 mm	CF	Secondary boom down circuit	
12	Check valve, 5psi / 0.3 bar	BT	Differential sensing circuit, secondary boom down	12-14 ft-lbs / 16-19 Nm
13	Check valve, 5psi / 0.3 bar	BW	Secondary boom circuit	25 ft-lbs / 34 Nm
14	Check valve, 5psi / 0.3 bar	BS	Differential sensing circuit, secondary boom up	12-14 ft-lbs / 16-19 Nm
15	Priority flow regulator valve, 1.5 gpm / 5.7 L/min	BB	Steer circuit	25 ft-lbs / 34 Nm
16	Relief valve, 3200 psi / 220.6 bar	BA	System relief	20 ft-lbs / 27 Nm
17	Shuttle valve	BO	Turntable rotate circuit	12-14 ft-lbs / 16-19 Nm
18	Check valve, 5psi / 0.3 bar	BQ	Differential sensing circuit, turntable rotate	12-14 ft-lbs / 16-19 Nm
19	Check valve, 5psi / 0.3 bar	CB	Differential sensing circuit, primary boom retract	12-14 ft-lbs / 16-19 Nm
20	Check valve, 5psi / 0.3 bar	BC	Differential sensing circuit, platform rotate left and jib boom up	25 ft-lbs / 34 Nm

This list continues. Please turn the page.

MANIFOLDS

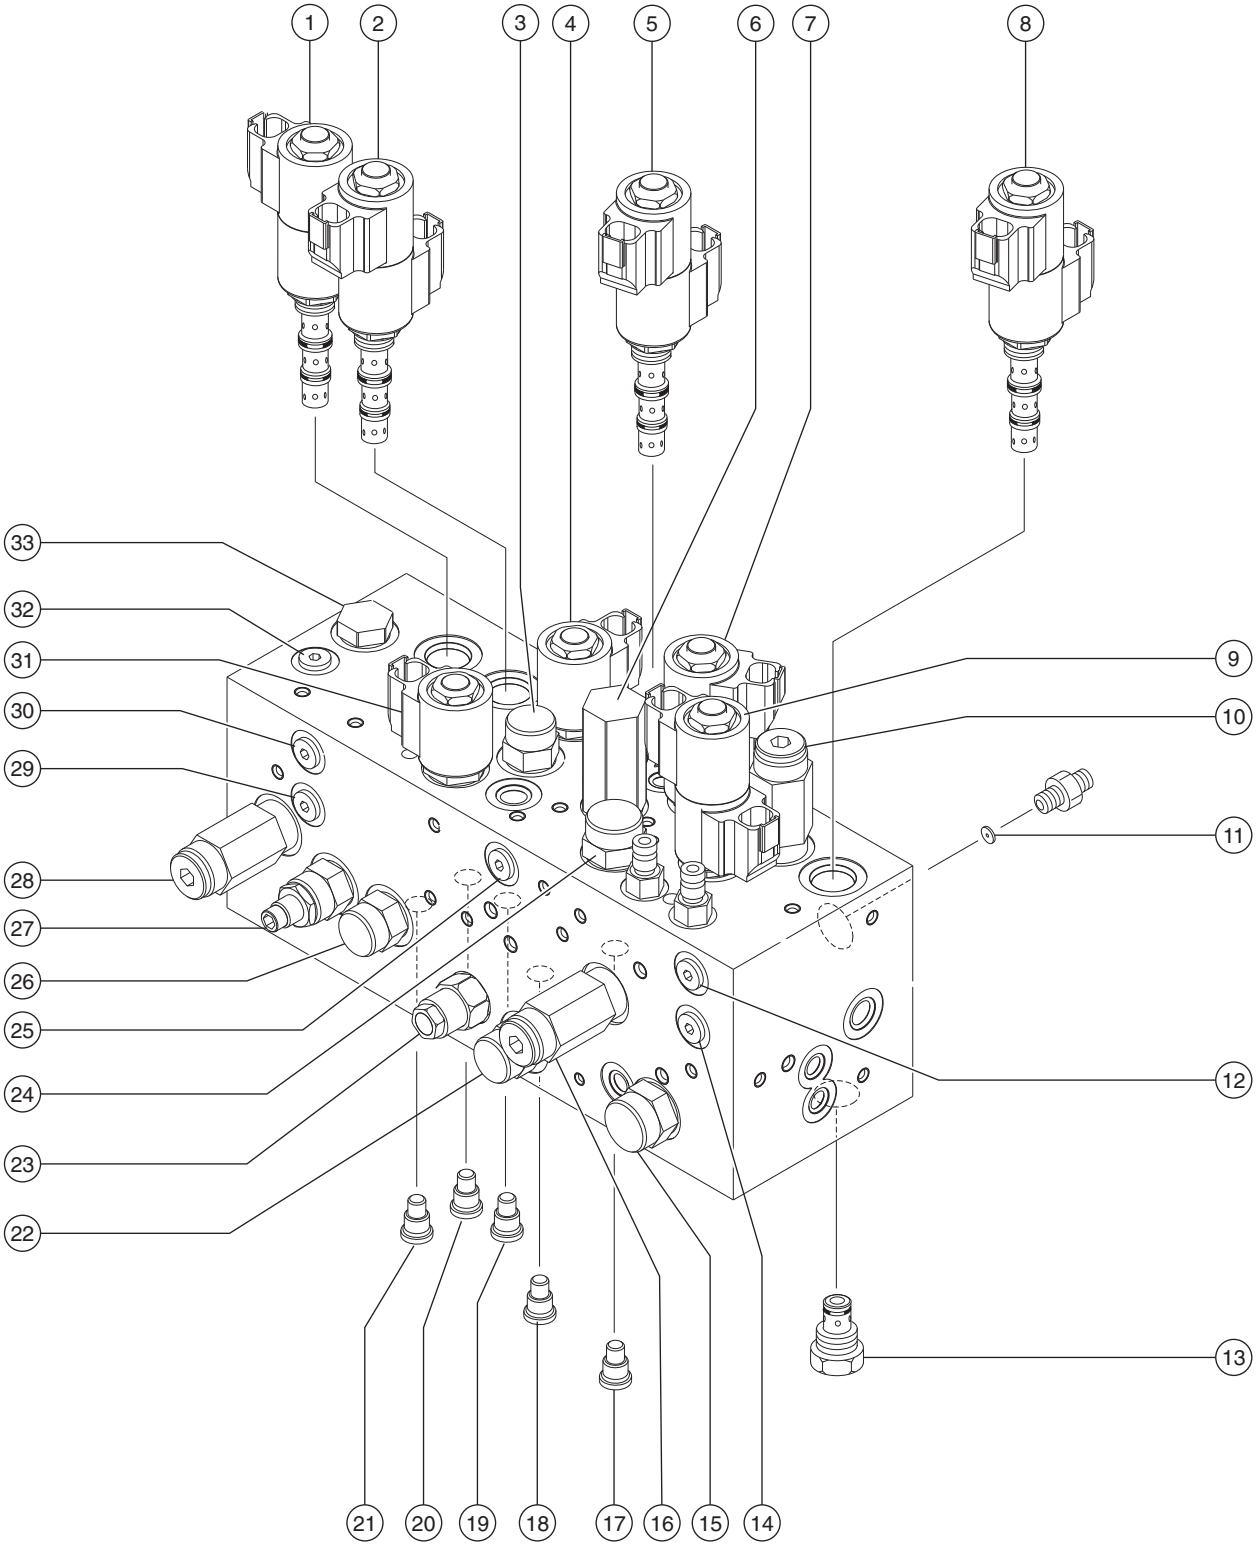

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33

MANIFOLDS

Function Manifold Components, continued

Index No.	Description	Schematic Item	Function	Torque
21	Check valve, 5 psi / 0.3 bar	BD	Differential sensing circuit, platform rotate right and jib boom down	25 ft-lbs / 34 Nm
22	Flow regulator valve, 0.1 gpm / 0.38 L/min	BX	Primary boom load sense circuit	20 ft-lbs / 27 Nm
23	Counterbalance valve, 3000 psi / 207 bar (before serial number 323) 1000 psi / 69 bar (after serial number 322)	CD	Primary boom down circuit	30-35 ft-lbs / 45-50 Nm
24	Pressure compensator valve, 80 psi / 5.5 bar	BR	Turntable rotate circuit	25 ft-lbs / 34 Nm
25	Shuttle valve	CE	Differential sensing circuit, primary boom up/down	12-14 ft-lbs / 16-19 Nm
26	Flow regulator valve, 0.4 gpm / 1.5 L/min	BE	Jib boom and platform rotate circuit	20 ft-lbs / 27 Nm
27	Needle valve	BN	Platform level flow control	20 ft-lbs / 27 Nm
28	Relief valve, 2500 psi / 172 bar	BH	Platform level circuit	20 ft-lbs / 27 Nm
29	Check valve, 5psi / 0.3 bar	BK	Differential sensing circuit, platform level up	12-14 ft-lbs / 16-19 Nm
30	Check valve, 5psi / 0.3 bar	BL	Differential sensing circuit, platform level down	12-14 ft-lbs / 16-19 Nm
31	Solenoid valve, 2 position 3 way	CC	Primary boom retract	20 ft-lbs / 27 Nm
32	Shuttle valve	BI	Platform level circuit	12-14 ft-lbs / 16-19 Nm
33	Check valve, dual pilot operated, 135 psi / 9.3 bar	BJ	Platform level circuit	20 ft-lbs / 27 Nm

MANIFOLDS

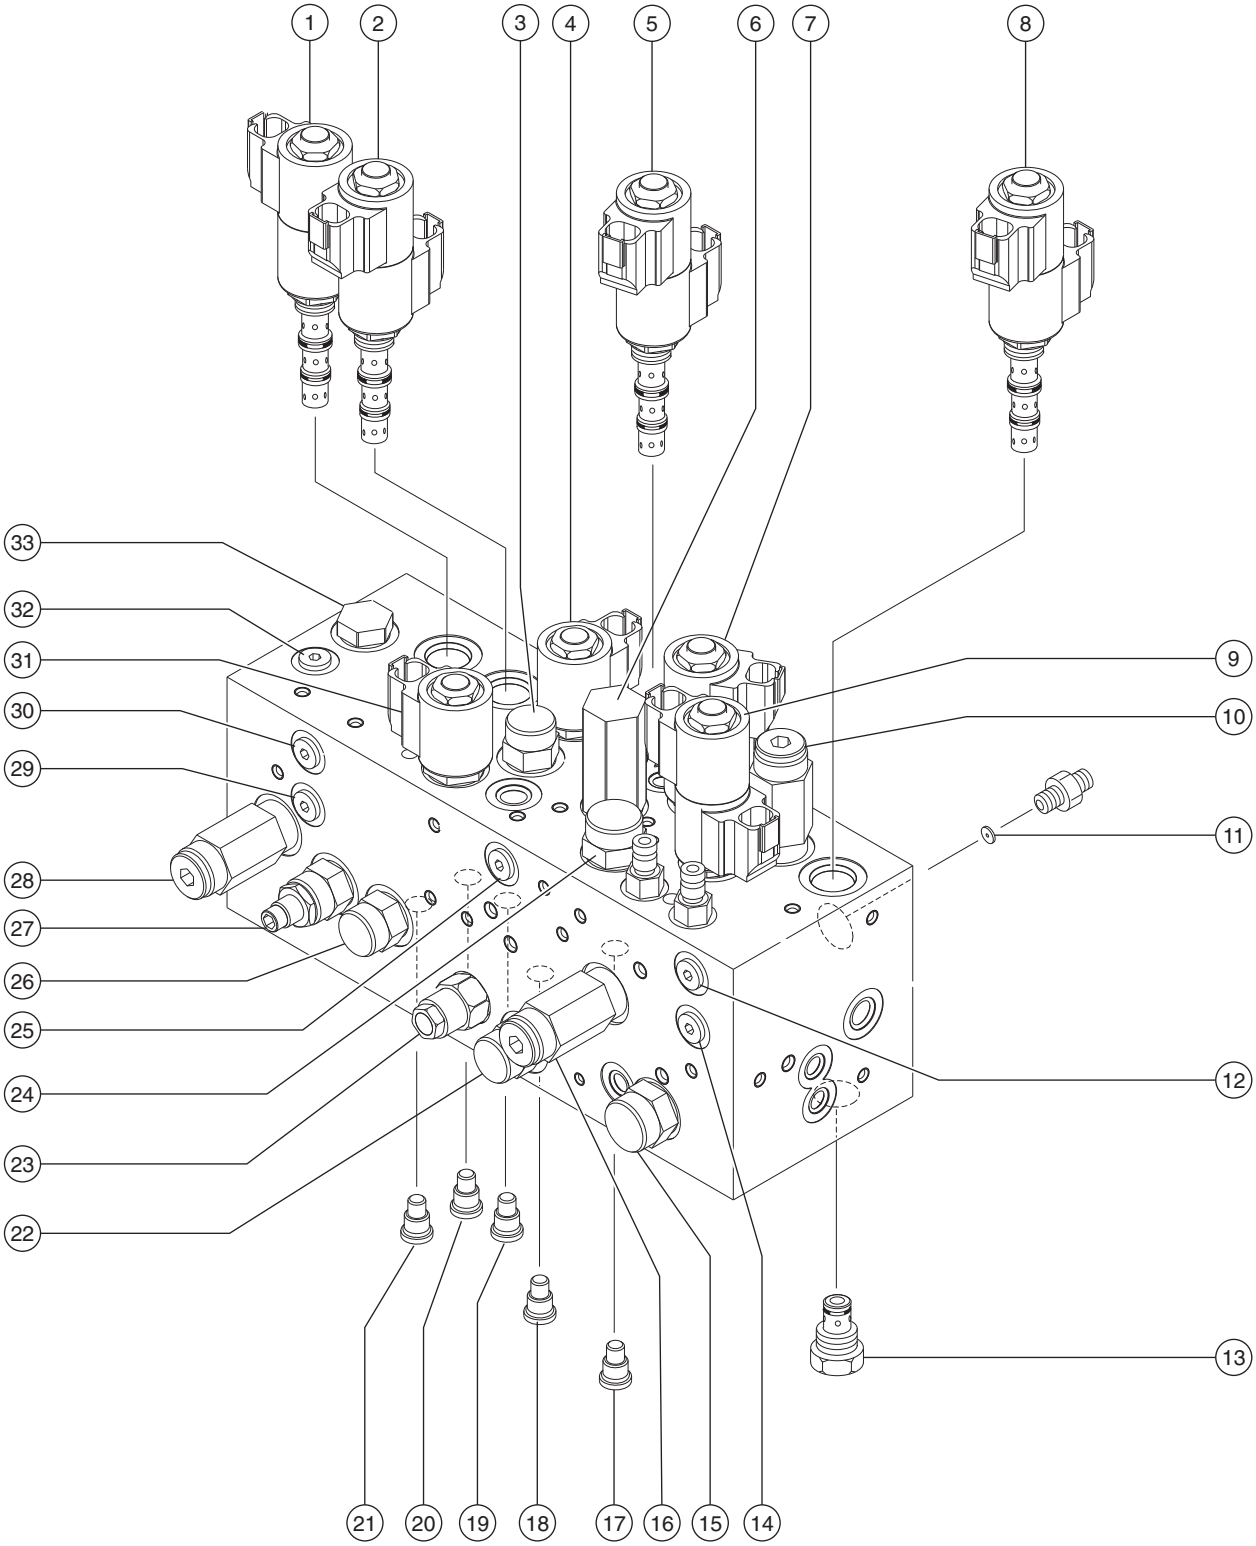
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33

MANIFOLDS

8-2 Valve Adjustments - Function Manifold

How to Adjust the System Relief Valve

Note: Perform this procedure with the boom in the stowed position.

1 Connect a 0 to 5000 psi / 0 to 350 bar pressure gauge to the TEST1 port on the function manifold.

2 Start the engine from the ground controls.

3 Hold the function enable switch to the high rpm position and activate and hold the primary boom retract switch with the boom fully retracted.

4 Observe the pressure reading on the pressure gauge. Refer to Section 2, *Specifications.*

5 Turn the engine off. Use a wrench to hold the relief valve and remove the cap (item BA).

6 Adjust the internal hex socket. Turn it clockwise to increase the pressure or counterclockwise to decrease the pressure. Install the relief valve cap.

⚠WARNING Tip-over hazard. Do not adjust the relief valve higher than specified.

7 Repeat steps 2 through 5 and recheck relief valve pressure.

8 Remove the pressure gauge.

How to Adjust the Secondary Boom Down Relief Valve

Note: Perform this procedure with the boom in the stowed position.

1 Connect a 0 to 5000 psi / 0 to 350 bar pressure gauge to the TEST1 port on the function manifold.

2 Start the engine from the ground controls.

3 Hold the function enable switch to the high rpm position and activate and hold the secondary boom down switch with the secondary boom fully lowered.

4 Observe the pressure reading on the pressure gauge. Refer to Section 2, *Specifications.*

5 Turn the engine off. Use a wrench to hold the relief valve and remove the cap (item BV).

6 Adjust the internal hex socket. Turn it clockwise to increase the pressure or counterclockwise to decrease the pressure. Install the relief valve cap.

⚠WARNING Tip-over hazard. Do not adjust the relief valve higher than specified.


7 Repeat steps 2 through 5 and recheck relief valve pressure.

8 Remove the pressure gauge.

8-3
Jib Boom / Platform Rotate Manifold Components

The jib boom / platform rotate manifold is mounted to the platform support.

Index No.	Description	Schematic Item	Function	Torque
1	Solenoid valve, 2 position 3 way	G	Platform rotate/jib boom select	8-10 ft-lbs / 11-14 Nm

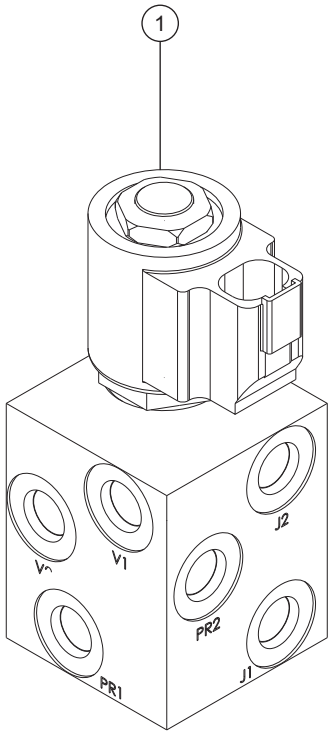


MANIFOLDS

8-4
Turntable Rotation Manifold Components

The turntable rotation manifold is mounted to the turntable rotation motor located in the boom storage compartment.


Index No.	Description	Schematic Item	Function
1	Counterbalance valve	L	Turntable rotate right
2	Counterbalance valve	J	Turntable rotate left

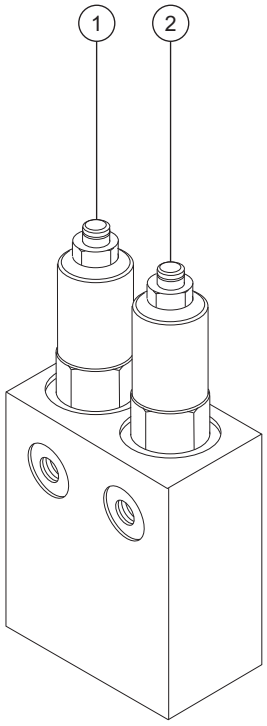

8-5
Directional Valve Manifold Components

The directional valve manifold is mounted inside the drive chassis at the non-steer end.

Index No.	Description	Function	Torque
1	Cap	Breather	20-25 ft-lbs / 27-33 Nm
2	Spool valve	Directional control	

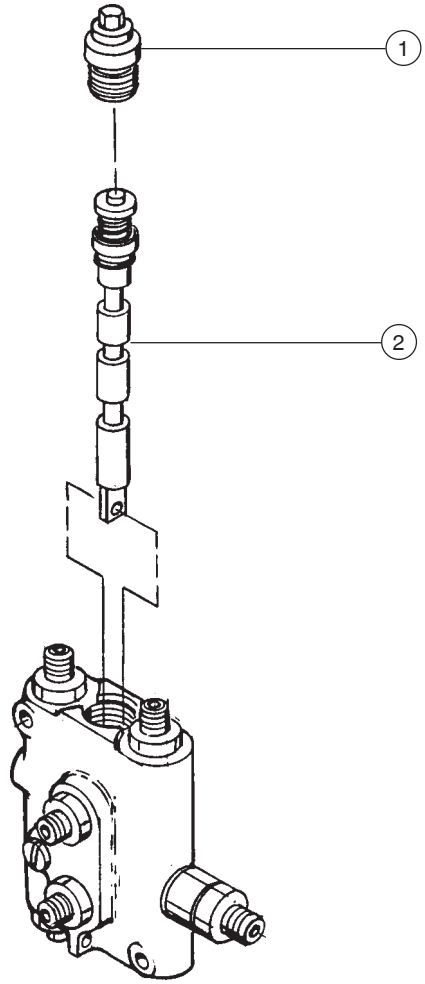

MANIFOLDS

How to Set Up the Directional Valve Linkage

Note: Adjustment of the directional valve linkage is only necessary when the linkage or valve has been replaced.

1 Lower the boom to the stowed position.

2 Use a "bubble type" level to be sure the floor is completely level.

⚠WARNING Tip-over hazard. Failure to perform this procedure on a level floor could compromise the stability of the machine resulting in the machine tipping over.

3 Check the tire pressure in all four tires and add air if needed to meet specification.

4 Remove the drive chassis cover and the non-steer axle covers.

5 Place a "bubble type" level across the drive chassis non-steer end. Check to be sure the drive chassis is completely level.

6 To level the drive chassis, start the engine and loosen the lock nuts on both sides of the urethane cushions.

7 Push up or pull down on the threaded rod until the machine is completely level.


8 Verify that the ground and drive chassis are completely level.

9 Tighten the nuts on both sides of the urethane cushions until they are snug. Tighten the locknuts.

10 Check to be sure the drive chassis is completely level.

11 Measure the distance between the drive chassis and the non-steer axle on both sides (from the inside of the drive chassis).

Note: If the distance is not equal and the adjustment to the linkage was completed with the ground and drive chassis level, repeat steps 6 through 10 OR consult Genie Industries Service Department.

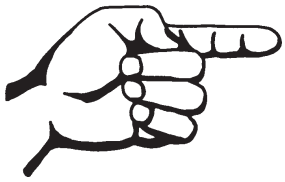


This page intentionally left blank.

MANIFOLDS

8-6
Traction Manifold Components

The traction manifold is mounted inside the drive chassis at the non-steer end.

Index No.	Description	Schematic Item	Function	Torque
1	Flow divider/combiner valve	U	Controls flow to non-steer end drive motors in forward and reverse	25-30 ft-lbs / 34-41 Nm
2	Bi-directional flow control valve, 2 gpm / 7.6 L/min	Z	Non-steer end drive motor circuit	25-30 ft-lbs / 34-41 Nm
3	Bi-directional flow control valve, 1 gpm / 3.8 L/min	X	Steer end drive motor circuit	25-30 ft-lbs / 34-41 Nm
4	Directional control valve	AV	2 speed motor shift circuit/ High speed bypass	10-12 ft-lbs / 14-16 Nm
5	Diagnostic fitting		Testing	
6	Shuttle valve, 3 position 3 way	R	Charge pressure circuit that directs hot oil out of low pressure side of drive pump and allows low pressure flow path for brake release and 2-speed motor shift	15-18 ft-lbs / 20-24 Nm
7	Relief valve, 250 psi / 17.2 bar	AD	Charge pressure circuit	10-12 ft-lbs / 14-16 Nm
8	Solenoid valve, 2 position 3 way	AG	2-speed motor shift	10-12 ft-lbs / 14-16 Nm
9	Orifice, 0.030 inch / 0.76 mm	AE	Brake and 2-speed motor shift circuit	
10	Solenoid valve, 2 position 3 way	AF	Braking	10-12 ft-lbs / 14-16 Nm
11	Check valve	AH	2 speed motor shift circuit	10-12 ft-lbs / 14-16 Nm
12	Orifice, 0.025 inch / 0.64 mm	AI	2 speed motor shift circuit	
13	Flow divider/combiner valve	V	Controls flow to flow divider/combiner valves 1 and 17	25-30 ft-lbs / 34-41 Nm
14	Check valve	AC	Steer end drive motor circuit	10-12 ft-lbs / 14-16 Nm
15	Orifice, 0.052 in / 1.32 mm	Y	Drive circuit	
16	Check valve	T	Steer end drive motor circuit	10-12 ft-lbs / 14-16 Nm
17	Flow divider/combiner valve	W	Controls flow to steer end drive motors in forward and reverse	25-30 ft-lbs / 34-41 Nm
18	Check valve	S	Non-steer end drive motor circuit	10-12 ft-lbs / 14-16 Nm
19	Check valve	AA	Non-steer end drive motor circuit	10-12 ft-lbs / 14-16 Nm

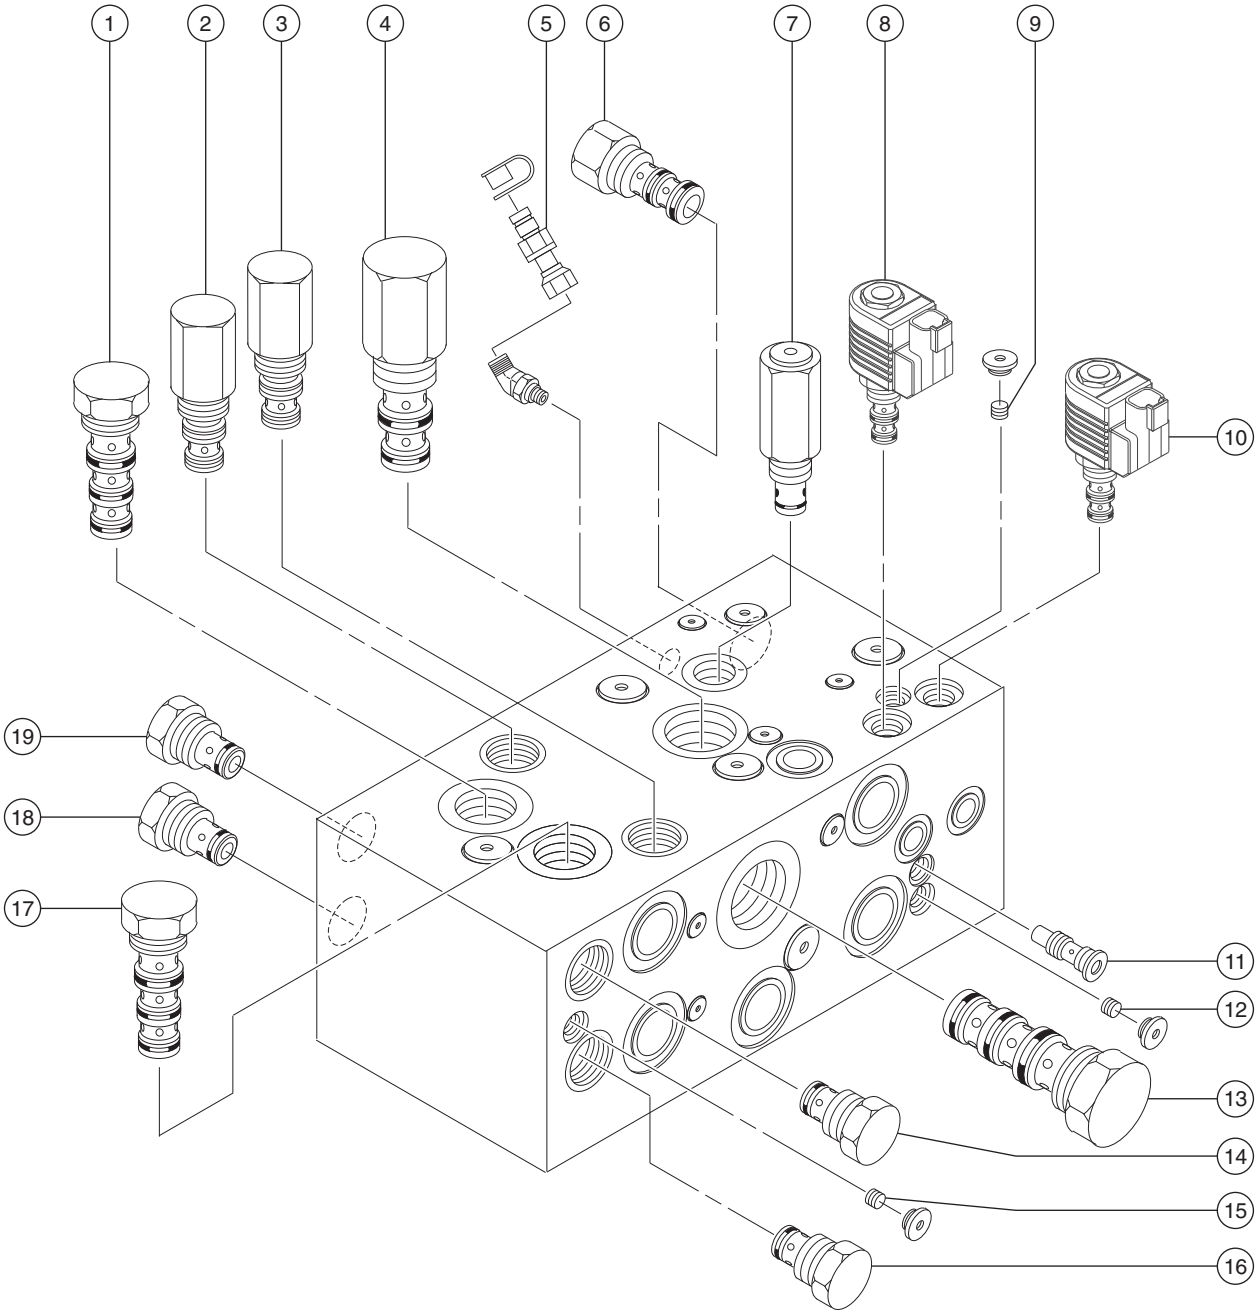
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19

MANIFOLDS

8-7 Valve Adjustments, Traction Manifold

How to Adjust the Charge Pressure Relief Valve

1 Connect a 0 to 600 psi / 0 to 50 bar pressure gauge to the test port on the drive pump.

2 Hold the charge pressure relief valve at the traction manifold and remove the cap (item AD).

3 Turn the internal hex socket clockwise fully until it stops. Install the cap.

4 Start the engine and move and hold the function enable/rpm select toggle switch to the high rpm (rabbit symbol) position. Note the reading on the pressure gauge.

5 Turn the engine off.

6 Remove the pressure gauge from the drive pump. Connect the gauge to the test port located on the traction manifold.

7 Hold the charge pressure relief valve and remove the cap (item AD).

8 Start the engine and move and hold the function enable/rpm select toggle switch to the high rpm (rabbit symbol) position.

9 Adjust the internal hex socket until the pressure reading on the gauge is 40 psi / 2.8 bar less than the pressure reading on the pump. Turn it clockwise to increase the pressure or counterclockwise to decrease the pressure. Install the valve cap.

10 Turn the engine off and remove the pressure gauge.

8-8 Valve Coils

How to Test a Coil

A properly functioning coil provides an electromotive force which operates the solenoid valve. Critical to normal operation is continuity within the coil that provides this force field.

⚠WARNING Electrocution/burn hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

1 Tag and disconnect the wiring from the coil to be tested.

2 Test the coil resistance.

⊙ Result: The resistance should be within specification, plus or minus 30%.

⊙ Result: If the resistance is not within specification, plus or minus 30%, replace the coil.

Valve Coil Resistance Specification	
Proportional directional solenoid valve, 10V DC (schematic items BP, BU and BY)	6 to 8Ω
3 position 4 way directional valve, 10V DC (schematic items BF, BM and CG)	6 to 8Ω
2 position 3 way solenoid valve, 10V DC (schematic items CA, CC, G, AF and AG)	6 to 8Ω

How to Test a Coil Diode

Properly functioning coil diodes protect the electrical circuit by suppressing voltage spikes. Voltage spikes naturally occur within a function circuit following the interruption of electrical current to a coil. Faulty diodes can fail to protect the electrical system, resulting in a tripped circuit breaker or component damage.


⚠WARNING Electrocution/burn hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

1 Test the coil for resistance. See, *How to Test a Coil.*

2 Connect a 10Ω resistor to the negative terminal of a known good 9V DC battery. Connect the other end of the resistor to a terminal on the coil.

Resistor, 10Ω	
Genie part number	27287

Note: The battery should read 9V DC or more when measured across the terminals.

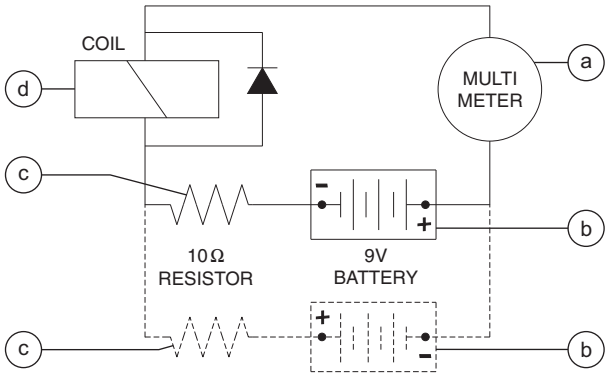

a multimeter
b 9V DC battery
c 10Ω resistor
d coil

Note: Dotted lines in illustration indicate a reversed connection as specified in step 6

3 Set a multimeter to read DC current.

Note: The multimeter, when set to read DC current, should be capable of reading up to 800 mA.

4 Connect the negative lead to the other terminal on the coil.

5 Momentarily connect the positive lead from the multimeter to the positive terminal on the 9V DC battery. Note and record the current reading.

6 At the battery or coil terminals, reverse the connections. Note and record the current reading.

⊙ Result: Both current readings are greater than 0 mA and are different by a minimum of 20%. The coil is good.

⊠ Result: If one or both of the current readings are 0 mA, or if the two current readings do not differ by a minimum of 20%, the coil and/or its internal diode are faulty and the coil should be replaced.

Turntable Rotation Components

9-1
Turntable Rotation Assembly


How to Remove the Turntable Rotation Assembly


Note: When removing a hose assembly or fitting, the O-ring on the fitting and/or hose end must be replaced and then torqued to specification during installation.
Refer to Section 2, *Hydraulic Hose and Fitting Torque Specifications.*

1 Raise the secondary boom until the upper pivot is above the turntable covers. Turn the machine off.

2 Secure the turntable from rotating with the turntable rotation lock.

Note: Tip-over hazard. The machine could tip over when the turntable rotation assembly is removed if the turntable rotation lock is not in the locked position.

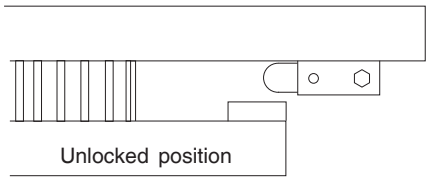

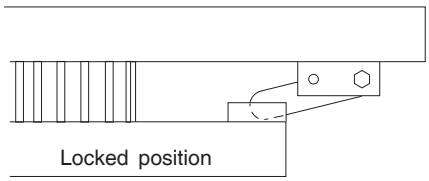

3 Remove the safety pin from the engine pivot plate latch.

Note: The engine pivot plate latch is located under the engine turntable pivot plate at the counterweight end of the machine.

4 Remove the center turntable cover retaining fasteners. Remove the center turntable cover from the machine.

5 Open the engine pivot plate latch and swing the engine pivot plate out and away from the machine.

6 Tag, disconnect and plug the hydraulic hoses from the turntable rotation motor manifold. Cap the fittings on the manifold.

⚠WARNING Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

7 Attach a lifting strap from and overhead crane or other suitable lifting device to the turntable rotator assembly.

8 Remove the turntable rotation assembly mounting fasteners.

9 Carefully remove the turntable rotation assembly from the machine.

⚠DANGER Tip-over hazard. The machine could tip over when the turntable rotation assembly is removed if the turntable rotation lock is not in the locked position.

⚠WARNING Crushing hazard. The turntable rotation assembly could become unbalanced and fall when removed from the machine if not properly supported by the overhead crane.

Axle Components

10-1 Oscillating Axle Lock-out Cylinders

The oscillating axle cylinders extend and retract between the drive chassis and the oscillating axle. The cylinders are equipped with counterbalance valves to prevent movement in the event of a hydraulic line failure. The valves are not adjustable.

How to Remove an Oscillating Axle Cylinder

Note: Perform this procedure on a firm, level surface with the boom in the stowed position.

Note: When removing a hose assembly or fitting, the O-ring on the fitting and/or hose end must be replaced and then torqued to specification during installation. Refer to Section 2, *Hydraulic Hose and Fitting Torque Specifications.*

1 Tag, disconnect and plug the oscillating axle cylinder hydraulic hoses. Cap the fittings on the oscillate cylinder.

⚠WARNING Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

2 Remove the pin retaining fasteners from the rod-end pivot pin. Use a soft metal drift to remove the pin.


3 Attach a lifting strap from an overhead crane to the barrel end of the oscillating cylinder.

4 Remove the pin retaining fasteners from the barrel-end pivot pin. Use a soft metal drift to remove the pin.

⚠CAUTION Crushing hazard. The oscillate cylinder may become unbalanced and fall when removed from the machine if not properly attached to the overhead crane.

5 Remove the oscillate cylinder from the machine.

AXLE COMPONENTS

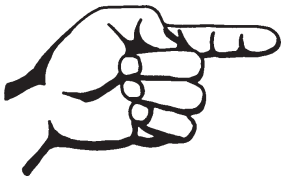

This page intentionally left blank.

Fault Codes



Observe and Obey:

- ☑ Troubleshooting and repair procedures shall be completed by a person trained and qualified on the repair of this machine.
- ☑ Immediately tag and remove from service a damaged or malfunctioning machine.
- ☑ Repair any machine damage or malfunction before operating the machine.
- ☑ Unless otherwise specified, perform each repair procedure with the machine in the following configuration:
  - Machine parked on a firm, level surface
  - Boom in stowed position
  - Turntable rotated with the boom between the non-steer wheels
  - Turntable secured with the turntable rotation lock
  - Key switch in the off position with the key removed
  - Wheels chocked
  - All external AC power disconnected from the machine

Before Troubleshooting:

- ☑ Read, understand and obey the safety rules and operating instructions in the appropriate Operator's Manual on your machine.
- ☑ Be sure that all necessary tools and test equipment are available and ready for use.
- ☑ Read each appropiate fault code thoroughly. Attempting shortcuts may produce hazardous conditions.
- ☑ Be aware of the following hazards and follow generally accepted safe workshop practices.

⚠DANGER Crushing hazard. When testing or replacing any hydraulic component, always support the structure and secure it from movement.

⚠WARNING Electrocution/burn hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

⚠WARNING Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

Note: Perform all troubleshooting on a firm level surface.

Note: Two persons will be required to safely perform some troubleshooting procedures.

FAULT CODES

Fault Codes - Control System

How to Retrieve Control System Fault Codes

Note: At least one fault code is present when the alarm at the platform controls produces two short beeps every 30 seconds for 10 minutes.

Note: Perform this procedure with the engine off, the key switch turned to platform controls and the red Emergency Stop button pulled out to the on position at both the ground and platform controls.

1 Open the platform control box lid.

⚠WARNING Electrocution/burn hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

2 Locate the red and yellow fault LEDs on the ALC-500 circuit board inside the platform control box. Do not touch the circuit board.

NOTICE Component damage hazard. Electrostatic discharge (ESD) can damage printed circuit board components. If the circuit board does need to be handled, maintain firm contact with a metal part of the machine that is grounded at all times when handling the printed circuit board OR use a grounded wrist strap.

3 **Determine the error source:** The red LED indicates the error source and will flash two separate codes. The first code will indicate the first digit of the two digit code, flashing once per second. It will then pause for 1.5 seconds and flash the second digit once per 0.5 second.

Note: When the red LED is flashing the code, the yellow LED will be on solid.

4 **Determine the error type:** The yellow LED indidates the error type and will flash two separate codes. The first code will indicate the first digit of the two digit code, flashing once per second. It will then pause for 1.5 seconds and flash the second digit once per 0.5 second.

Note: When the yellow LED is flashing the code, the red LED will be on solid.

5 Use the fault code table on the following pages to aid in troubleshooting the machine by pinpointing the area or component affected.

FAULT CODES

Error Source		Error Type		Condition	Solution
ID	Name	ID	Name		
21	Boom 1 Joystick (primary boom up/down)	11 12 15 16	Value at 5V Value too high Value too low Value at 0V	Limited speed and direction frozen at zero and neutral. Alarm sounds indicating fault.	Power up controller with problem corrected.
		17	Not calibrated	Joystick speed and direction frozen at zero and neutral.	Calibrate joystick.
		18	Just calibrated	Initiate 1-second beep of alarm.	Self-clearing. (transient)
22	Boom 1 directional valves	21	Fault	Limited speed and direction frozen at zero and neutral. Alarm sounds indicating fault.	Power up controller with problem corrected.
23	Boom 1 flow control valve	12 15	Value too high Value too low	Limited speed and direction frozen at zero and neutral. Alarm sounds indicating fault.	Power up controller with problem corrected.
		17	Not calibrated	Normal function **except** threshold for one or both directions is zero.	Calibrate valve thresholds.
		18	Just calibrated		Self-clearing. (transient)
31	Boom 2 Joystick (secondary boom up/down or primary boom extend/retract)	11 12 15 16	Value at 5V Value too high Value too low Value at 0V	Limited speed and direction frozen at zero and neutral. Alarm sounds indicating fault.	Power up controller with problem corrected.
		17	Not calibrated	Joystick speed and direction frozen at zero and neutral.	Calibrate joystick.
		18	Just calibrated	Initiate 1 second beep of alarm.	Self-clearing. (transient)
32	Boom 2 directional valves	21	Fault	Limited speed and direction frozen at zero and neutral. Alarm sounds indicating fault.	Power up controller with problem corrected.


Continued on next page

FAULT CODES

Error Source		Error Type		Condition	Solution
ID	**Name**	**ID**	**Name**		
33	Boom 2 flow control valve	12 15	Value too high Value too low	Limited speed and direction frozen at zero and neutral. Alarm sounds indicating fault.	Power up controller with problem corrected.
		17	Not calibrated	Normal function **except** threshold for one or both directions is zero.	Calibrate valve thresholds.
		18	Just calibrated		Self-clearing. (transient)
41	Turntable rotate joystick	11 12 15 16	Value at 5V Value too high Value too low Value at 0V	Limited speed and direction frozen at zero and neutral. Alarm sounds indicating fault.	Power up controller with problem corrected.
		17	Not calibrated	Joystick speed and direction frozen at zero and neutral.	Calibrate joystick.
		18	Just calibrated	Initiate 1-second beep of alarm.	Self-clearing. (transient)
42	Turntable rotate directional valves	21	Fault	Limited speed and direction frozen at zero and neutral. Alarm sounds indicating fault.	Power up controller with problem corrected.
43	Turntable rotate flow control valve	12 15	Value too high Value too low	Limited speed and direction frozen at zero and neutral. Alarm sounds indicating fault.	Power up controller with problem corrected.
		17	Not calibrated	Normal function **except** threshold for one or both directions is zero.	Calibrate valve thresholds.
		18	Just calibrated		Self-clearing. (transient)
44	Drive enable override switches	21	Fault	Enable override direction is frozen at neutral.	Power up controller with problem corrected.

FAULT CODES

Error Source		Error Type		Condition	Solution
ID	**Name**	**ID**	**Name**		
51	Drive joystick	11 12 15 16	Value at 5V Value too high Value too low Value at 0V	Limited speed and direction frozen at zero and neutral. Alarm sounds indicating fault.	Power up controller with problem corrected.
		17	Not calibrated	Joystick speed and direction frozen at zero and neutral.	Calibrate joystick
		18	Just calibrated	Initiate 1-second beep of alarm.	Self-clearing. (transient)
53	Drive flow valve (EDC)	12 15	Value too high Value too low	Limited speed and direction frozen at zero and neutral. Alarm sounds indicating fault.	Power up controller with problem corrected.
		17	Not calibrated	Normal function **except** threshold for one or both directions is zero.	Calibrate valve thresholds
		18	Just calibrated		Self-clearing. (transient)
54	Drive brake valve	21	Fault	Limited speed and direction frozen at zero and neutral. Alarm sounds indicating fault.	Power up controller with problem corrected.
55	High speed drive motor Valve	21	Fault	Motor speed frozen in the low state. Alarm sounds indicating fault.	Power up controller with problem corrected.
61	Steer joystick	11 12 15 16	Value at 5V Value too high Value too low Value at 0V	Limited speed and direction frozen at zero and neutral. Alarm sounds indicating fault.	Power up controller with problem corrected.
		17	Not calibrated	Joystick speed and direction frozen at zero and neutral.	Calibrate Joystick
		18	Just calibrated	Initiate 1-second beep of alarm.	Self-clearing. (transient)
62	Steer directional valves	21	Fault	Limited speed and direction frozen at zero and neutral. Alarm sounds indicating fault.	Power up controller with problem corrected.

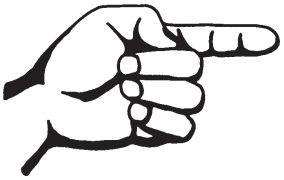

This page intentionally left blank.

Schematics



Observe and Obey:

- ☑ Troubleshooting and repair procedures shall be completed by a person trained and qualified on the repair of this machine.
- ☑ Immediately tag and remove from service a damaged or malfunctioning machine.
- ☑ Repair any machine damage or malfunction before operating the machine.

Before Troubleshooting:

- ☑ Read, understand and obey the safety rules and operating instructions in the appropriate Operator's Manual on your machine.
- ☑ Be sure that all necessary tools and test equipment are available and ready for use.

About This Section

There are two groups of schematics in this section. An illustration legend precedes each group of drawings.


Electrical Schematics

⚠WARNING Electrocution/burn hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.


Hydraulic Schematics

⚠WARNING Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

Electrical Symbols Legend



Quick disconnect terminal




T-circuits connect at terminal


T-circuits connect


Connection no terminal


Circuits crossing no connection


Diode




Battery




Circuit breaker with amperage


Coil solenoid or relay



Horn or alarm



Flashing beacon



Gauge



Hour meter




LED




Fuse with amperage



Starting aid: glow plug or flame ignitor

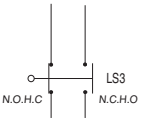

Limit switch

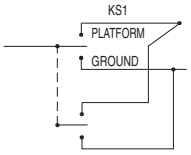


Key switch
(before serial number 22051)




Power relay




Toggle switch SPDT

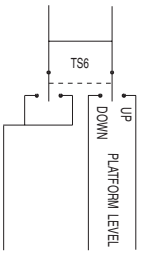


Toggle switch DPDT




Control relay contact normally open



Horn button normally open



Oil temperature switch normally open




Coolant temperature switch normally open




Oil pressure switch normally closed


Gauge sending unit




Fuel or RPM solenoid


Coil




Foot switch




Emergency Stop button normally closed




Hydraulic oil cooling fan




Auxiliary pump




Resistor with ohm value


Tilt sensor



Key switch
(after serial number 22050)

Hydraulic Symbols Legend

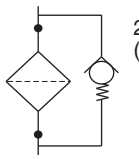

Filter with bypass valve relief setting



Pump fixed displacement



Pump bi-directional, variable displacement




Motor bi-directional



Motor 2-speed, bi-directional



Pump prime mover (engine or motor)




Double acting cylinder




Orifice with size




Check valve

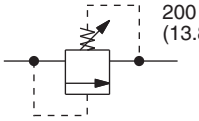


Relief valve with pressure setting

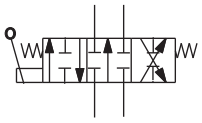


Directional valve (mechanically activated)




Flow divider/combiner valve with pressure balancing orifice and flow percentages




Pilot operated 3 position, 3 way, shuttle valve

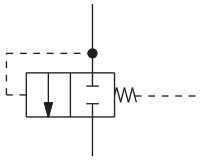


Differential sensing valve

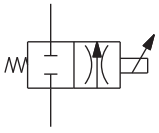


Solenoid operated proportional valve

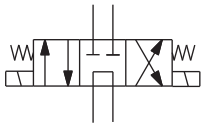


Solenoid operated 3 position, 4 way, directional valve




Priority flow regulator valve




Solenoid operated 2 position, 3 way, directional valve

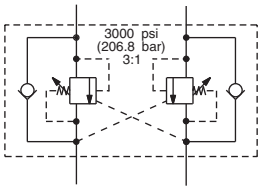


Counterbalance valve with pressure and pilot ratio




2 position, 2 way solenoid valve



Directional valve pilot operated 2 position, 2 way




Solenoid operated 3 position, 4 way, proportional directional valve



2 position, 3 way, shuttle valve




Brake

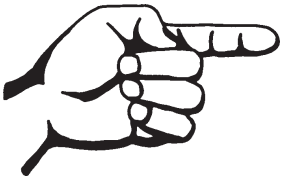


This page intentionally left blank.

Electrical Schematic




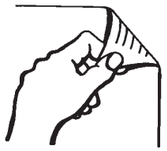

Electrical Schematic

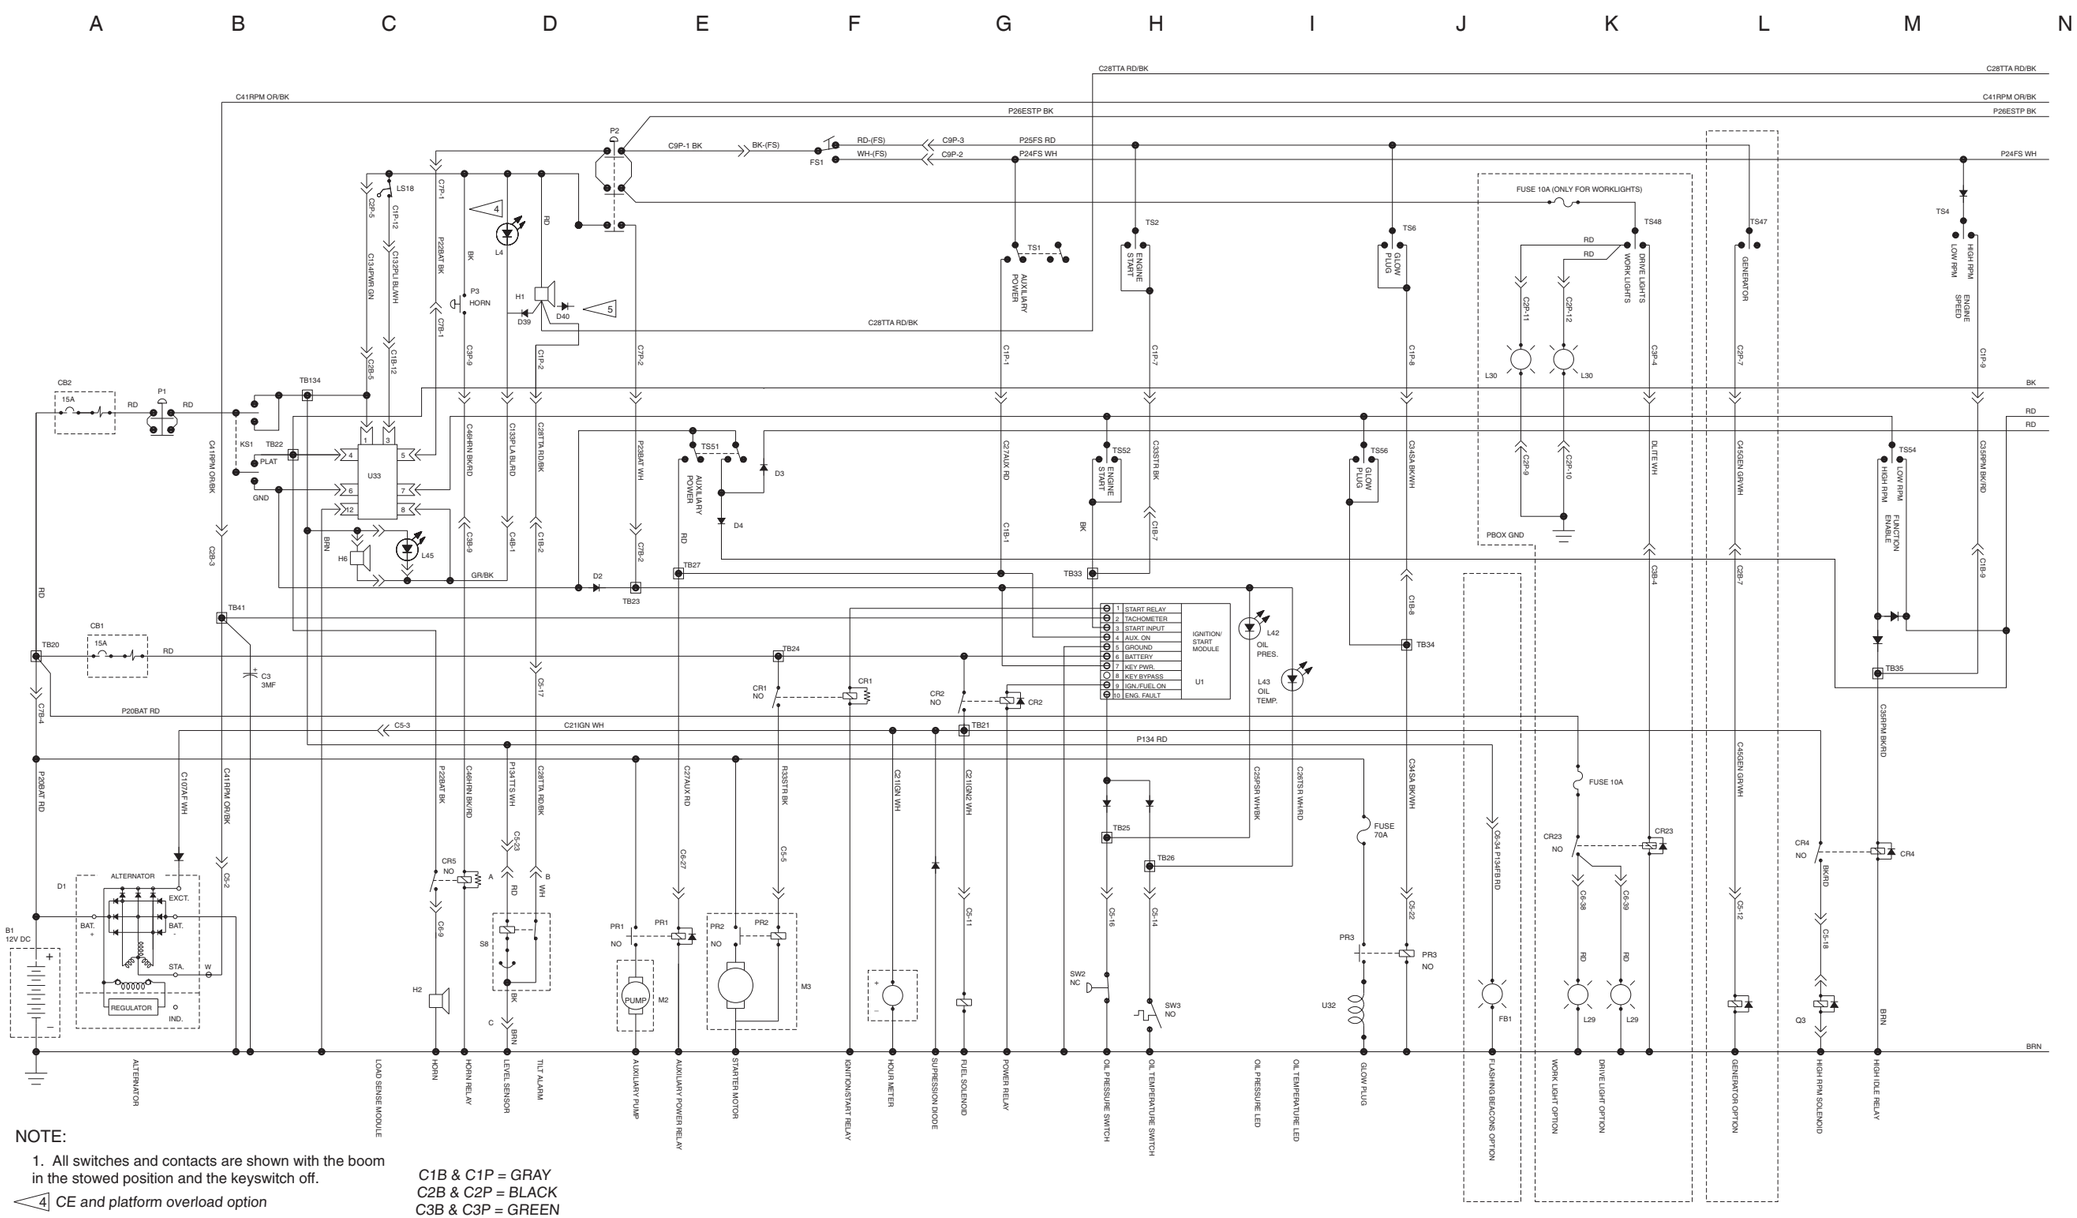

Electrical Schematic

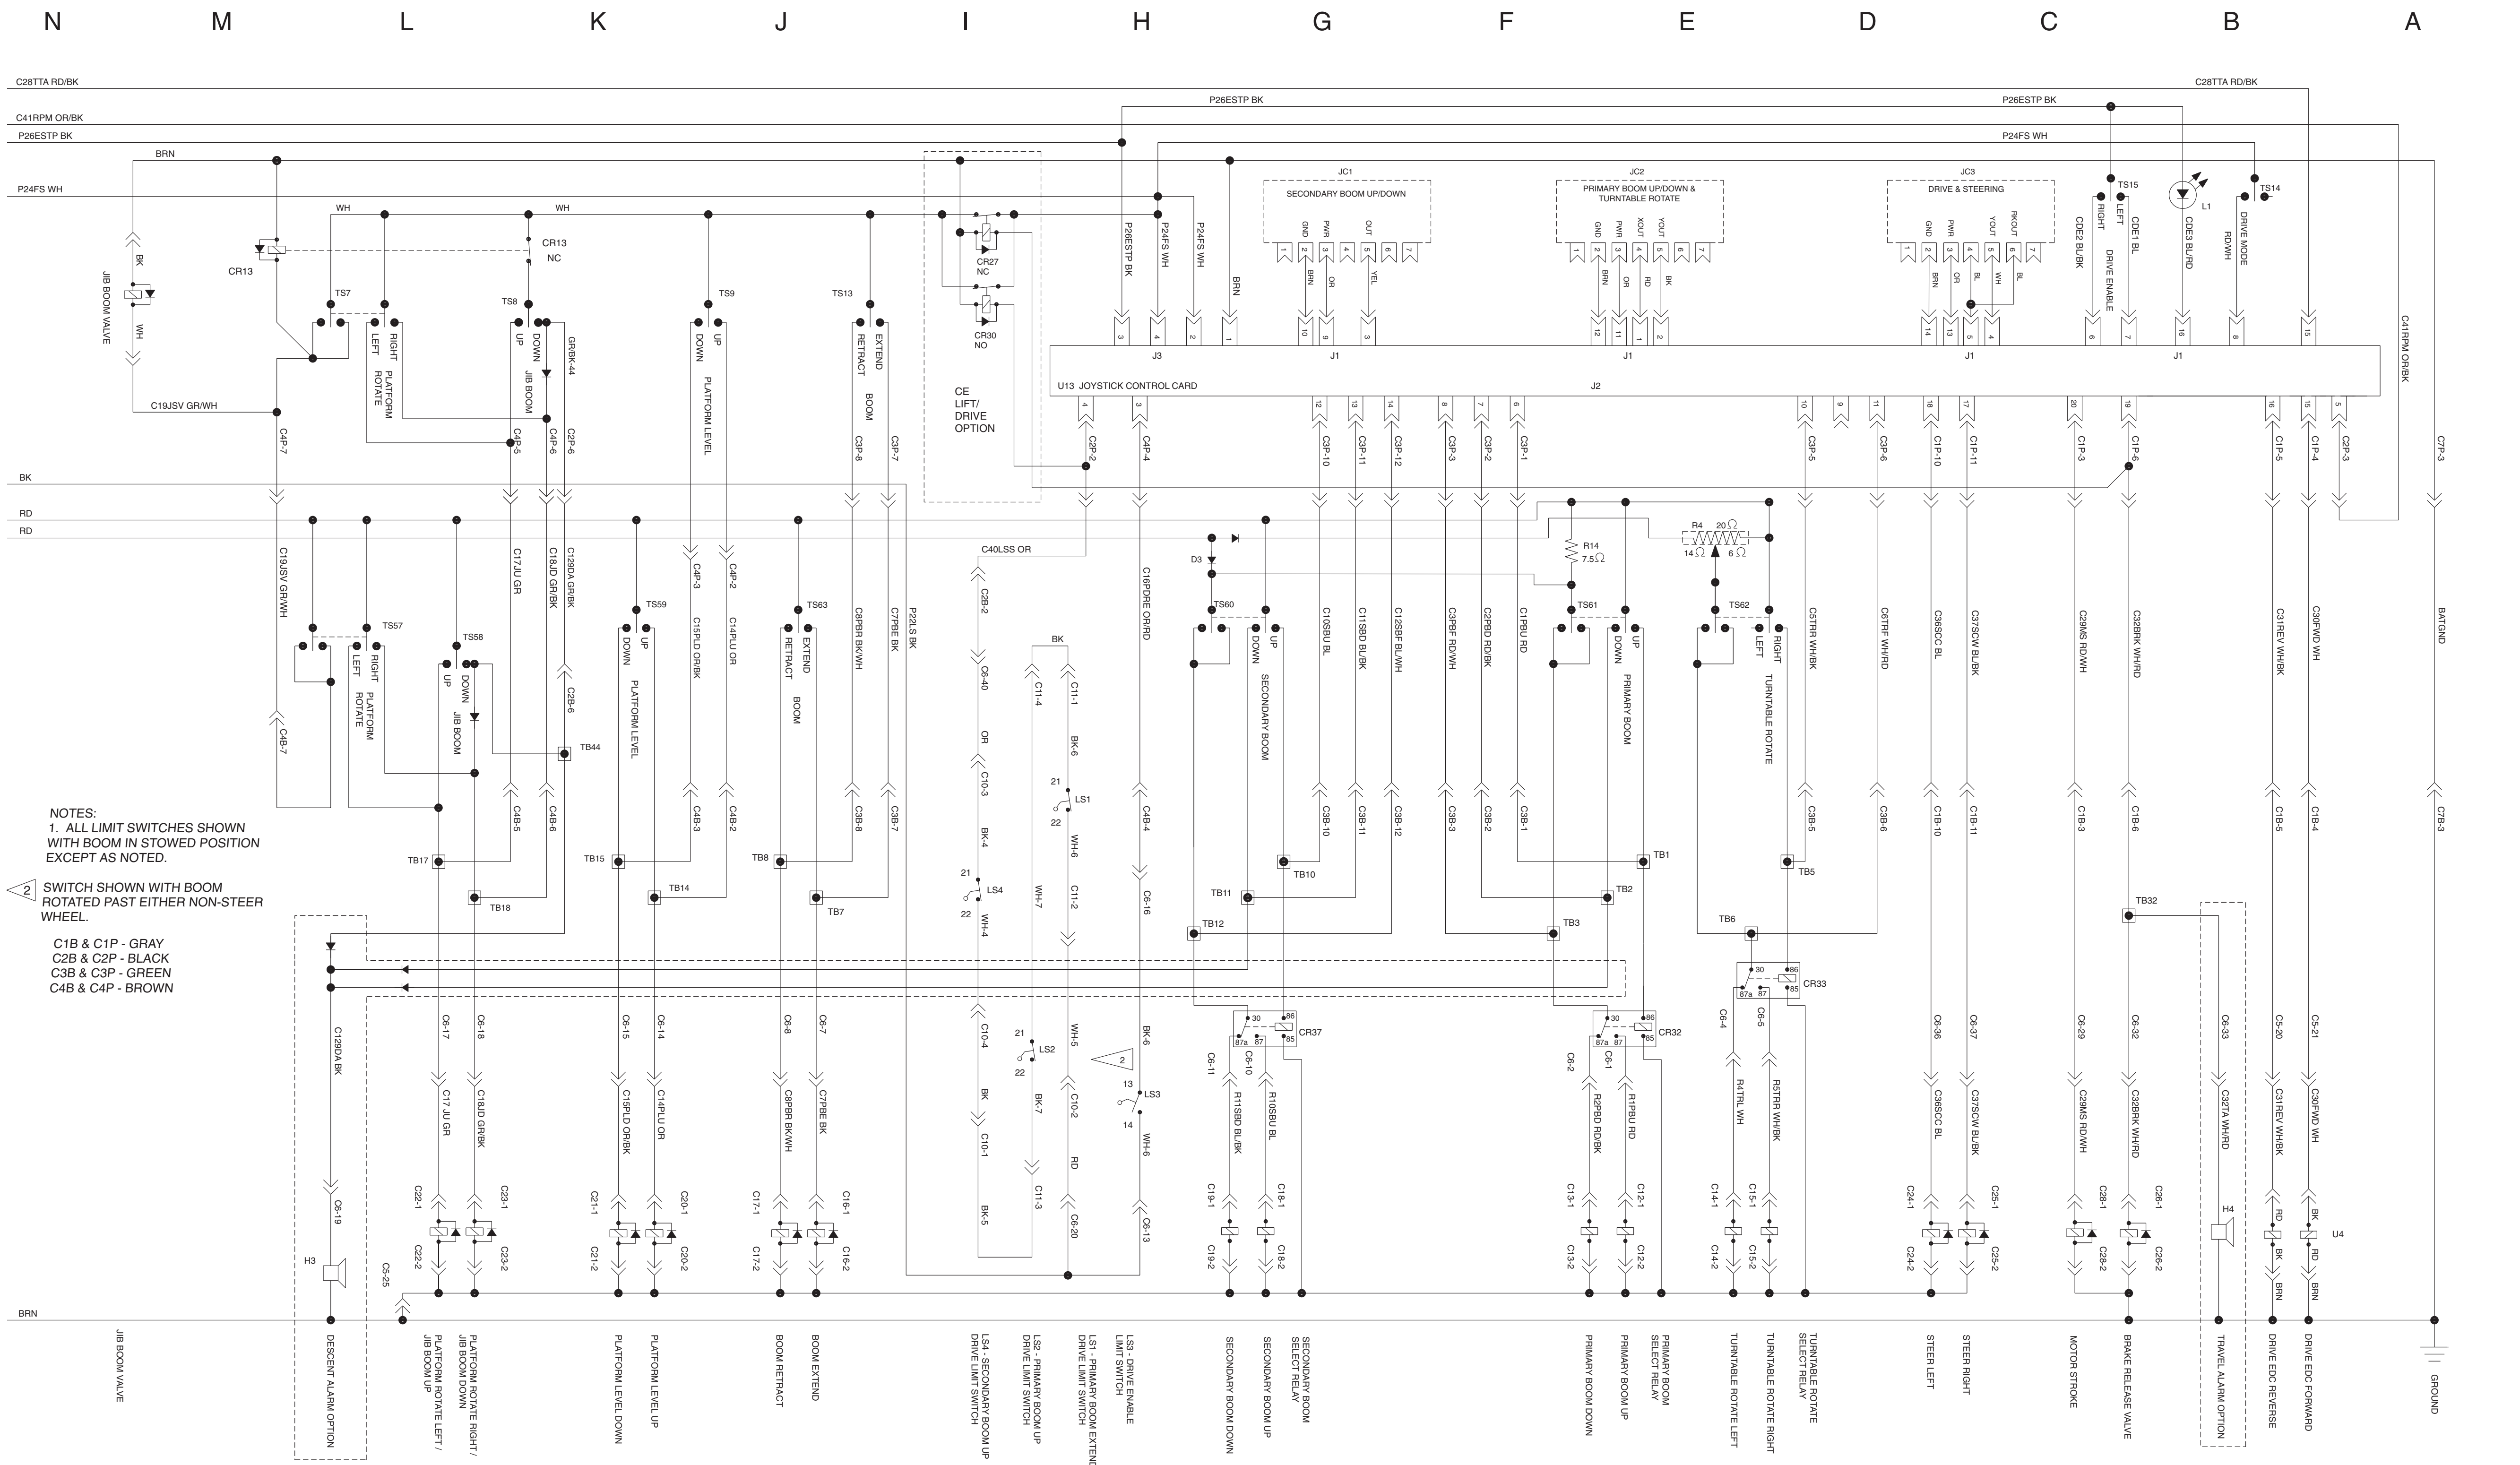


Electrical Schematic



Ground Control Box Terminal Strip Wiring Diagram


Ground Control Box Terminal Strip Wiring Diagram

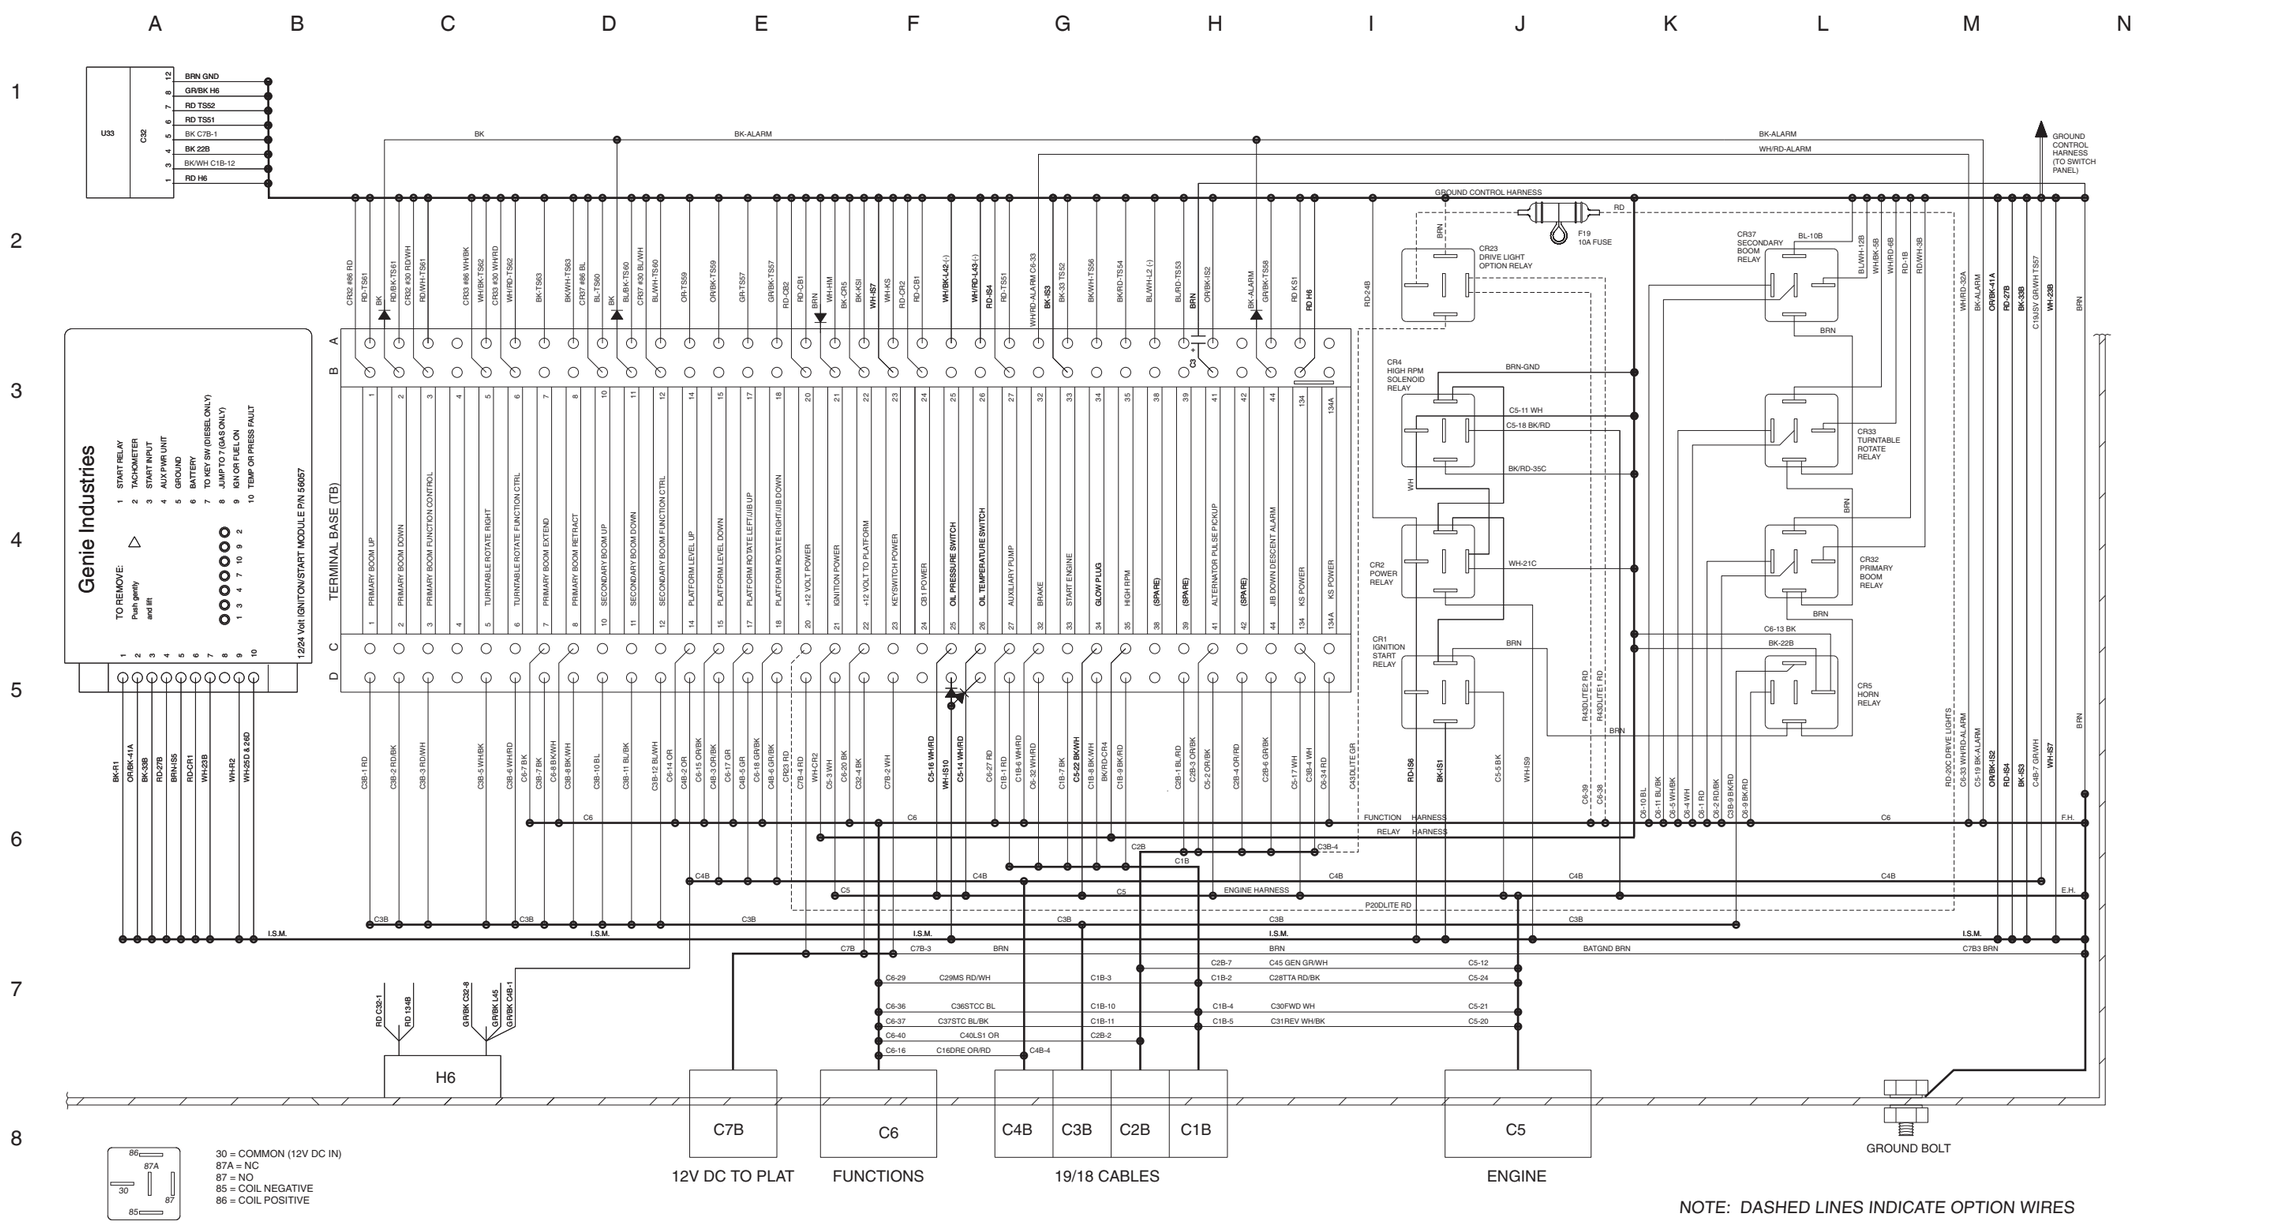

NOTE: DASHED LINES INDICATE OPTION WIRES

Ground Control Box Switch Panel Wiring Diagram

LABEL	DESCRIPTION
CB1	CIRCUIT BREAKER, ENGINE, 15A
CB2	CIRCUIT BREAKER, CONTROLS, 15A
CR1	IGNITION / START RELAY
CR2	IGNITION POWER RELAY
CR4	HIGH IDLE RELAY
CR5	HORN RELAY
HM	HOUR METER
KS1	KEY SWITCH
L42	OIL PRESSURE LED
L43	OIL TEMPERATURE LED
L45	PLATFORM OVERLOAD
P1	RED EMERGENCY STOP BUTTON
R4	SPEED LIMITING VARIABLE RESISTOR 20 OHMS
R14	SECONDARY BOOM SPEED RESISTOR 7.5 OHMS
TS51	AUXILIARY POWER TOGGLE SWITCH
TS52	ENGINE START TOGGLE SWITCH
TS54	FUNCTION ENABLE TOGGLE SWITCH
TS56	GLOW PLUG TOGGLE SWITCH (OPTION)
TS57	PLATFORM ROTATE TOGGLE SWITCH
TS58	JIB BOOM UP/DOWN TOGGLE SWITCH
TS59	PLATFORM LEVEL TOGGLE SWITCH
TS60	SECONDARY BOOM UP/DOWN TOGGLE SWITCH
TS61	PRIMARY BOOM UP/DOWN TOGGLE SWITCH
TS62	TURNTABLE ROTATE TOGGLE SWITCH
TS63	PRIMARY BOOM EXTEND/RETRACT TOGGLE SWITCH

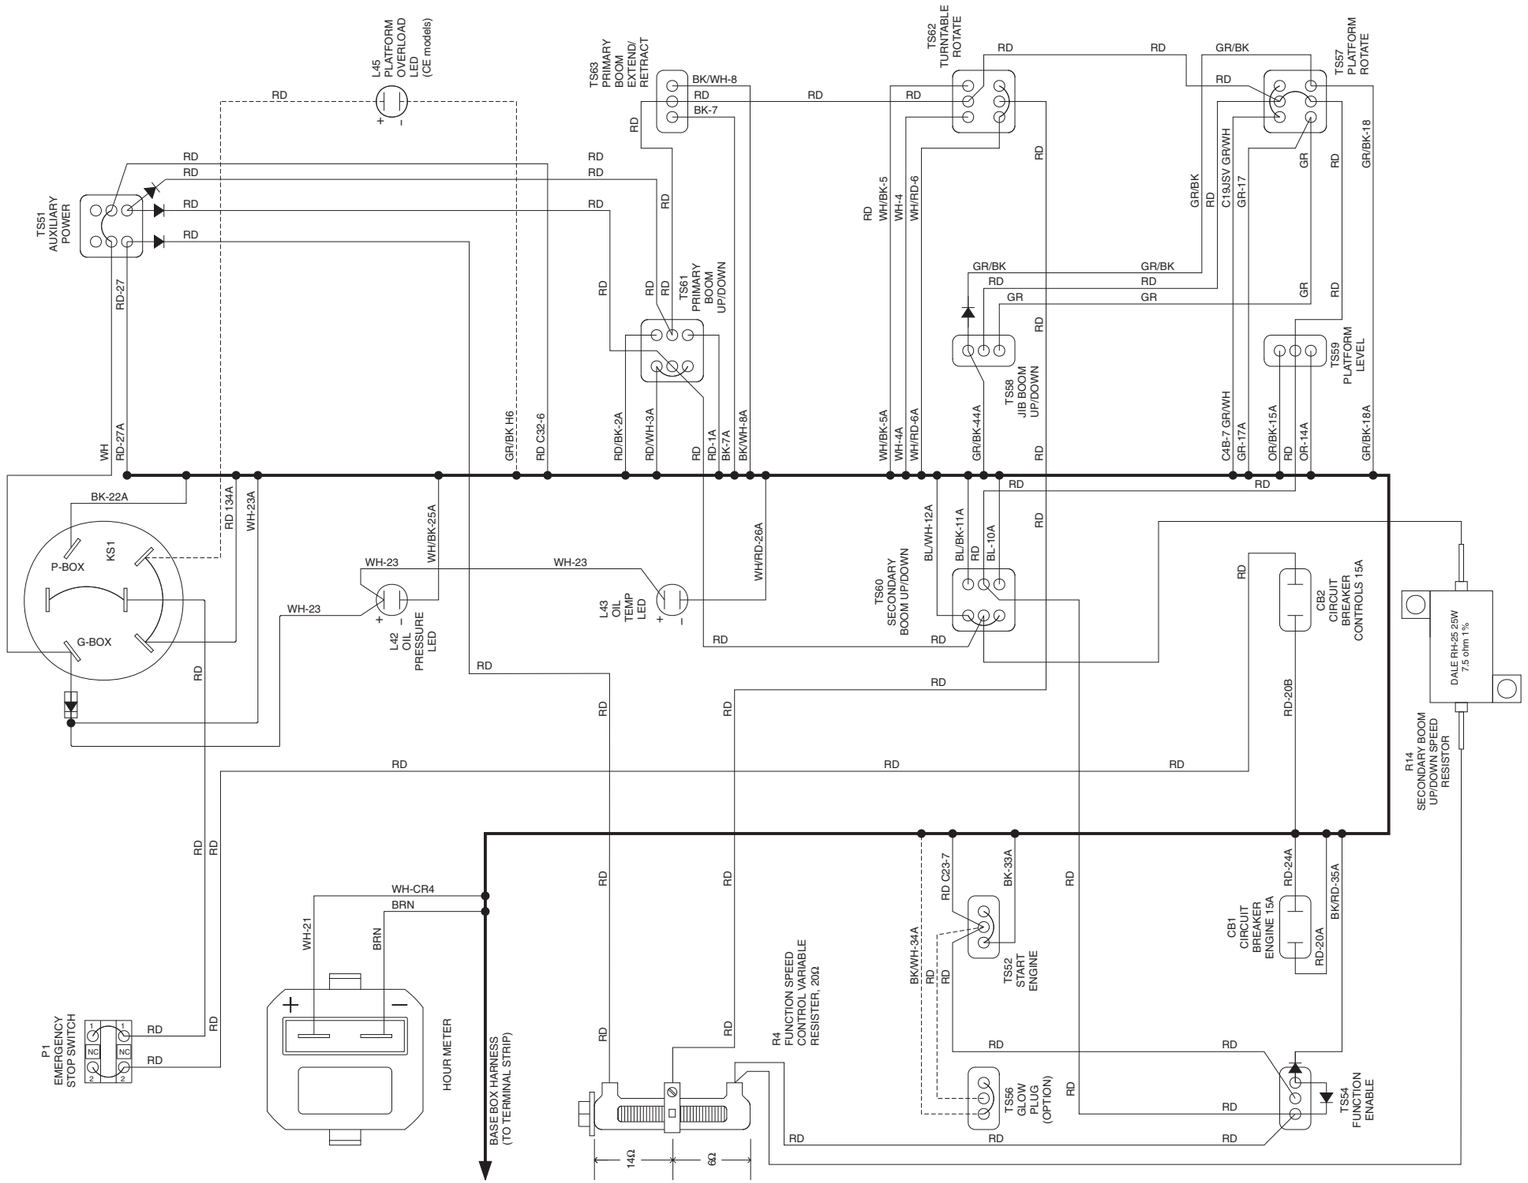


Ground Control Box Switch Panel Wiring Diagram



Platform Control Box Wiring Diagram

Platform Control Box Wiring Diagram


REV A

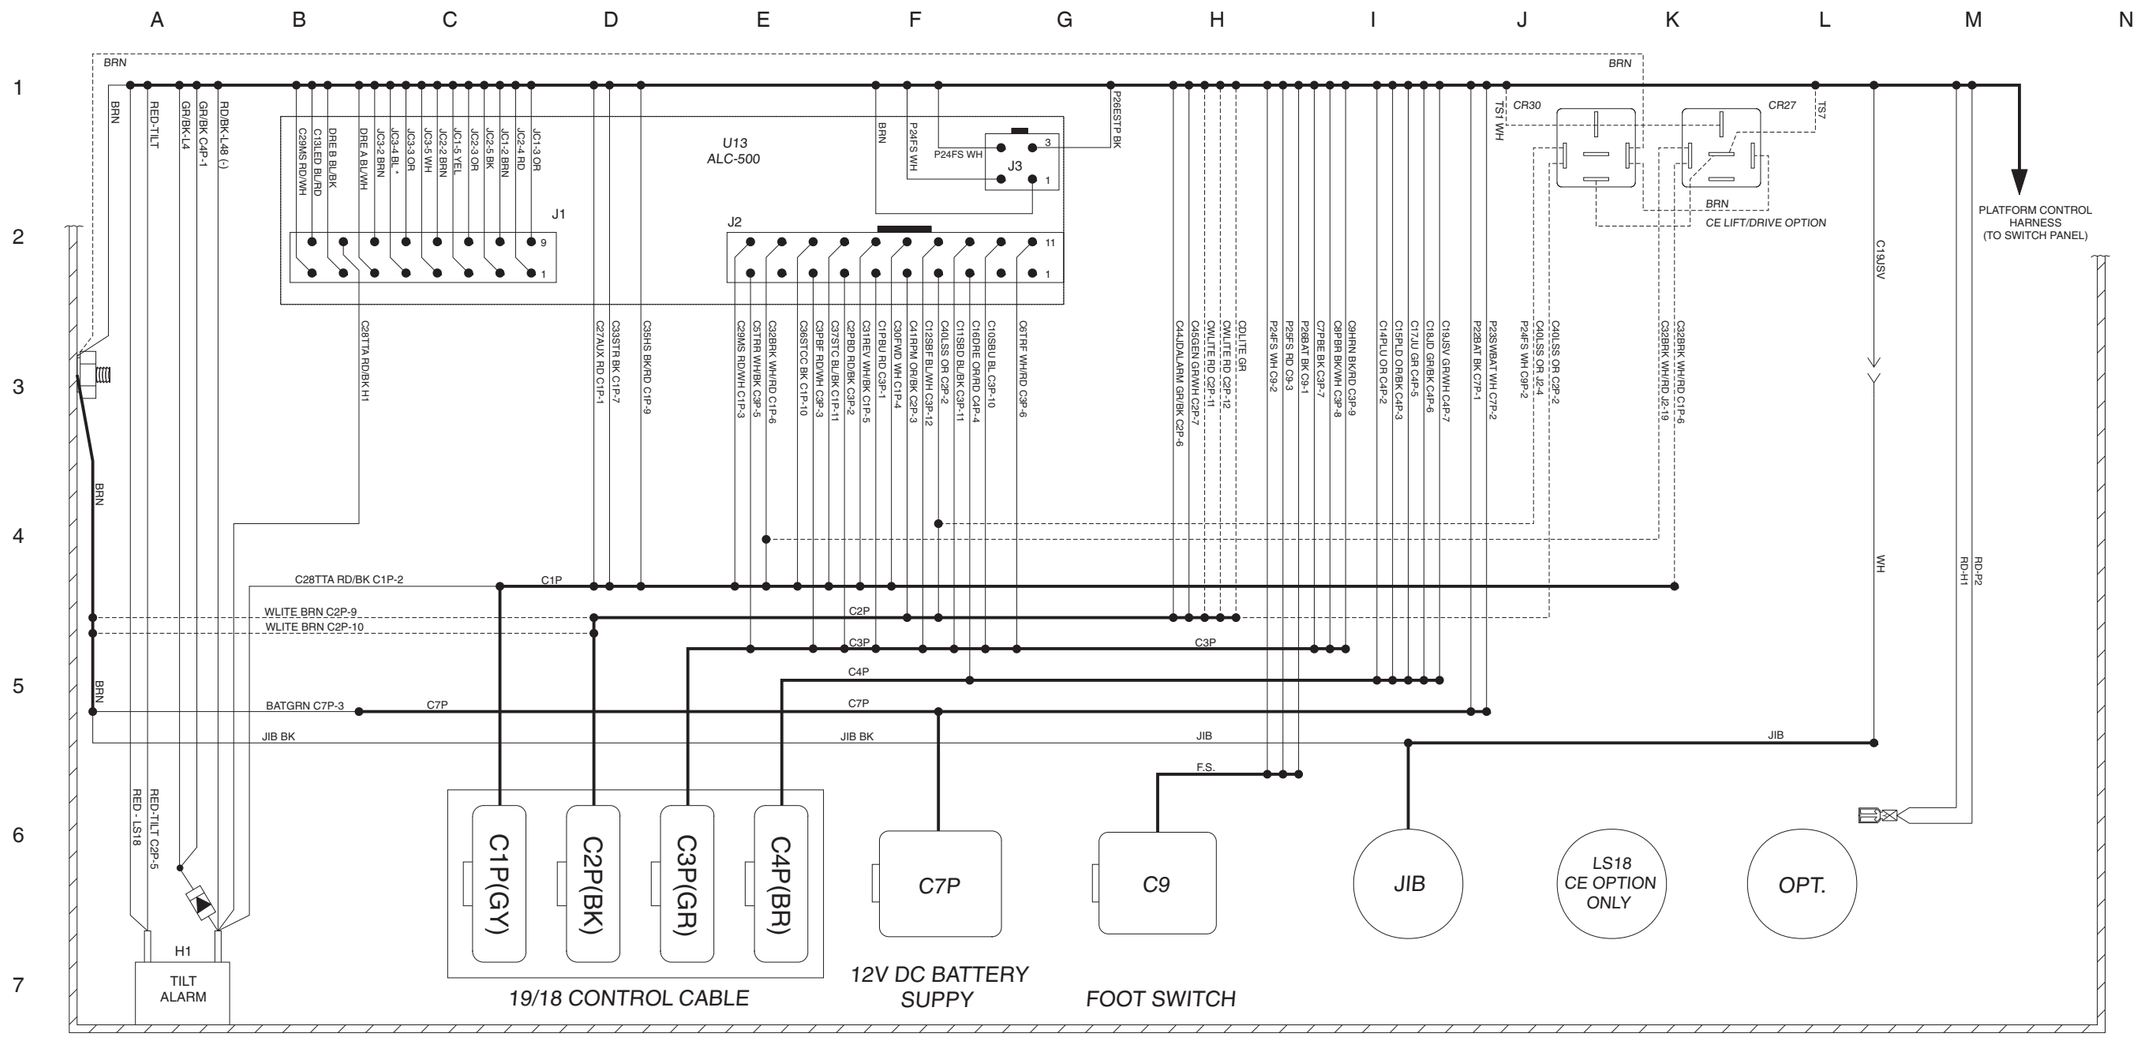

ITEM	DESCRIPTION
H1	TILT ALARM
C7P	12V DC PLATFORM POWER CONNECTOR
C9	FOOT SWITCH CONNECTOR
C1P - C4P	48 PIN CONNECTOR BLOCK
U13	ALC-500 CONTROL BOARD
J1	CONTROL BOARD INPUT CONNECTOR
J2	CONTROL BOARD OUTPUT CONNECTOR
J3	CONTROL BOARD POWER CONNECTOR
CR27	CONTROL RELAY (CE OPTION)
CR30	CONTROL RELAY (CE OPTION)
LS18	LOAD SENSE LIMIT SWITCH

REV A

Platform Control Box Switch Panel Wiring Diagram

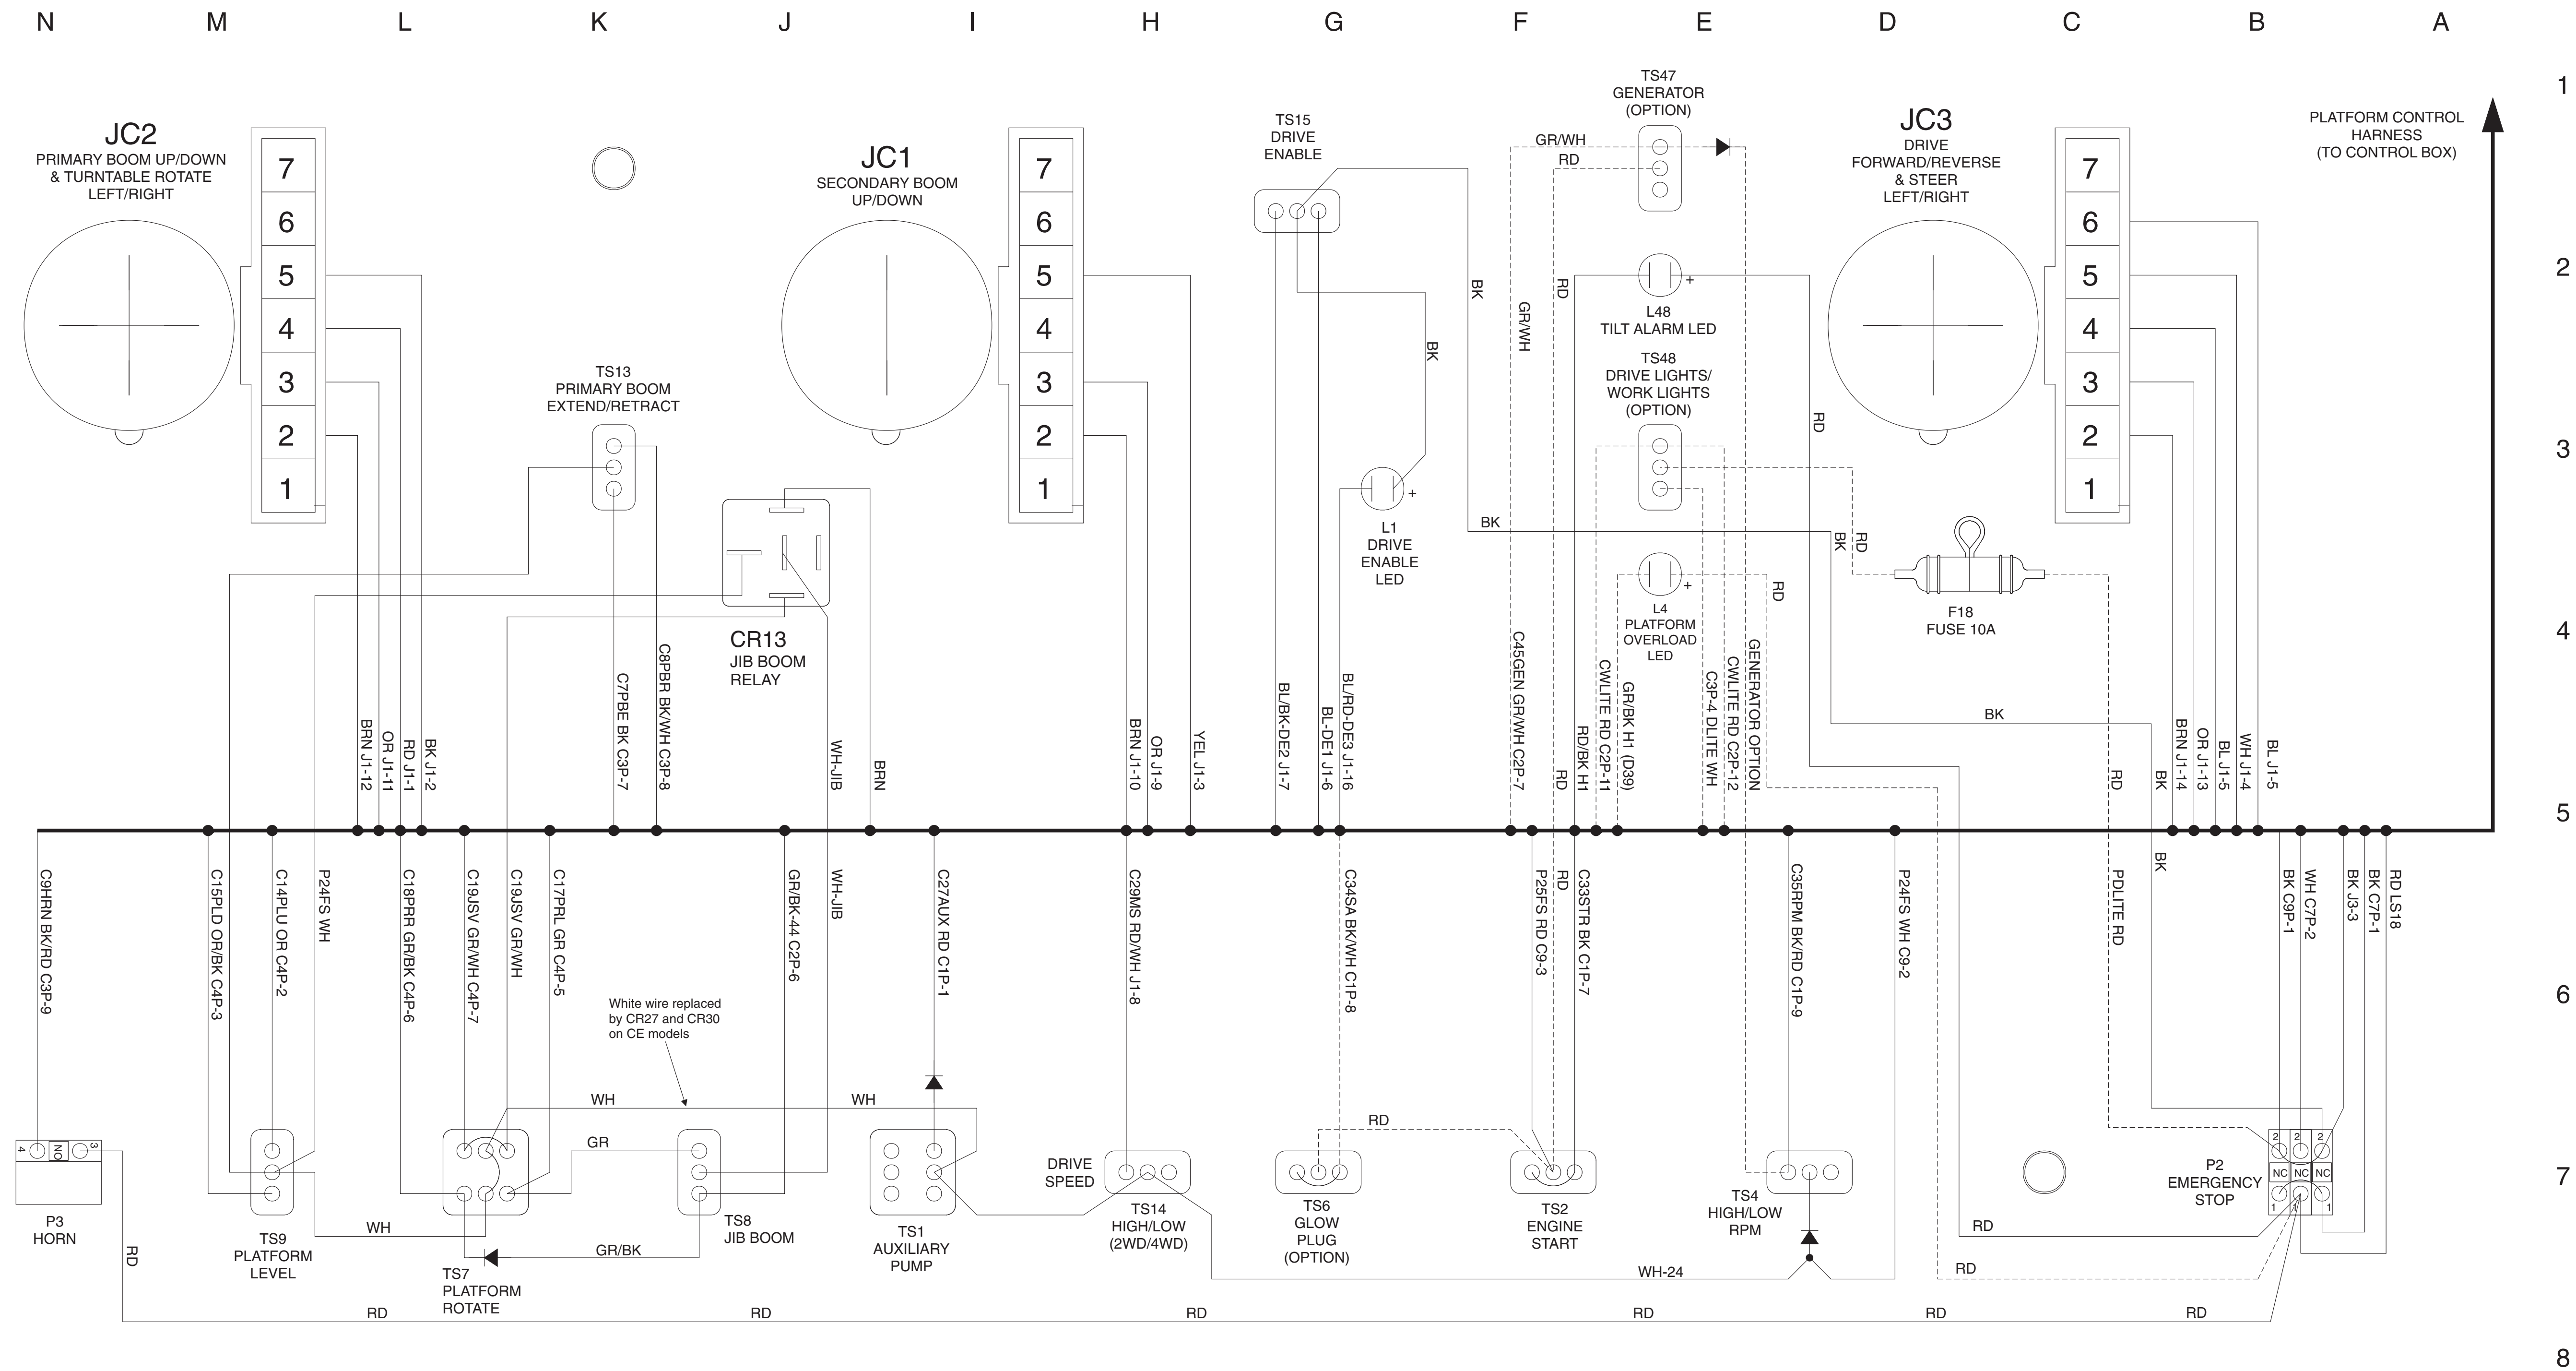


NOTE:
DASHED LINES INDICATE OPTION WIRES

Platform Control Box Switch Panel Wiring Diagram



Hydraulic Schematic

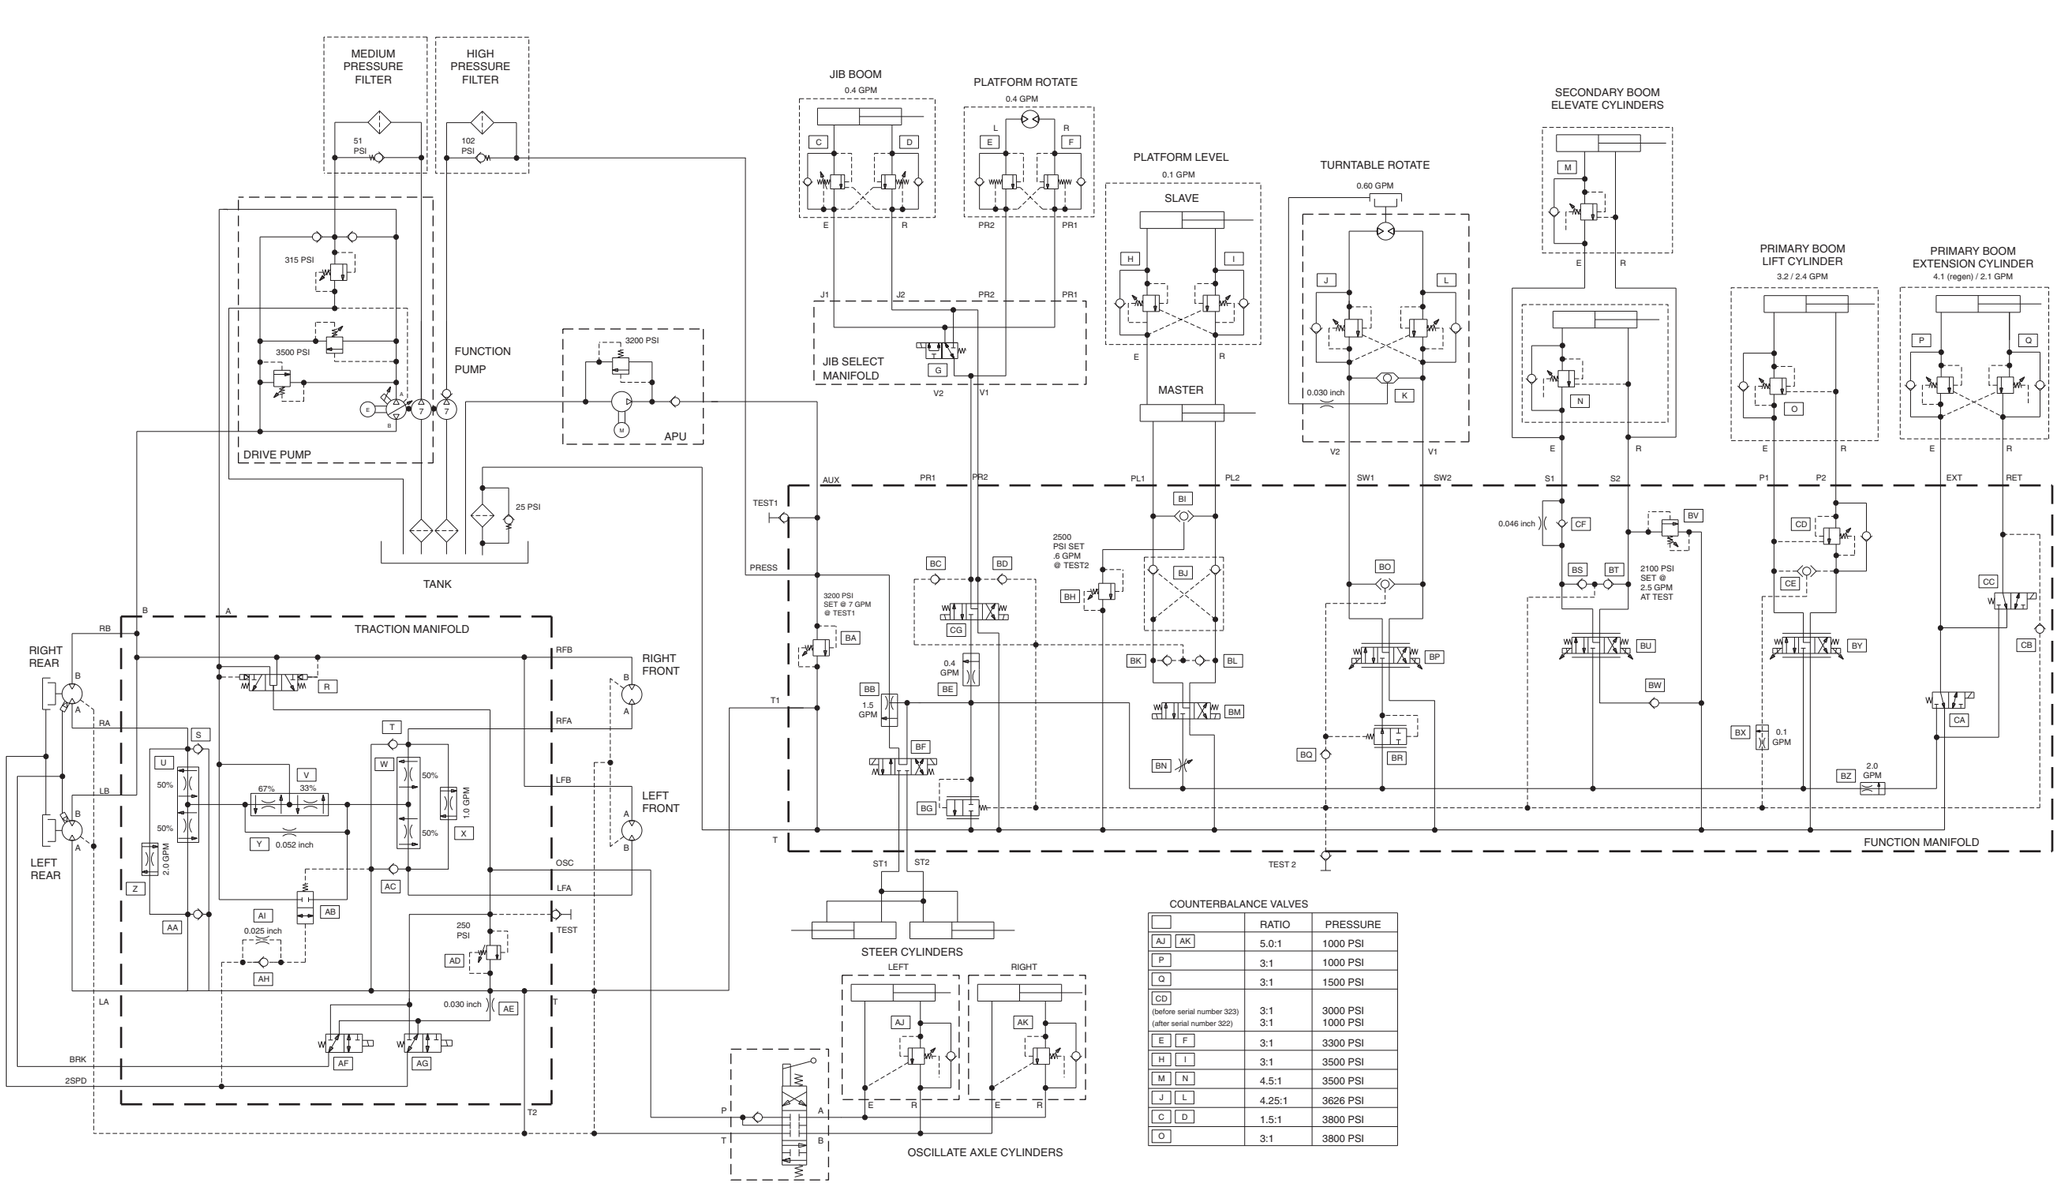

COUNTERBALANCE VALVES

	RATIO	PRESSURE
AJ AK	5.0:1	1000 PSI
P	3:1	1000 PSI
Q	3:1	1500 PSI
CD (before serial number 323)	3:1	3000 PSI
CD (after serial number 322)	3:1	1000 PSI
E F	3:1	3300 PSI
H I	3:1	3500 PSI
M N	4.5:1	3500 PSI
J L	4.25:1	3626 PSI
C D	1.5:1	3800 PSI
O	3:1	3800 PSI

Hydraulic Schematic



California Proposition 65

Warning

The exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

Distributed By:

Genie North America
Phone 425.881.1800
Toll Free USA and Canada 800.536.1800
Fax 425.883.3475

Genie Australia Pty Ltd.
Phone +61 7 3375 1660
Fax +61 7 3375 1002

Genie China
Phone +86 21 53853768
Fax +86 21 53852569

Genie Singapore
Phone +65 67533544
Fax +65 67533544

Genie Japan
Phone +81 3 6436 2020
Fax +81 3 5445 1231

Genie Korea
Phone +82 2 558 7267
Fax +82 2 558 3910

Genie Brasil
Phone +55 11 4082 5600
Fax +55 22 4082 5630

Genie Holland
Phone +31 183 581 102
Fax +31 183 581 566

Genie Sweden
Phone 0046 3157 5101
Fax 0046 3157 5104

Genie France
Phone 0033 237 260 986
Fax 0033 237 260 998

Genie Iberica
Phone 0034 900 808 110
Fax 0034 935 725 080

Genie Germany
Phone 0800 180 9017
Phone 0049 4221 491 821
Fax 0049 4221 491 820

Genie U.K.
Phone 0044 1476 584 333
Fax 0044 1476 584 330

Genie Mexico City
Phone +52 55 5666 5242
Fax +52 55 5666 3241