Genie
A TEREX BRAND

Operator's Manual Supplement

Lift Tools™ Access Deck for Slab Scissors

ANSI/CSA
- North America
- South America
- Asia

AUS
- Australia

CE
UK CA

Original Instructions
Second Edition
First Printing
Part No. 1328644GT

Introduction

Important

Read, understand and obey these safety rules and operating instructions before operating this machine. Only trained and authorized personnel shall be permitted to operate this machine. This manual should be considered a permanent part of your machine and should remain with the machine at all times. If you have any questions, contact us.

Contact Us:

Internet: www.genielift.com

E-mail: awp.techpub@terex.com

Approved Models

The Lift Tools™ Access Deck for Slab Scissors can only be used on the following Genie Scissor Mobile Elevating Work Platforms.

Model	Serial Number
GS™-1932 (D)	from GS32D-25101
GS™-2632	from GS32D-25101
GS™-3232	from GS32D-25101

Note: GS™-1932 is built in two manufacturing facilities, (P) and (D). Refer to your machine serial number to identify the D facility code for the approved model.

⚠WARNING Do not install the Access Deck system on any Genie product other than the designated models.

Copyright © 2019 by Terex Corporation

Second Edition: First Printing, November 2024

Genie is a registered trademark of Terex South Dakota, Inc. in the U.S.A. and many other countries. "GS" is a trademark of Terex South Dakota, Inc.

This accessory complies with
ANSI/SAIA A92.20
CAN/CSA B.354.6

AUS 1418.10

CE Complies with EC Directive 2006/42/EC
See EC Declaration of Conformity

UKCA Supply of Machinery (Safety) Regulations 2008

Introduction

Genie Self-propelled Scissor Products and Lift Tools™ Access Deck Guidance

Scissor-supported Elevating Work Platforms are designed to carry personnel, along with their tools, and materials to an aerial work site. When platform access is limited and the personnel need to reach a work area that is beyond their working height, the Access Deck provides an elevated deck, above the main floor of the platform, to allow the personal to extend their working height.

This document provides guidance for the use of the Access Deck on Genie self-propelled scissor products.

Definitions

Qualified person

A "qualified person" one who, by possession of a recognized degree, certificate, or professional standing, or by extensive knowledge, training and experience, has demonstrated his/her ability to solve or resolve problems related to the subject matter, the work, or the project.

Fall Restraint Systems

Restraint systems prevent a worker from being exposed to a fall. If the employee is protected by a restraint system, either a body belt or a harness may be used. When a restraint system is used for fall protection in a scissor-supported mobile elevating work platform, the employer/user/operator must ensure that the lanyard and anchor are arranged so that the operator is not exposed to falling any distance outside the platform.

Fall Arrest Systems

A system that permits an arrested fall is considered a fall arrest system. A body belt is prohibited in a fall arrest system and instead a full body harness and lanyard that limits the fall distance and arresting force on the person is required. Fall arresting lanyards typically have a shock absorbing section or are a self-retracting lifeline/lanyard.

Self-retracting lifeline/lanyard

A deceleration device containing a drum-wound line which can be slowly extracted from, or retracted onto, the drum under slight tension during normal employee movement, and which after onset of a fall, automatically locks the drum and arrests the fall. The use of the self-retracting lifeline/ lanyard as a fall arrest lanyard is allowed on scissor-supported aerial work platforms. If a self-retracting lifeline/lanyard is used while exiting the platform it shall not allow a free fall greater than 6 ft/1.8m, some global regions this could be 6.6ft/2m.

Introduction

Genie Self-propelled Scissors may be used to lift under the following guidelines:

1 The owner/employer/user/operator of the scissor is responsible for providing fall protection for scissor operators.

2 A "qualified person" with knowledge of fall protection regulations and systems must design the work space and the Access Deck system to ensure worker safety.

3 Obey all local and governmental regulations.

4 The user shall be equipped with a fall arrest system when using the access deck that has means of limiting to a maximum arresting force of 1,349 lbs / 6 kN, in some global regions the maximum could be 1,798 lbs /8 kN.

5 The fall arrest system must not allow a potential free fall greater than 6ft /1.8m, in some global regions this could be 6.6ft/2m.

6 Only one person may be on the access deck at once while attached to an approved lanyard attachment point.

7 The Genie slab scissors have been stability tested on level ground with the rated platform capacity. The maximum extension deck capacity remains 250 lbs/113 kg across all slab scissor models.

Note: The weight of the Access Deck assembly must be subtracted from the platform capacity that it is mounted on.

GS™-1932 (D), GS™-2632, GS™-3232	32 lbs/15 kg

8 Attachment and use of an Access Deck must be approved and authorized by the equipment owner.

9 It is the responsibility of the equipment owner and/or the contractor to perform a hazard analysis when using the Access Deck, and ensure that the equipment complies with the essential health and safety requirements applicable to the jobsite, as well as local, state, provincial, and federal rules and regulations, and standards related to the use of the equipment.

10 The Genie scissor must be on a firm level surface to use the Access Deck.

⚠WARNING Failure to comply with all restrictions, instructions and warnings contained in this section, the Operator's Manual and the applicable safety or owner's manual could result in death or serious injury.

Introduction

Application Description

When operator/worker needs to reach a work area that is beyond their working height, the Access Deck provides an elevated deck, above the main platform floor.

Owner/Employer/User/Operator Requirements:

1 A copy of this supplement must always accompany the operator’s manual in the weather resistant storage compartment located on the equipment.

2 Operators must be trained and qualified on safe operation of the equipment, and be familiar with the specific model of Genie equipment as follows:

- Be familiar and comply with the equipment operating and safety manuals, decals and warnings.
- Understand all control functions.
- Be aware of and understand all safety devices specific to the equipment being used.
- Be instructed how to avoid the hazards.

3 Comply with all applicable jobsite, local, state, provincial, and federal rules and regulations, and standards related to the use of the equipment.

4 The equipment must be in proper working condition and configuration.

In consideration for Genie's guidance herein, the equipment owner, employer, user and operator hereby agree to indemnify and hold harmless Terex USA, Terex Global GmbH and its parent and affiliated companies against any and all liabilities, claims, suits, losses, costs and legal fees caused by, arising out of, or resulting from any negligent act or omission in the operation of the equipment; the failure to comply with the criteria set forth in this manual related to the use of a scissor with an Access Deck the safety rules and operating instructions in the Operator's Manual. **By proceeding with the use of a scissor with an Access Deck, you agree to adhere to the requirements set forth herein, including said indemnification. If you do not agree, do not proceed with the proposed use.**

Introduction



Danger

Failure to obey the instructions and safety rules in this manual will result in death or serious injury.

Note:

The Lift Tools™ Access Deck complies with the requirements of ANSI, CSA, AUS, CE and UKCA markets. All other markets are prohibited from use.

The Lift Tools™ Access Deck for Slab Scissors can only be used on the approved models of Genie Scissor Mobile Elevating Work Platforms. Use on all other platforms is prohibited.

See approved models list.

Introduction

⚠ Lift Tools™ Access Deck for Slab Scissors Safety

Read, understand and obey all warnings and instructions provided with the Access Deck.

Do not exceed the rated platform capacity. The weight of the Access Deck assembly will reduce the rated platform capacity and must be subtracted from the total platform load.

GS™-1932 (D) GS™-2632 GS™-3232	32 lbs/15 kg

Be sure the Access Deck is securely installed. Only use the folding handle for stability.

When the Access Deck structure is attached, this manual should be considered a permanent part of your machine and should remain with the machine at all times.

The Access Deck can be transported on the mid-rail when all locking mechanisms are engaged and securely fastened to the platform.

Do not install the Access Deck system on any Genie product other than the designated models.

The Access Deck can only be mounted on the mid rails of the platform. The Access Deck can never be mounted on the top rail.

⚠ CAUTION Do not use Access Deck with ice, grease or debris on the mid-rail surfaces.

⚠ WARNING Failure to use the correct Access Deck Mounting Bracket could result in death or serious injury.

⚠ DANGER Do not operate the scissor once the operator/coworker has tied off and is standing on the Access Deck.

Introduction

Symbol and Hazard Pictorials Definitions



The Access Deck weighs:

GS™-1932 (D)
GS™-2632
GS™-3232
32 lbs/15 kg



Read the supplement, part number 1328644



Tip-over hazard



Maximum Capacity, Access Deck

GS™-1932 (D)
GS™-2632
GS™-3232
218 lbs/98 kg



Lanyard anchorage points



Fall arrest

Introduction

Pre-operation Inspection

- ☐ Be sure that the operator’s manual, safety manual, responsibilities manual and any necessary supplements are complete, legible and in the storage container located in the platform.
- ☐ Be sure that all decals are legible and in place.

Check the Access Deck for damage or wear, improperly installed, loose or missing parts and unauthorized modifications.


- ☐ Nuts, bolts and other fasteners
- ☐ Cracks in welds or structural components
- ☐ Dents or damage to Access Deck
- ☐ Check platform mounting location. The mounting location must be undamaged and clear of debris, ice, oily and slippery surfaces.

Introduction

Decal Inspection

Use the inspection to verify that all decals are legible and in place. Decals may vary depending on machine configuration.

GS-1932 (D), GS-2632, GS-3232 Access Deck, ANSI/CSA

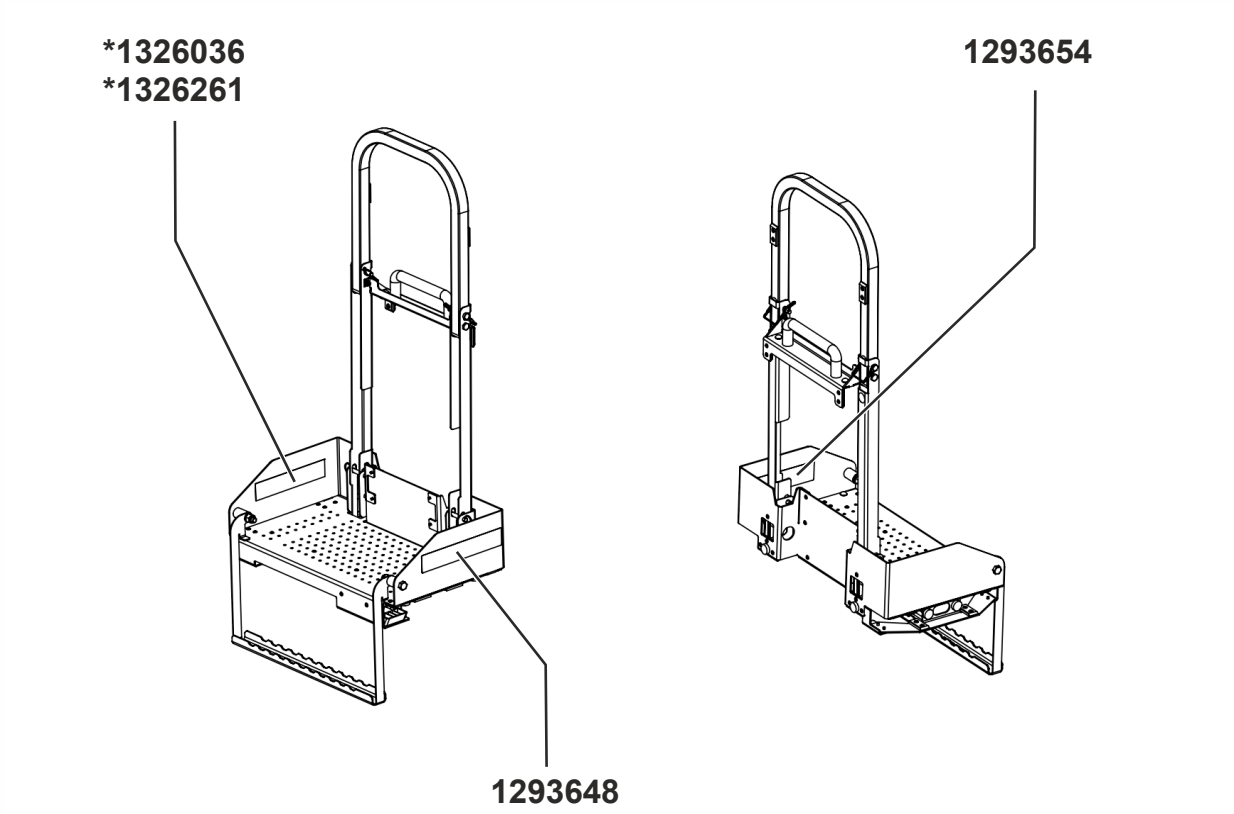

Part No.	Decal Description	Qty
1326036	Decal, Maximum Capacity, Word, Access Deck,*	1
1326036FR	Decal, Maximum Capacity, Word, Access Deck*	1
1326261	Decal, Maximum Capacity, Symbol, Access Deck*	1
1293654	Decal, Latch Install Slab Access Deck	1


* These decals are model, option or configuration specific.

Introduction

Decal Inspection

Use the inspection to verify that all decals are legible and in place. Decals may vary depending on machine configuration.

GS-1932 (D), GS-2632, GS-3232 Access Deck, CE/UKCA

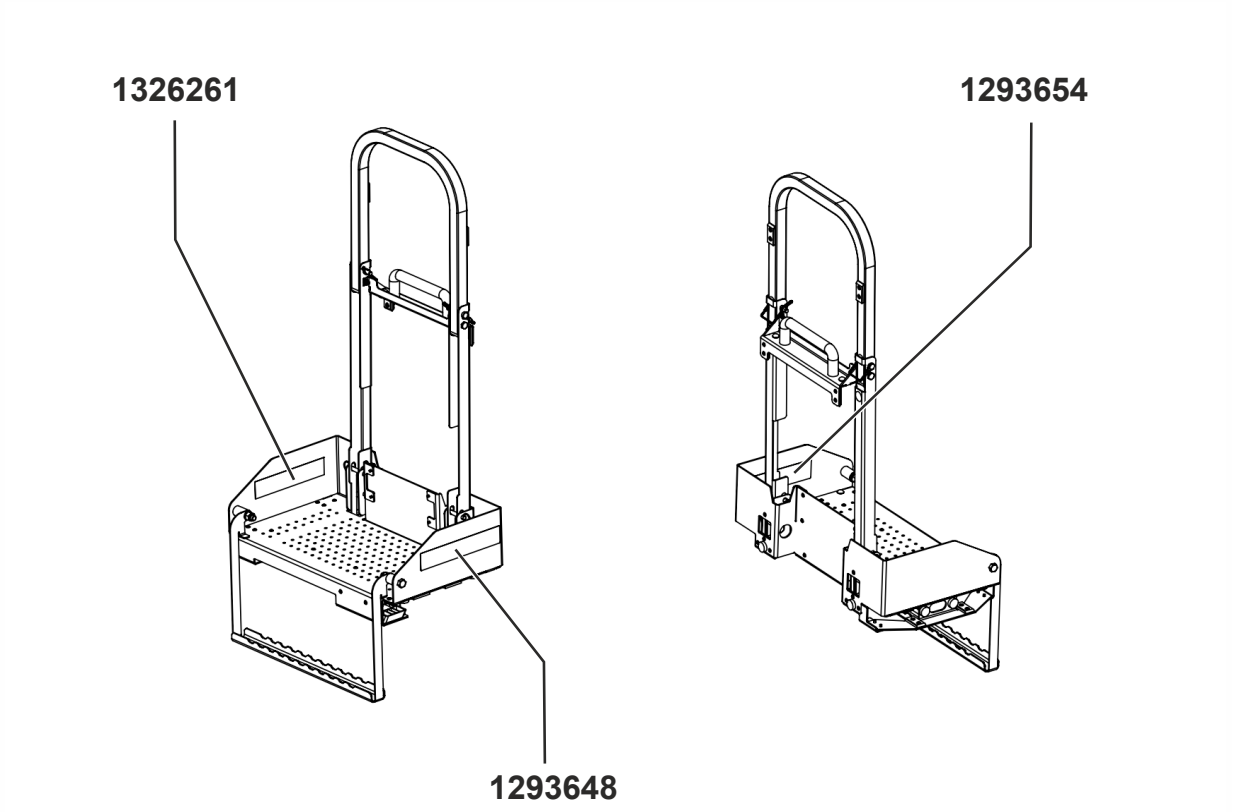


Part No.	Decal Description	Qty
1326261	Decal, Maximum Capacity, Symbol, Access Deck	1
1293654	Decal, Latch Install Slab Access Deck	1

Introduction

Decal Inspection

Use the inspection to verify that all decals are legible and in place. Decals may vary depending on machine configuration.

GS-1932 (D), GS-2632, GS-3232 Access Deck, AUS

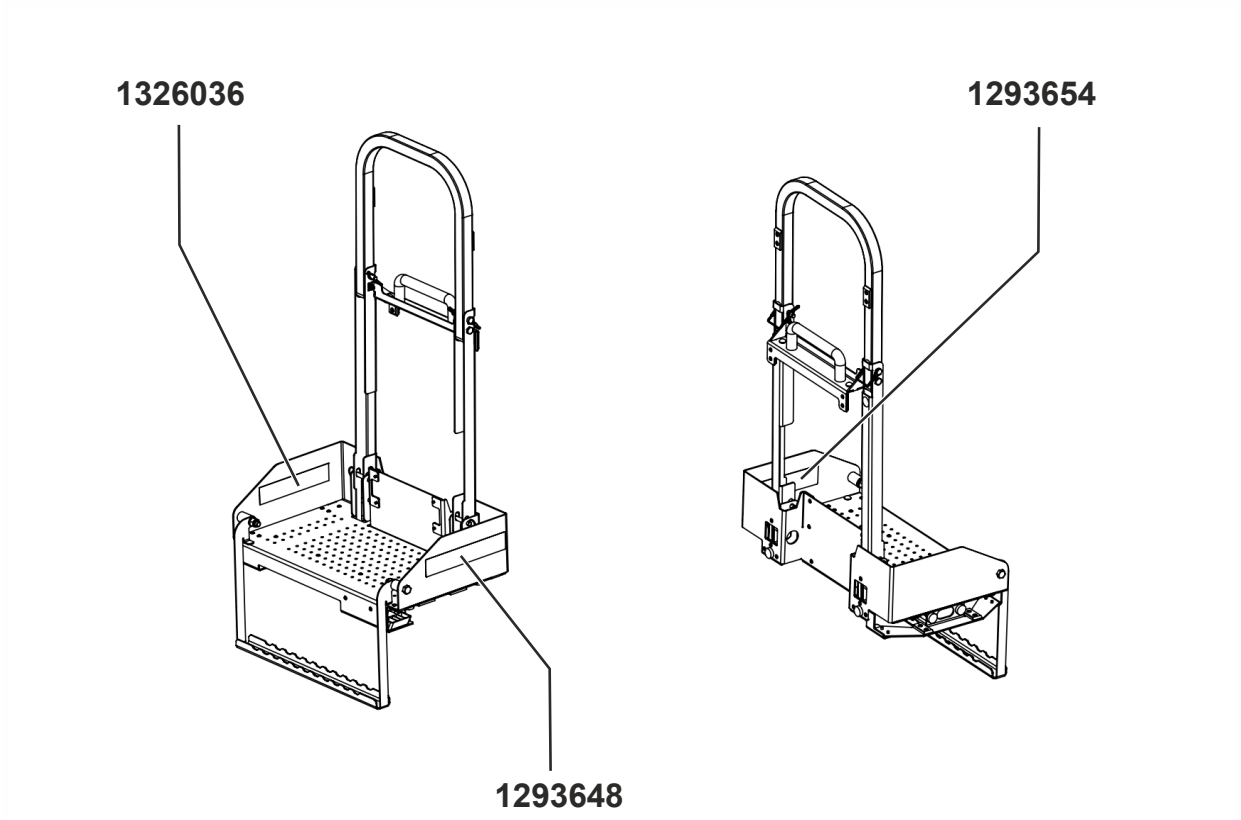

Part No.	Decal Description	Qty
1326036	Decal, Maximum Capacity, Word, Access Deck	1
1293654	Decal, Latch Install Slab Access Deck	1

Introduction

Annual Inspection

Inspect for missing or loose components.

Check all fasteners are properly tightened.

Inspect all components for damage or wear. Check for cracks, bends and corrosion.

Inspect all pivot points and latch mechanism; all should move freely by hand.

With Access Deck installed on unit, verify the fit is tight. If Access Deck can be moved >1/4" while installed properly, replace all rubber bumpers.

Inspection After a Fall

Note: In the event of an operator fall, the Access Deck and the Genie scissor must be immediately removed from service and inspected by a "qualified person". If the Access Deck and the Genie scissor pass the inspections listed below, the Access Deck and the Genie scissor may be returned to service.

Inspect all structural components of the Access Deck and the Genie scissor. Replace any bent or damaged components. Replace any components with cracked welds. Replace all mounting fasteners for the Access Deck.

Perform an Annual Inspection on the Access Deck

Perform a Pre-Operation Inspection on both the Access Deck and the Genie scissor.

Installation Instructions



Observe and Obey:

☑ This procedure shall be completed by a person authorized to install the Access Deck.

☑ Immediately tag and remove from service a damaged or malfunctioning machine.

☑ Repair any machine damage or malfunction before operating the machine.

Before Starting Installation

☑ Read, understand and obey the safety rules and operating instructions in the appropriate Genie Operator's Manual and Supplements.

☑ Be sure that all necessary tools and parts are available and ready for use.

☑ Read this procedure completely and adhere to the instructions.

Note: Refer to the illustration page for installation instructions.

Contents of Kit 1324278GT for GS-1932 (D), GS-2632, GS-3232

Description	Genie part number	Qty.
(1) Manual, Supplement	1328644GT	1
(2) Decal, Maximum Capacity, Word	1326036GT	1
(3) Decal, Maximum Capacity, Symbol	1326261GT	1
(4) Decal, Cosmetic, Access Deck	1293648GT	1
(5) Decal, Maximum Capacity, Word, FR	1326036GT	1
(6) Decal, Latch Install Slab	1293654GT	1
(7) Access Deck Assembly	1332775GT	1

Installation Instructions

Deck Installation

⚠WARNING Do not install the Access Deck system on any Genie product other than the designated models.

⚠WARNING The Access Deck can only be mounted on the mid rails of the platform

1 Move platform-controller to rear of platform, out of the way.

2 Standing in the extension deck, slide the left side opening of the Access Deck over the left platform mid-rail.

3 Push Access Deck all the way to the end of the extension deck, against the manual box. Push down on the right side of the Access Deck. If the latch does not automatically engage, reach into latch opening and open latch to allow Access Deck to fall completely into place.

Note: The latch will make an audible click when fully seated.

4 Rotate step down to working position.

5 Pull lower pins out. Pull rail assembly towards yourself using the grab handle. Then pull wire lock pin out. Rotate top handle out.

6 Hold grab handle and top handle together. Then rotate rail assembly upwards, and drop down into place. The rail hooks should be secured over the extension deck top rail. Replace upper and lower pins.

Note: Make sure the top handle rail does not rotate down before replacing upper pins.

7 Replace platform controller to desired position. The unit is now ready to operate. Rail handle and step can be folded back into stowed position as needed.


Note: Do not drive or lift unit while standing on Access Deck.

Note: Always wear safety harness and connect to platform anchor before stepping onto Access Deck.

⚠DANGER Do not operate the scissor once the operator has tied off and is standing on the Access Deck

Installation Instructions

GS-1932 (D), GS-2632, GS-3232

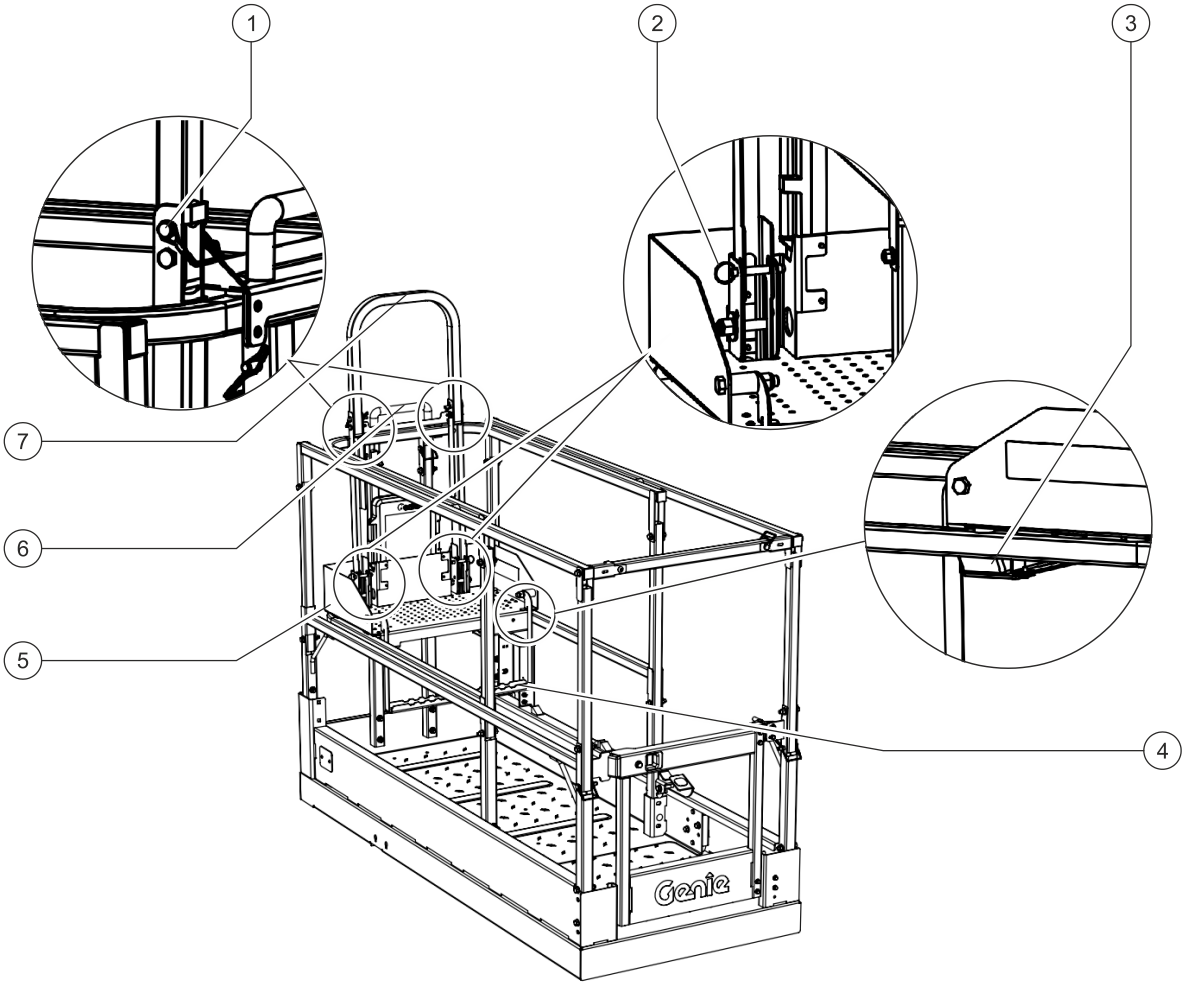


Item	Part No.	Part Description	Qty.
1	1331396GT	Wire lock pin 3/8 x 1.75	2
2	1293655T	Quick release pin 3/8 x 1-7/8	2
3	66544GT	Latch handle	1
4	1291518GT	Step	1
5	1332775GT	Lift Tools Access Deck	1
6	1291802GT	Grab handle	1
7	1291520GT	Rail handle, top	1

Operating Instructions

Lift Tools™ Access Deck for Slab Scissors Operation

1 Verify the Access Deck installation instructions have been followed properly and that the Access Deck and handle are secured with locking pins to the platform railings.

⚠WARNING Tip-over hazard The weight of the Access Deck will reduce the rated platform capacity of the machine and must be factored into the platform load.

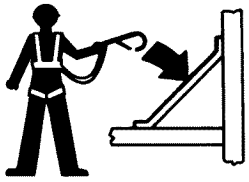

Occupants must wear a safety belt or harness in accordance with governmental regulations. Attach the lanyard to the anchor provided in the platform.



Do not sit, stand, or climb on the platform guard rails and Access Deck toeboard. Maintain a firm footing on the platform or Access Deck floor at all times.

2 Rotate Access Deck step down.

3 Secure the handle in the upper position with both pins.

California Proposition 65

WARNING

Operating, servicing and maintaining this equipment can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. These chemicals can be emitted from or contained in other various parts and systems, fluids and some component wear by-products. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your equipment and vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your equipment or vehicle and after operation. For more information go to www.P65Warnings.ca.gov/passenger-vehicle.

Distributed By: